

**T200**  
**TURBO**

**T200**  
**TURBO**  
**HIGH FLOW**

 


**Bobcat®**

# Service Manual

S/N 518915001 & Above  
S/N 516815001 & Above  
S/N 517515001 & Above

**PDF**  **DOWNLOAD** 

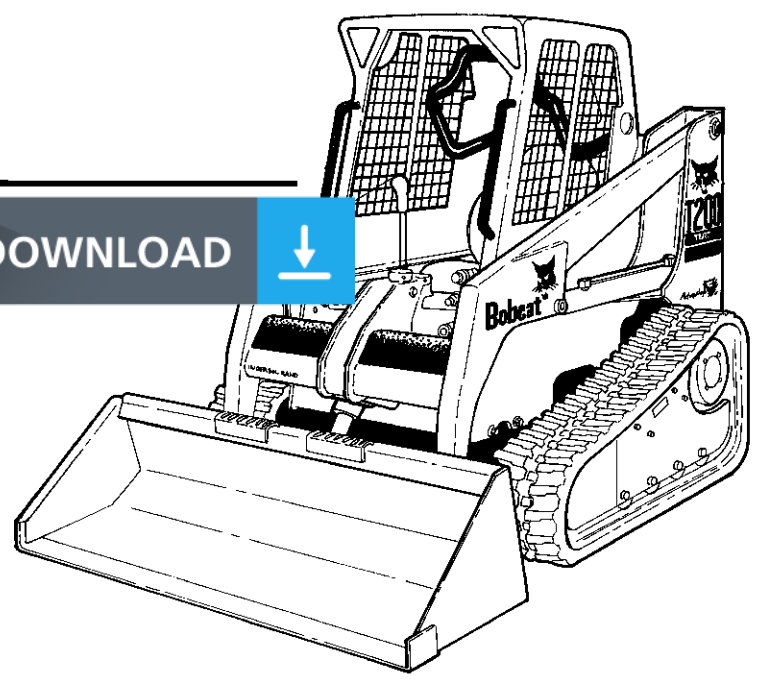

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)



# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0807




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

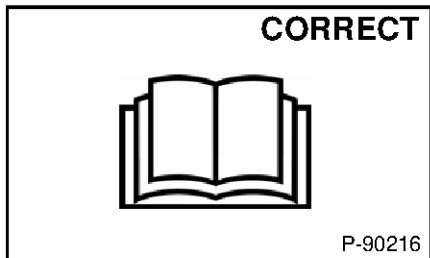


⚠ Never service the Bobcat Compact Track Loader without instructions.

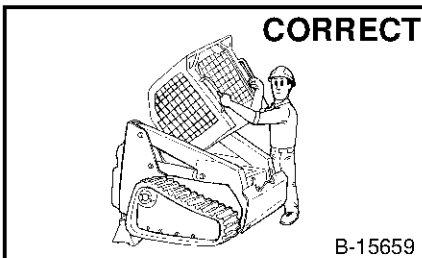

 
⚠ Use the correct procedure to lift or lower operator cab.

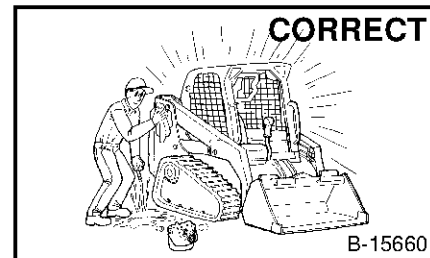

 
⚠ Cleaning and maintenance are required daily.

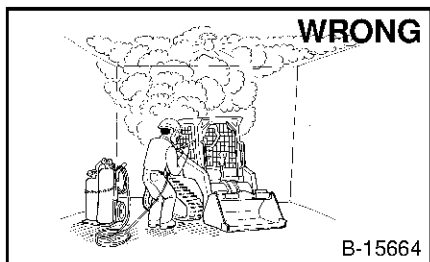


⚠ Have good ventilation when welding or grinding painted parts.  
 ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.  
 ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

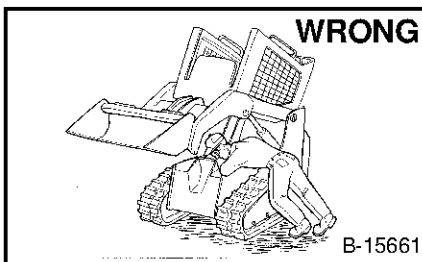


⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

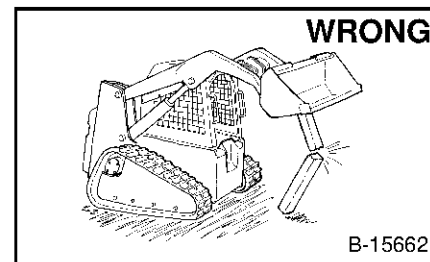

⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.  
 ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

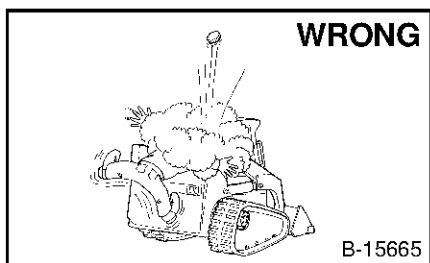

⚠ Stop, cool and clean engine of flammable materials before checking fluids.  
 ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.  
 ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.  
 ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

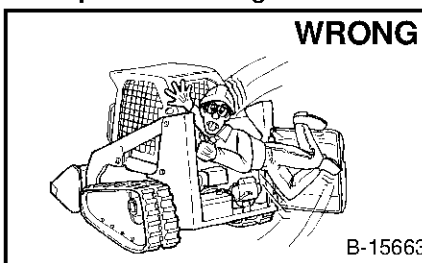

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.  
 ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.  
 ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.



⚠ Lead-acid batteries produce flammable and explosive gases.  
 ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.  
 ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)		FUEL TANK .....	50-01
SELECTABLE HAND / FOOT CONTROL .....	60-01	GENERAL AIR CONDITIONING SERVICE	
ADVANCED CONTROL SYSTEM (ACS)		GUIDELINES .....	80-01
ADVANCED HAND CONTROL .....	60-01	HEATER COIL .....	80-01
AIR CLEANER .....	70-01	HEATER VALVE .....	80-01
AIR CLEANER SERVICE .....	10-01	HEATER / AC FAN .....	80-01
AIR CONDITIONING SERVICE .....	80-01	HYDRAULIC CONTROL VALVE (ADVANCED	
AIR CONDITIONING SYSTEM FLOW .....	80-01	CONTROL SYSTEM) (ACS) .....	20-01
ALTERNATOR (90 AMP) .....	60-01	HYDRAULIC CONNECTION	
		SPECIFICATIONS .....	SPEC-01
BASIC TROUBLESHOOTING .....	80-01	HYDRAULIC CONTROL VALVE (FOOT) .....	20-01
BATTERY .....	60-01	HYDRAULIC FILTER HOUSING .....	20-01
BICS™ SYSTEM .....	60-01	HYDRAULIC FLUID RESERVOIR .....	20-01
BOB-TACH .....	10-01, 50-01	HYDRAULIC PUMP .....	20-01
BOBCAT CONTROLLER .....	60-01	HYDRAULIC PUMP (HI FLOW) .....	20-01
BRAKE .....	40-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
BUCKET POSITION VALVE .....	20-01	HYDRAULIC / HYDROSTATIC FILTER .....	20-01
		HYDRAULIC / HYDROSTATIC FLUID	
CHARGE PRESSURE .....	30-01	SPECIFICATIONS .....	SPEC-01
COMPONENTS .....	80-01	HYDRAULIC / HYDROSTATIC SYSTEM .....	10-01
COMPRESSOR .....	80-01	HYDROSTATIC MOTOR .....	30-01
CONDENSER .....	80-01	HYDROSTATIC PUMP .....	30-01
CONTROL HANDLE (ADVANCED CONTROL		HYDROSTATIC SYSTEM INFORMATION .....	30-01
SYSTEM) (ACS) SELECTABLE HAND / FOOT			
CONTROL .....	50-01	INSTRUMENT PANEL .....	60-01
CONTROL HANDLE (ADVANCED CONTROL		LIFT ARM .....	50-01
SYSTEM) (ACS) ADVANCED HAND CONTROL .....	50-01	LIFT ARM BYPASS CONTROL VALVE .....	20-01
CONTROL PANEL .....	50-01	LIFT ARM SUPPORT DEVICE .....	10-01
CONTROL PEDALS .....	50-01	LIFTING AND BLOCKING THE LOADER .....	10-01
CONTROL PEDALS (ACS) .....	50-01	LIGHTS .....	60-01
CONVERSIONS .....	SPEC-01	LOADER SPECIFICATIONS .....	SPEC-01
COOLING FAN .....	70-01	LOADER TORQUE .....	SPEC-01
CYLINDER (LIFT) .....	20-01	LUBRICATION OF THE BOBCAT LOADER .....	10-01
CYLINDER (POWER BOB-TACH) .....	20-01		
CYLINDER (TILT) .....	20-01	MAIN RELIEF VALVE .....	20-01
		MUFFLER .....	70-01
DIAGNOSTICS .....	60-01		
DRIVE BELT .....	30-01	OIL COOLER .....	30-01
DRIVE COMPONENTS .....	40-01	OPERATOR CAB .....	10-01, 50-01
		OPERATOR SEAT .....	50-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	OPERATOR SEAT (SUSPENSION) .....	50-01
ELECTRICAL / HYDRAULIC CONTROLS			
REFERENCE .....	60-01	POWER BOB-TACH .....	50-01
ENGINE & ENGINE MOUNTS .....	70-01	POWER BOB-TACH (OPTION) .....	10-01
ENGINE COMPONENTS AND TESTING .....	70-01	POWER BOB-TACH BLOCK .....	20-01
ENGINE COOLING SYSTEM .....	10-01	PRESSURE RELIEF VALVE .....	80-01
ENGINE LUBRICATION SYSTEM .....	10-01	PRESSURE SWITCH .....	80-01
ENGINE SPEED CONTROL .....	70-01		
EVAPORATOR .....	80-01		
EVAPORATOR / HEATER UNIT .....	80-01		
EXPANSION VALVE .....	80-01		
FAN GEARBOX .....	10-01		
FLYWHEEL AND HOUSING .....	70-01		
FRONT AUXILIARY PRESSURE RELIEF BLOCK	20-01		
FUEL SYSTEM .....	10-01		



Thank you very much  
for your reading.  
Please click here  
to get more information.