
X320

Excavator

Service Manual

(S/N 511720001 & Above)

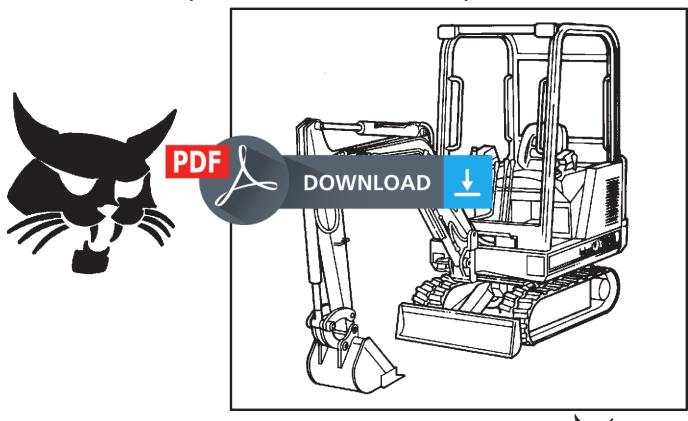






MAINTENANCE SAFETY




Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death. W-2003-0903


Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

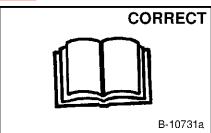


service Never **Bobcat** the Hydraulic Excavator without instructions.

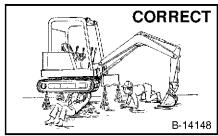

Use the correct procedure to lift and support the excavator. Always lift the blade fully before

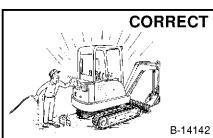


Cleaning and maintenance required daily.

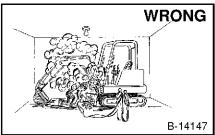

good Have ventilation when welding or grinding painted


Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

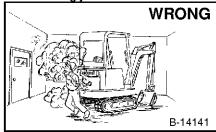

Vent exhaust to outside when engine must be run for service.



Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

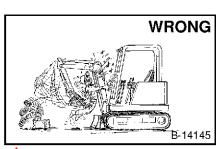

Always lower the bucket and blade to the ground before doing anv maintenance.

Never modify equipment or add attachments not approved by **Bobcat Company.**



Stop, cool and clean engine of flammable materials before checking fluids.

Never service or adjust machine with the engine running unless instructed to do so in the manual.

Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.

Never fill fuel tank with engine running, while smoking or when near open flame.



Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.

Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

Keep rear door closed except for service. Close and latch door before operating the excavator.



Lead-acid batteries produce flammable and explosive gases.

Keep arcs, sparks, flames and lighted tobacco away from batteries.

Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



CONTENTS

SAFETY INSTRUCTIONS	i
SERIAL NUMBER LOCATIONS	
DELIVERY REPORT	
HYDRAULIC EXCAVATOR IDENTIFICATION	
PREVENTIVE MAINTENANCE1-	1
1YDRAULIC	1
DRIVE SECTION	1
JPPER WORKS & SWING SECTION4-	
MAIN FRAME & TRACKS	
ELECTRICAL SYSTEM 6-	
ENGINE SERVICE	
SPECIFICATIONS	1

PREVENTIVE MAINTENANCE

HYDRAULIC SYSTEM

DRIVE SECTION

UPPER WORKS & SWING SECTION

MAIN FRAME & TRACKS

ELECTRICAL SYSTEM

ENGINE SERVICE

SPECIFICATIONS



Thank you very much for your reading.

Please click here to get more information.