





# Bobcat®

## Operation & Maintenance Manual Tree Spade

(TS24T CONV) S/N A9SK00101 & Above  
(TS24T) S/N A9U200101 & Above (Bobcat Only)  
(TS24M CONV) S/N A9SN00101 & Above  
(TS24M) S/N A9U500101 & Above (Bobcat Only)  
(TS24C CONV) S/N A9UW00101 & Above  
(TS24C) S/N A9VC00101 & Above (Bobcat Only)  
(TS28T CONV) S/N A8WG00101 & Above  
(TS28T) S/N A9U800101 & Above (Bobcat Only)  
(TS28M CONV) S/N A9RT00101 & Above  
(TS28M) S/N A9UB00101 & Above (Bobcat Only)  
(TS28C CONV) S/N A9V000101 & Above  
(TS28C) S/N A9VE00101 & Above (Bobcat Only)  
(TS32T CONV) S/N A9TS00101 & Above  
(TS32T) S/N A9UE00101 & Above (Bobcat Only)

(TS32M CONV) S/N A9TV00101 & Above  
(TS32M) S/N A9UH00101 & Above (Bobcat Only)  
(TS32C CONV) S/N A9V300101 & Above  
(TS32C) S/N A9VG00101 & Above (Bobcat Only)  
(TS36T CONV) S/N A9SA00101 & Above  
(TS36T) S/N A9UL00101 & Above (Bobcat Only)  
(TS36M CONV) S/N A9TZ00101 & Above  
(TS36M) S/N A9UP00101 & Above (Bobcat Only)  
(TS36C CONV) S/N A9V600101 & Above  
(TS36C) S/N A9VJ00101 & Above (Bobcat Only)  
(TS44M CONV) S/N A9SG00101 & Above  
(TS44M) S/N A9UT00101 & Above (Bobcat Only)  
(TS44C CONV) S/N A9V900101 & Above  
(TS44C) S/N A9VL00101 & Above (Bobcat Only)

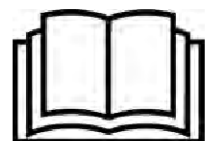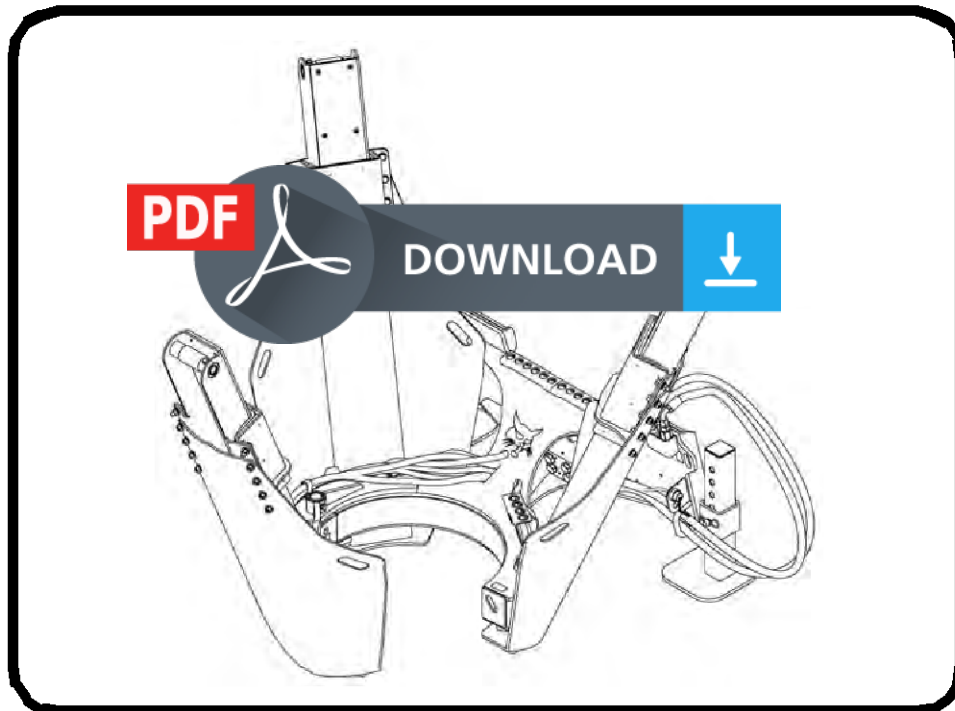



# CONTENTS

FOREWORD .....	3
SAFETY AND TRAINING RESOURCES .....	11
OPERATING INSTRUCTIONS .....	21
PREVENTIVE MAINTENANCE .....	55
MACHINE SIGN TRANSLATIONS .....	65
SPECIFICATIONS .....	71
WARRANTY .....	83
ALPHABETICAL INDEX .....	87

## REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number \_\_\_\_\_

NOTES:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128  
UNITED STATES OF AMERICA

Doosan Benelux SA  
Drève Richelle 167  
B-1410 Waterloo  
BELGIUM



**Bobcat®**

# FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED .....	5
SERIAL NUMBER LOCATION .....	7
Attachment Serial Number .....	7
DELIVERY REPORT .....	7
ATTACHMENT IDENTIFICATION .....	8
3 Blade .....	8
4 Blade .....	9
FEATURES AND ACCESSORIES .....	10
Standard Items .....	10
Options And Accessories .....	10



Thank you very much  
for your reading.  
Please click here  
to get more information.