

**4044M, 4044R,  
4049M, 4049R,  
4052M, 4052R,  
4066M & 4066R  
Compact Utility  
Tractors Diagnostic  
and Repair**

**TECHNICAL MANUAL**

**4044M, 4044R, 4049M, 4049R, 4052M, 4052R, 4066M, 4066R (S.N.  
010001-)**

**TM131019 05OCT15 (ENGLISH)**



**John Deere Agriculture**

## Table of contents

### **FOREWORD**

#### **Section 10 - GENERAL INFORMATION**

- Group 05A - Safety
- Group 05B - General References
- Group 05C - Technical Specific References
- Group 05D - Fuel and Lubricants
- Group 05E - Serial Number Locations

#### **Section 20 - ENGINE REPAIR**

- Group 05 - Engine
- Group 10 - Cooling System

#### **Section 30 - FUEL, AIR INTAKE, AND EXHAUST REPAIR**

- Group 05 - Fuel
- Group 10 - Air Intake
- Group 20 - Exhaust

#### **Section 40 - ELECTRICAL REPAIR**

- Group 05 - Battery, Starter and Alternator
- Group 10 - Electrical System Components
- Group 15 - Wiring Harnesses

#### **Section 50 - TRANSMISSIONS REPAIR**

- Group 05 - Separation
- Group 10 - Power Train—Hydrostatic
- Group 15 - Power Train—Power Reverser

#### **Section 55 - FINAL DRIVE REPAIR**

- Group 05 - MFWD
- Group 10 - Differential
- Group 15 - PTO

#### **Section 60 - STEERING AND BRAKE REPAIR**

- Group 10 - Steering
- Group 15 - Brake

#### **Section 70 - HYDRAULICS REPAIR**

- Group 10 - Hydraulic Pump and Filter
- Group 15 - Rockshaft
- Group 20 - Range Control and Three Point Hitch
- Group 25 - Selective Control Valve

#### **Section 80 - MISCELLANEOUS REPAIR**

- Group 10 - Hood and Side Panels
- Group 15 - Fenders
- Group 20 - Wheels

#### **Section 90 - CAB/OPEN OPERATOR'S STATION REPAIR**

- Group 10 - Seat and Support
- Group 15 - Control Console
- Group 25 - Roll-Gard
- Group 30 - Cab Components
- Group 35 - Open Operator Station Components
- Group 40 - Heating System
- Group 45 - Air Conditioning System
- Group 50 - Temperature Control, Belts, and Blower Motor

#### **Section 211 - DIAGNOSTIC TROUBLE CODES**

- Group 05 - General References
- Group ECU - Engine Control Unit (ECU) Diagnostic Trouble Codes
- Group ICC - Instrument Cluster Control (ICC) Diagnostic Trouble Codes
- Group PTH - Power Train Hydrostatic (PTH) Control Unit Diagnostic Trouble Codes

Group PTR - Power Train Reverser (PTR) Control Unit Diagnostic Trouble Codes

### **Section 212 - OBSERVABLE SYMPTOMS AND SYSTEM DIAGNOSTICS**

Group 05 - General References

Group 20 - Engine Diagnostics

Group 30 - Fuel, Air Intake, Exhaust, and Cooling Diagnostics

Group 40 - Electrical Diagnostics

Group 45 - Electronic Control Unit Diagnostics

Group 50 - Drive Systems and Transmission Diagnostics

Group 60 - Steering and Brakes Diagnostics

Group 70 - Hydraulic Diagnostics

Group 90 - Cab/Open Operator's Station Diagnostics

### **Section 220 - ENGINE OPERATION, TEST, AND ADJUSTMENTS**

Group 05 - General References

Group 10 - Calibrations, Preliminary Checks and Operational Checks

Group 20 - Theory of Operation

Group 50 - Tests and Adjustments

### **Section 230 - FUEL , AIR INTAKE, EXHAUST, AND COOLING OPERATION, TEST, AND ADJUSTMENTS**

Group 05 - General References

Group 10 - Calibrations, Preliminary Checks and Operational Checks

Group 20 - Theory of Operation

Group 40 - Component and Connector Information

Group 50 - Tests and Adjustments

### **Section 240A - ELECTRICAL GENERAL AND THEORY OF OPERATION**

Group 05 - General References

Group 20A - Key Switch, Starter, and Alternator

Group 20B - Accessory Power and Horn

Group 20C - Control Module, Headlights, Signal, Work Lighting, and Warning Lights

Group 20G - Hydraulics, Rockshaft, and Diverter

Group 20J - Heating and Air Conditioning

Group 20K - Cruise Control

Group 20L - Windshield Wiper and Washer

Group 20M - Dome Light, Door Switch, Air Seat, and Radio

Group 20N - Instrument Control Cluster (ICC)

Group 20P - MFWD, Brakes, PTO, and Speed Sensor

Group 20Q - Transmission Control Unit (TCU)

Group 20R - Engine Control Unit (ECU)

### **Section 240B - ELECTRICAL SCHEMATICS**

Group 05 - General References

Group 30A - Electrical Schematics

Group 30B - Circuit Diagrams

### **Section 240C - ELECTRICAL COMPONENTS AND CONNECTORS**

Group 05 - General References

Group 40A - (SE1) Key Switch, Starter, and Alternator

Group 40B - (SE3—SE4) Accessory Power and Horn

Group 40C - (SE5—SE7) Control Module, Headlights, Signal, Work Lighting, and Warning Lights

Group 40D - (SE9) Junction Block Power

Group 40E - (SE10—SE11) Rear Trailer Connector

Group 40F - (SE13) Back-Up Alarm and Beacon Light

Group 40G - (SE14) Hydraulics, Rockshaft, and Diverter

Group 40H - (SE15) Power Port

Group 40I - (SE16—SE17) Heating and Air Conditioning

Group 40J - (SE18) Cruise Control

- Group 40K - (SE19—SE20) Windshield Wiper and Washer
- Group 40L - (SE22—SE23) Dome Light, Door Switch, Air Seat, and Radio
- Group 40M - (SE24) Instrument Control Cluster (ICC)
- Group 40N - (SE25—SE28) MFWD, Brakes, PTO, and Speed Sensor
- Group 40P - (SE29) Transmission Control Unit (TCU)
- Group 40Q - (SE30) Engine Control Unit (ECU)
- Group 40S - (SE32) Controller Area Network
- Group 40T - Fuses and Relays
- Group 40U - Ground Points
- Group 40V - Interconnects

### **Section 240D - ELECTRICAL TESTS AND ADJUSTMENTS**

- Group 05 - General References
- Group 50 - Tests and Adjustments

### **Section 245 - ELECTRONIC CONTROL UNITS**

- Group 05 - General References
- Group 10 - Calibrations, Preliminary Checks and Operational Checks
- Group 20 - Theory of Operation
- Group 40 - Component and Connector Information
- Group 50 - Test and Adjustments
- Group ICC - Instrument Cluster Control (ICC)
- Group ECU - Engine Control Unit (ECU)
- Group PTH - Power Train Hydrostatic (PTH)
- Group PTR - Power Train Reverser (PTR)

### **Section 250 - POWER TRAIN—TRANSMISSION OPERATION, TEST, AND ADJUSTMENTS**

- Group 05A - General References
- Group 10A - Calibrations, Preliminary Checks and Operational Checks—PTH
- Group 10B - Calibrations, Preliminary Checks and Operational Checks—PTR
- Group 20A - Theory of Operation—PTH
- Group 20B - Theory of Operation—PTR
- Group 30A - Schematics—PTH
- Group 30B - Schematics—PTR
- Group 40A - Component and Connector Information—PTH
- Group 40B - Component and Connector Information—PTR
- Group 50A - Tests and Adjustments—PTH
- Group 50B - Tests and Adjustments—PTR

### **Section 255 - FINAL DRIVE OPERATION, TEST, AND ADJUSTMENTS**

- Group 05A - General References
- Group 10 - Calibrations, Preliminary Checks and Operational Checks
- Group 20 - Theory of Operation
- Group 40 - Component and Connector Information
- Group 50 - Tests and Adjustments

### **Section 260 - STEERING AND BRAKES OPERATION, TEST, AND ADJUSTMENTS**

- Group 05A - General References
- Group 10A - Calibrations, Preliminary Checks and Operational Checks—Steering
- Group 10B - Calibrations, Preliminary Checks and Operational Checks—Brakes
- Group 20A - Theory of Operation—Steering
- Group 20B - Theory of Operation—Brakes
- Group 30A - Schematics—Steering
- Group 40A - Component and Connector Information—Steering
- Group 40B - Component and Connector Information—Brakes
- Group 50A - Tests and Adjustments—Steering
- Group 50B - Tests and Adjustments—Brakes

### **Section 270 - HYDRAULICS OPERATION, TEST, AND ADJUSTMENTS**

- Group 05A - General References
- Group 10 - Calibrations, Preliminary Checks and Operational Checks
- Group 20 - Theory of Operation
- Group 30 - Schematics
- Group 40 - Component and Connector Information
- Group 50 - Tests and Adjustments

**Section 290 - CAB/OPEN OPERATORS STATION OPERATION, TEST, AND ADJUSTMENTS**

- Group 05A - General References
- Group 10A - Calibrations, Preliminary Checks and Operational Checks
- Group 20A - HVAC Theory of Operation
- Group 20B - Seat Theory of Operation
- Group 30A - Schematics
- Group 40 - Component and Connector Information
- Group 50 - Tests and Adjustments

**Section 299 - SERVICE TOOLS**

- Group 05A - General References
- Group 05C - Dealer Fabricated and Service Tools



Thank you very much  
for your reading.  
Please click here  
to get more information.