

# 1995-1996 Honda CBR600F3 Motorcycle Service Repair Workshop Manual



PDF



DOWNLOAD




1 9 9 5 - 9 6

**HONDA**

**SERVICE MANUAL**

**CBR600F3**

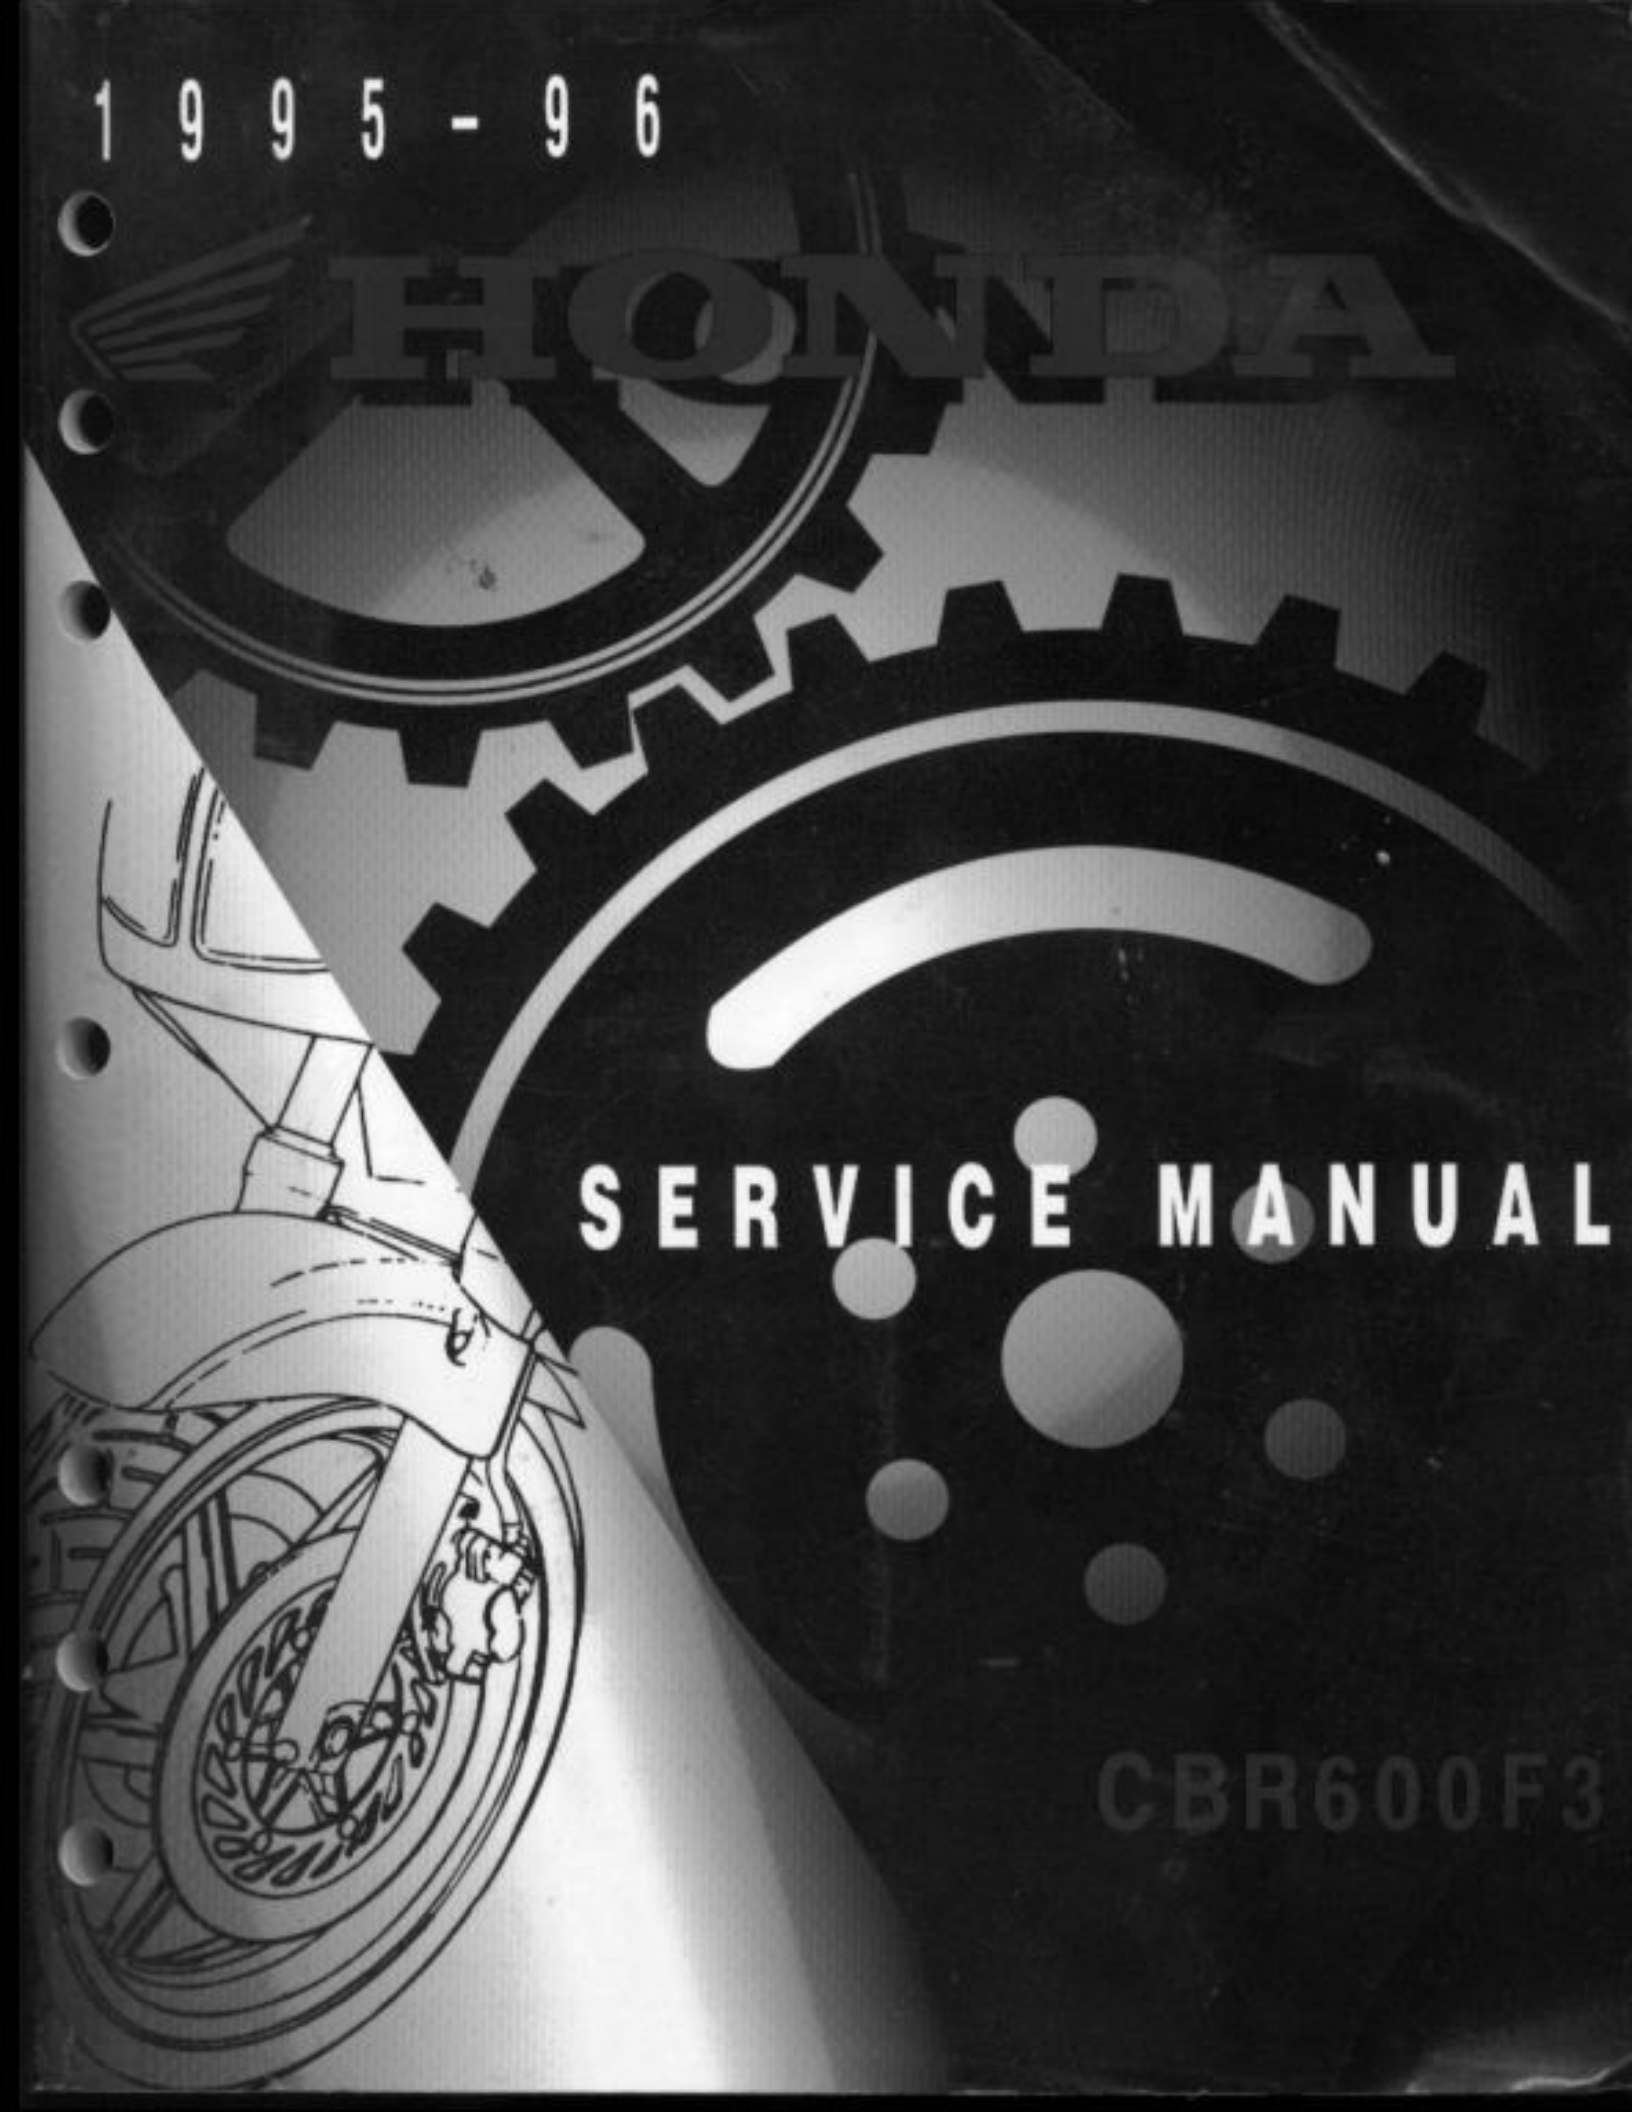

## HOW TO USE THIS MANUAL

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition and the emission levels are within the standards set by the U.S. Environmental Protection Agency and the California Air Resources Board. Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Section 1 and 3 apply to the whole motorcycle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections. Section 4 through 18 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of that section.

Most sections start with an assembly or system illustration, service information, specifications and troubleshooting for the section. The subsequent pages gives detailed procedures.

If you don't know the source of the trouble, go to section 20 Troubleshooting.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASE KNOWLEDGE OF MAINTENANCE ON HONDA MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

HONDA MOTOR CO., LTD.  
SERVICE PUBLICATION OFFICE

## CONTENTS

	<b>GENERAL INFORMATION</b>	<b>1</b>
	<b>FRAME/BODY PANELS/EXHAUST SYSTEM</b>	<b>2</b>
	<b>MAINTENANCE</b>	<b>3</b>
<b>ENGINE AND DRIVE TRAIN</b>	<b>LUBRICATION SYSTEM</b>	<b>4</b>
	<b>FUEL SYSTEM</b>	<b>5</b>
	<b>COOLING SYSTEM</b>	<b>6</b>
	<b>ENGINE REMOVAL/INSTALLATION</b>	<b>7</b>
	<b>CYLINDER HEAD/VALVES</b>	<b>8</b>
	<b>CLUTCH/GEARSHIFT LINKAGE</b>	<b>9</b>
	<b>CRANKCASE/TRANSMISSION</b>	<b>10</b>
	<b>CYLINDER/PISTON/CRANKSHAFT</b>	<b>11</b>
<b>CHASSIS</b>	<b>FRONT WHEEL/SUSPENSION/STEERING</b>	<b>12</b>
	<b>REAR WHEEL/SUSPENSION</b>	<b>13</b>
	<b>HYDRAULIC DISC BRAKE</b>	<b>14</b>
<b>ELECTRICAL</b>	<b>CHARGING SYSTEM/ALTERNATOR</b>	<b>15</b>
	<b>IGNITION SYSTEM</b>	<b>16</b>
	<b>ELECTRIC STARTER/STARTER CLUTCH</b>	<b>17</b>
	<b>LIGHTS/METERS/SWITCHES</b>	<b>18</b>
	<b>WIRING DIAGRAMS</b>	<b>19</b>
	<b>TROUBLESHOOTING</b>	<b>20</b>
	<b>INDEX</b>	<b>21</b>

## FUEL TANK

### REMOVAL/INSTALLATION

**WARNING**

- Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.

Remove the seat (page 2-2).



Turn the fuel valve OFF.

Remove the 6 mm bolt and collar.

Remove the 8 mm bolt and collar.

Lift the fuel tank up.


Disconnect the fuel tube, breather tube and drain tube from the fuel tank, then remove the fuel tank.

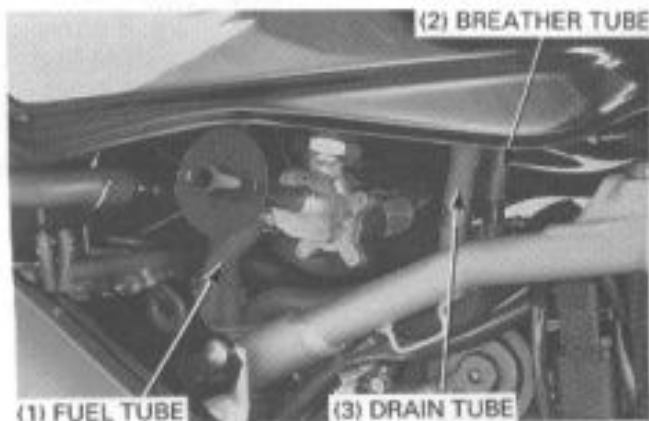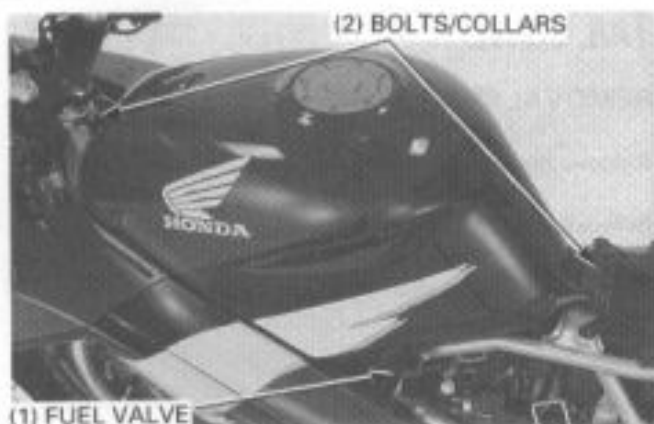

Installation is in the reverse order of removal.

Before installing the fuel tank, make sure the breather tube and drain tube are through the guide as shown.


After installation, turn the fuel valve ON and check the fuel line for leakage.

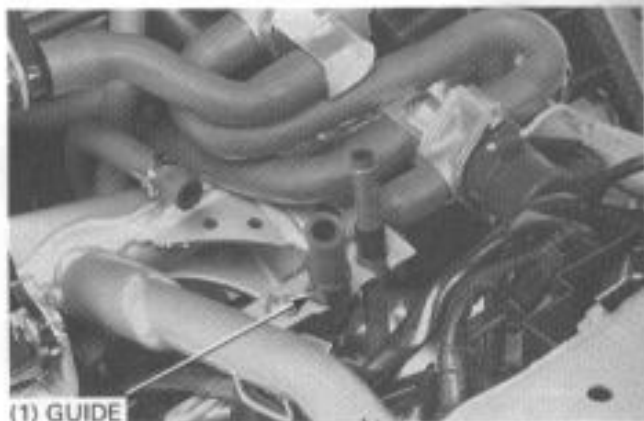

## UPPER FAIRING

### REMOVAL

Remove the screws and rearview mirror inner covers.

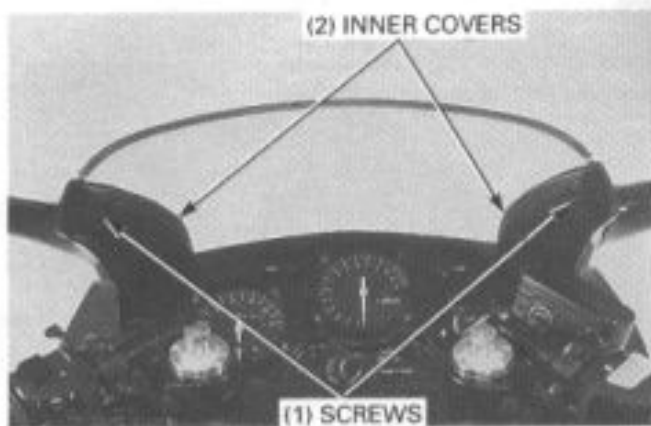



Thank you very much  
for your reading.  
Please click here  
to get more information.