


FORD

Service Manual

100 Series
Implements

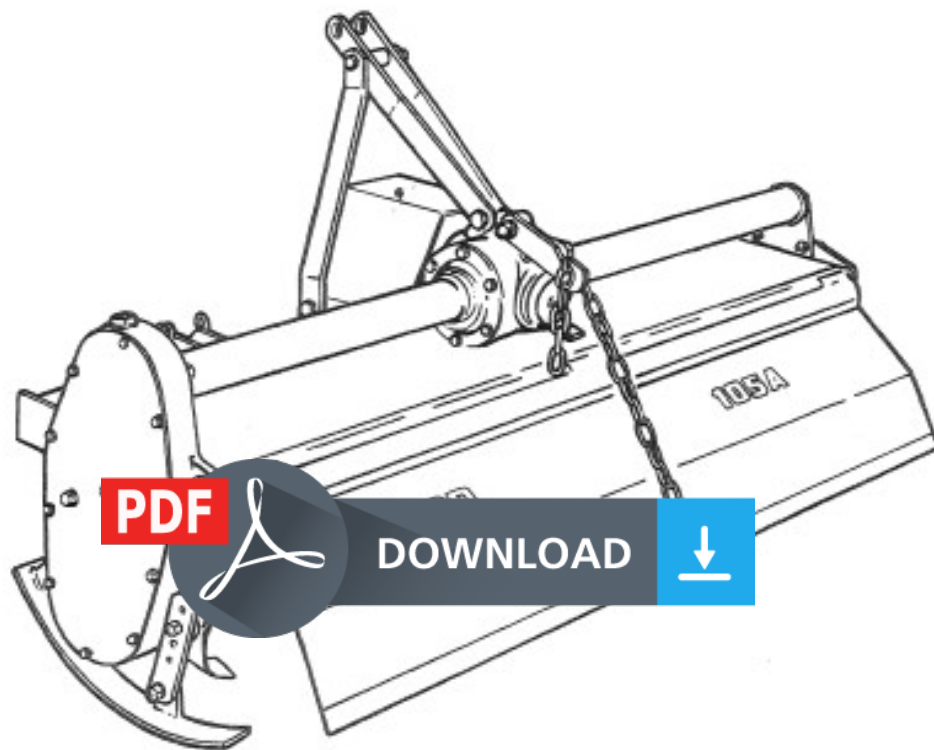

40010090



HONDA
HONDA



XR650R_Y

HOW TO USE THIS MANUAL

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 3 apply to the whole motorcycle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections. Sections 4 through 17 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section.

The subsequent pages give detailed procedure.

If you don't know the source of the trouble, go to section 19, Troubleshooting.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON HONDA MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATION OFFICE

CONTENTS

	GENERAL INFORMATION	1
	FRAME/BODY PANELS/EXHAUST SYSTEM	2
	MAINTENANCE	3
ENGINE AND DRIVE TRAIN	LUBRICATION SYSTEM	4
	FUEL SYSTEM	5
	COOLING SYSTEM	6
	ENGINE REMOVAL/INSTALLATION	7
	CYLINDER HEAD/VALVES	8
	CYLINDER/PISTON	9
	CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE	10
	ALTERNATOR	11
	CRANKCASE/CRANKSHAFT/BALANCER	12
	TRANSMISSION	13
CHASSIS	FRONT WHEEL/SUSPENSION/STEERING	14
	REAR WHEEL/SUSPENSION	15
	HYDRAULIC BRAKE	16
ELECTRICAL	ELECTRICAL SYSTEM	17
	WIRING DIAGRAMS	18
	TROUBLESHOOTING	19


Loosen the muffler clamp bolt.



Loosen the carburetor connecting tube band screw.



Remove the left lower sub-frame mounting bolt and upper chain slider.

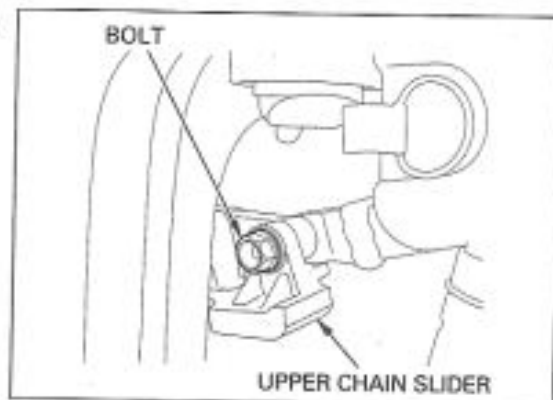

Remove the upper and lower sub-frame mounting bolts, and then remove the sub-frame.





Thank you very much
for your reading.
Please click here
to get more information.