

KOBELCO

OPERATOR'S MANUAL

HYDRAULIC EXCAVATOR

SK27SR-

PDF



DOWNLOAD



SK27SR-3 PV10-27001-

Issued 07-2004

S2PV00014ZE-01 NA


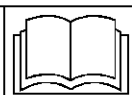
KOBELCO[®]

**SK27SR-3
HYDRAULIC EXCAVATOR**

OPERATOR'S MANUAL

APPLICABLE

SK27SR-3 PV10-27001~

		READ, UNDERSTAND, AND FOLLOW ALL SAFETY PRECAUTIONS AND INSTRUCTIONS FOUND IN THIS MANUAL BEFORE OPERATING THE MACHINE.
---	---	--

Bur • Issued 07-2004

Printed in U.S.A. • Book/Form Number S2PV00014ZE-01 NA

Copyright © 2005. Kobelco Construction Machinery America, LLC. All Rights Reserved.

Kobelco Construction Machinery America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer.

Revision History			
Issue	Issue Date	Applicable Machines	Remarks
First Edition	Not Available	SK27SR-3	S2PV00014ZE-00
First Revision	07-2004	SK27SR-3	S2PV00014ZE-01

FOREWORD

GENERAL..... 0-1
PERIODIC INSPECTIONS 0-1
NOTICE..... 0-1
FOR ORDERING 0-2

1. SAFETY PRECAUTIONS

1.1 GENERAL SAFETY INFORMATION 1-3
1.2 SAFETY PRECAUTIONS..... 1-4
1.3 PRE-START SAFETY 1-6
1.4 SAFETY DURING OPERATION 1-12
1.5 INSPECTION & MAINTENANCE SAFETY 1-20
1.6 BATTERY SAFETY 1-28
1.7 WARNING LABELS & DECALS 1-30
 1.7.1 NOTICE FOR WARNING LABELS & DECALS..... 1-30
 1.7.2 LOCATION OF WARNING LABELS & DECALS..... 1-30
1.8 PROHIBITED MACHINE OPERATION 1-40
1.9 END OF WORK SHIFT SAFETY 1-43
1.10 TRANSPORTATION 1-44
1.11 TOWING THE MACHINE 1-46

2. MACHINE FAMILIARIZATION

2.1 FAMILIARIZATION..... 2-3
2.2 GENERAL MACHINE NOMENCLATURE..... 2-3
2.3 OPERATOR CAB NOMENCLATURE..... 2-4
2.4 COMPONENT & CONTROLS NOMENCLATURE..... 2-6
 2.4.1 MONITOR PANEL (GAUGE CLUSTER)..... 2-6
 2.4.2 SWITCHES..... 2-9
 2.4.3 LEVERS AND PEDALS 2-13
 2.4.4 SEAT BELT 2-16
 2.4.5 CAB (OPTION) 2-17
 2.4.6 GUARD WITH LOCKING DEVICE & COVERS 2-19
 2.4.7 SEAT ADJUSTMENT 2-20
 2.4.8 ELECTRICAL EQUIPMENT 2-20
 2.4.9 STORAGE & OTHERS..... 2-22
2.5 ROTARY MULTI CONTROL VALVE..... 2-24

3. MACHINE OPERATION

3.1	BASIC MACHINE OPERATION	3-3
3.1.1	PRE-START INSPECTION	3-3
3.1.2	INSPECTION BEFORE OPERATION.....	3-4
3.1.3	CONFIRMATION BEFORE STARTING MACHINE ENGINE	3-9
3.1.4	STARTING AND STOPPING MACHINE ENGINE.....	3-10
3.1.5	STOPPING MACHINE ENGINE.....	3-14
3.1.6	INSPECTION AFTER STARTING MACHINE ENGINE	3-14
3.1.7	MACHINE WARM-UP	3-17
3.1.8	MACHINE OPERATION.....	3-18
3.1.9	PRACTICES TO IMPROVE EFFICIENCY	3-25
3.1.10	MACHINE PARKING	3-29
3.1.11	CHECK & CONFIRMATION AFTER WORK.....	3-30
3.1.12	PRECAUTIONS AFTER OPERATION.....	3-30
3.1.13	MEASURES AFTER EMERGENCY STOP.....	3-30
3.1.14	LOCKING UP WITH KEY	3-32
3.1.15	EMERGENCY MEASURES AGAINST SUDDEN FAILURE OF MACHINE	3-32
3.1.16	CAUTION ON USING RUBBER CRAWLER SHOES	3-38
3.1.17	MACHINE OPERATION IN ADVERSE WEATHER CONDITIONS	3-42
3.1.18	PRECAUTIONS WHEN STORING THE MACHINE FOR A LONG PERIOD ...	3-44

4. MAINTENANCE

4.1	GENERAL INFORMATION	4-3
4.2	GENERAL SAFETY & PRECAUTIONS	4-4
4.3	LUBRICANT, FUEL & COOLANT SPECIFICATIONS	4-10
4.4	CONSUMPTION PARTS	4-11
4.5	ACCESSORY TOOLS.....	4-12
4.6	TORQUE SPECIFICATIONS FOR CAPSCREWS & NUTS	4-13
4.7	TORQUE SPECIFICATIONS FOR JOINTS & HYDRAULIC HOSES	4-14
4.8	INSTALLING HYDRAULIC HOSE AND PIPE JOINT	4-15
4.9	RELEASING INTERNAL PRESSURE OF HYDRAULIC SYSTEM.....	4-17
4.10	BLEEDING AIR IN FUEL SYSTEM	4-19
4.11	REPLACEMENT OF RUBBER CRAWLER SHOE	4-20
4.11.1	REMOVAL OF RUBBER CRAWLER SHOE.....	4-20
4.11.2	INSTALLING RUBBER CRAWLER SHOE	4-21
4.11.3	CHECK AND ADJUSTMENT OF TENSION ON RUBBER CRAWLER SHOE	4-22
4.12	INSPECTION & MAINTENANCE CHART	4-26
4.13	WHEN REQUIRED	4-29



Thank you very much
for your reading.
Please click here
to get more information.