





# Bobcat®

---

## Operation & Maintenance Manual Grader

---

(Grader 96) S/N ACW900101 & Above  
(Grader 108) S/N AJ2E00101 & Above

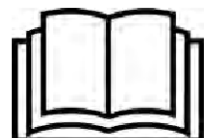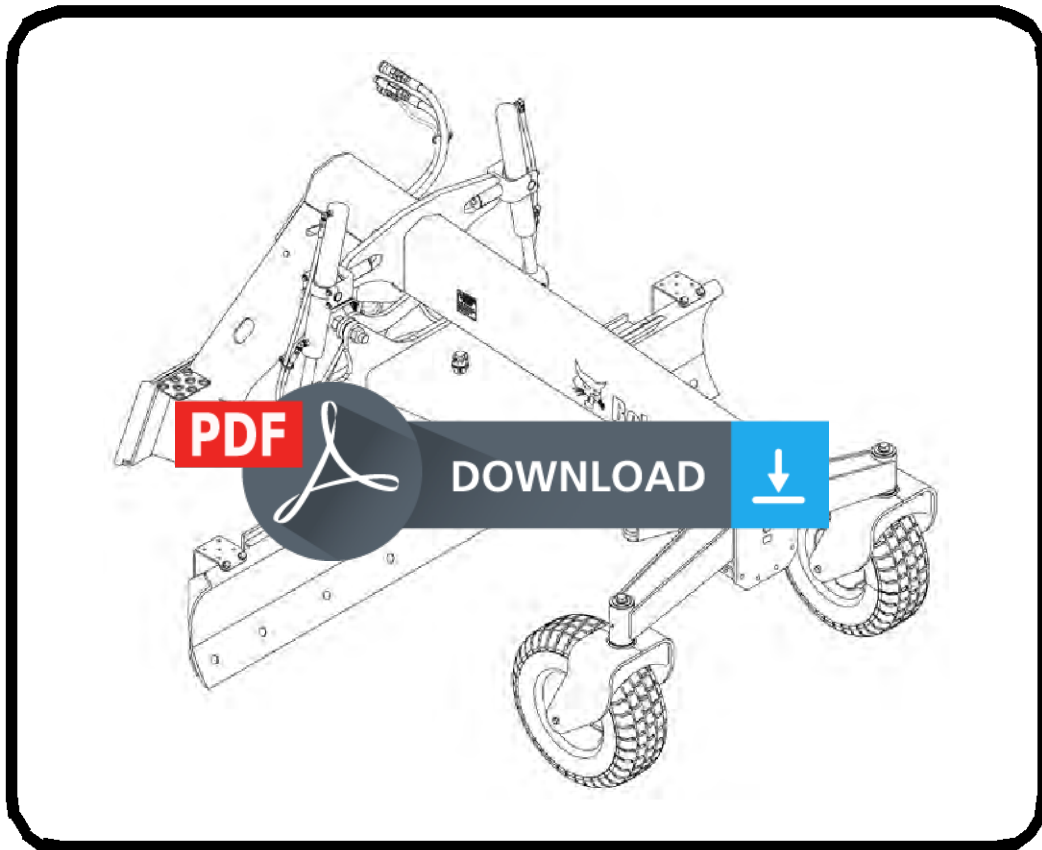



# CONTENTS

CONTENTS .....	1
FOREWORD .....	3
SAFETY AND TRAINING RESOURCES .....	11
OPERATING INSTRUCTIONS .....	19
PREVENTIVE MAINTENANCE .....	71
MACHINE SIGN TRANSLATIONS .....	91
SPECIFICATIONS .....	95
WARRANTY .....	101
ALPHABETICAL INDEX .....	105

## REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number \_\_\_\_\_

NOTES:

---

---

---

---

---

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128  
UNITED STATES OF AMERICA

Doosan Benelux SA  
Drève Richelle 167  
B-1410 Waterloo  
BELGIUM



**Bobcat®**

# FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED .....	5
SERIAL NUMBER LOCATION .....	7
Attachment Serial Number .....	7
DELIVERY REPORT .....	7
ATTACHMENT IDENTIFICATION .....	8
FEATURES AND ACCESSORIES .....	9
Standard Items .....	9
Options And Accessories .....	9



Thank you very much  
for your reading.  
Please click here  
to get more information.