




Bobcat®

Operation & Maintenance Manual Industrial Grapple

(60 in.) S/N 659900101 & Above
(66 in.) S/N 477000101 & Above
(66 in.) S/N 425500101 & Above
(68 in.) S/N 775100101 & Above

(72 in.) S/N 456100101 & Above
(78 in.) S/N 775200101 & Above
(80 in.) S/N 232200101 & Above

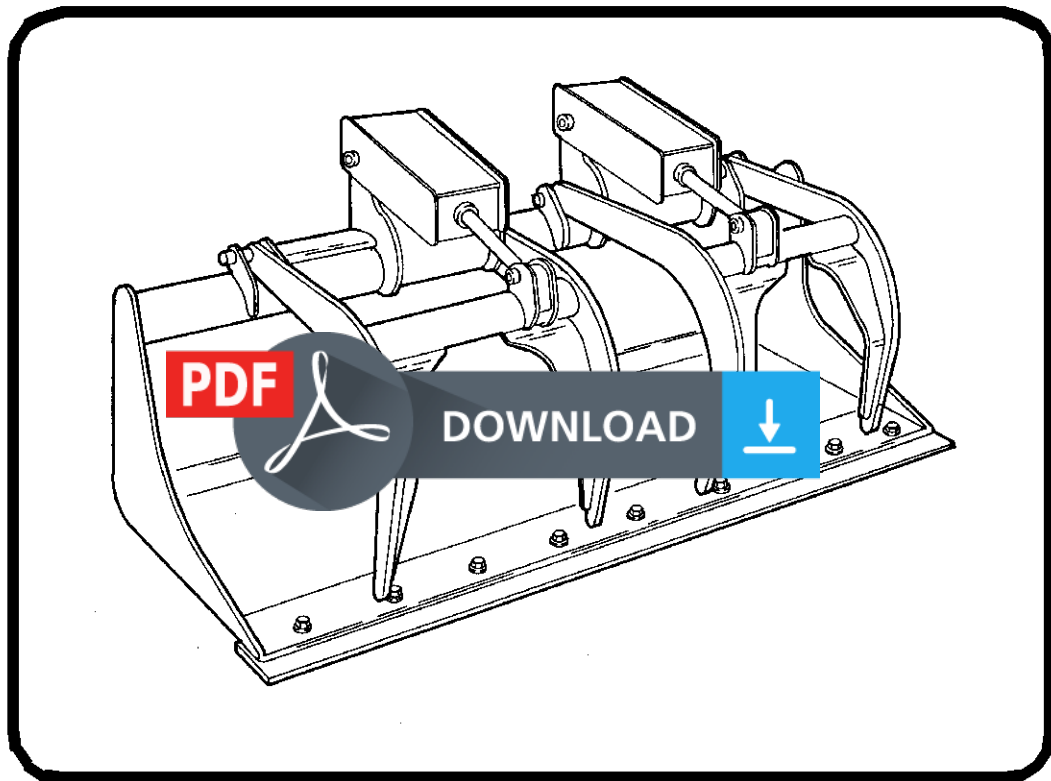

CONTENTS

FOREWORD..... V
SAFETY & TRAINING RESOURCES.....XIII
OPERATING INSTRUCTIONS OI-1
PREVENTIVE MAINTENANCE PM-1
SPECIFICATIONS..... SPEC-1
WARRANTY WARRANTY-1
ALPHABETICAL INDEX INDEX

REFERENCE INFORMATION

Write the correct information for YOUR industrial grapple in the spaces below. Always use these numbers when referring to your industrial grapple.

Industrial Grapple Serial Number

NOTES:

YOUR BOBCAT® DEALER:

ADDRESS:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium

FOREWORD

**SAFETY &
TRAINING
RESOURCES**

**OPERATING
INSTRUCTIONS**

**PREVENTIVE
MAINTENANCE**

SPECIFICATIONS

WARRANTY

**ALPHABETICAL
INDEX**



FOREWORD

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the industrial grapple. **READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR industrial grapple.** If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED	VII
DELIVERY REPORT	IX
FEATURES AND ACCESSORIES	XI
Standard Items	XI
IDENTIFICATION AND MACHINE SIGNS (DECALS)	X
SERIAL NUMBER LOCATION	IX
Attachment Serial Number	IX



Thank you very much
for your reading.
Please click here
to get more information.