



Bobcat®

Operation & Maintenance Manual Industrial and Root Grapple

Industrial Bucket Grapple



(GRPL 62 INDL BKT) S/N AF0S00101 & Above
(GRPL 68 INDL BKT) S/N AF0R00101 & Above
(GRPL 74 INDL BKT) S/N AF0H00101 & Above
(GRPL 80 INDL BKT) S/N AF0P00101 & Above

Industrial Fork Grapple

(GRPL 66 INDL FORK) S/N AF0U00101 & Above
(GRPL 78 INDL FORK) S/N AEDF00101 & Above

Root Grapple

(GRAPPLE 66 ROOT) S/N AF0T00101 & Above
(GRAPPLE 72 ROOT) S/N AE6H00101 & Above
(GRAPPLE 82 ROOT) S/N AF0N00101 & Above

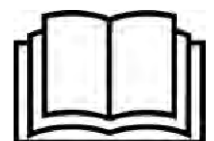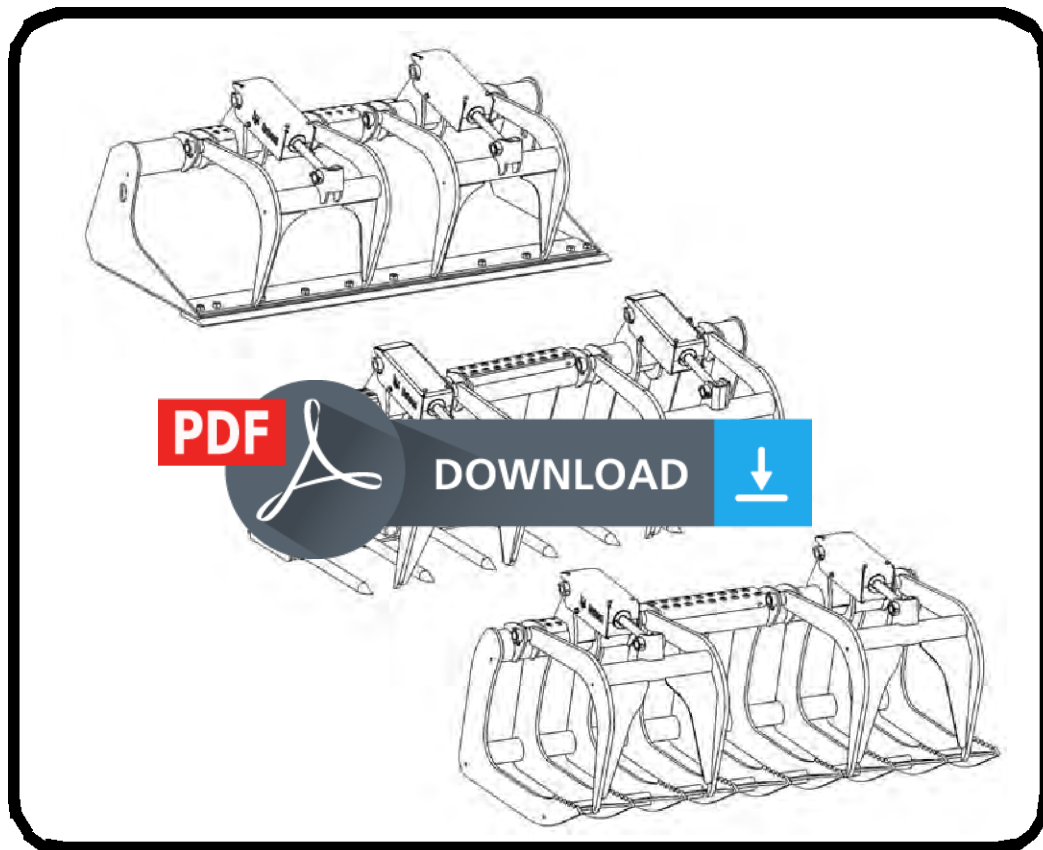

CONTENTS

FOREWORD	3
SAFETY AND TRAINING RESOURCES	11
OPERATING INSTRUCTIONS	19
PREVENTIVE MAINTENANCE	91
SPECIFICATIONS	113
WARRANTY	121
ALPHABETICAL INDEX	125

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Bobcat Engineering s.r.o.
U Kodetky 1978
26312 Dobris
CZECH REPUBLIC



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	6
Attachment Serial Number	6
DELIVERY REPORT	6
ATTACHMENT IDENTIFICATION	7
Industrial Bucket Grapple	7
Industrial Fork Grapple	8
Root Grapple	9
FEATURES AND ACCESSORIES	10
Standard Items	10
Options And Accessories	10
Special Applications Kit For Loaders	10



Thank you very much
for your reading.
Please click here
to get more information.