


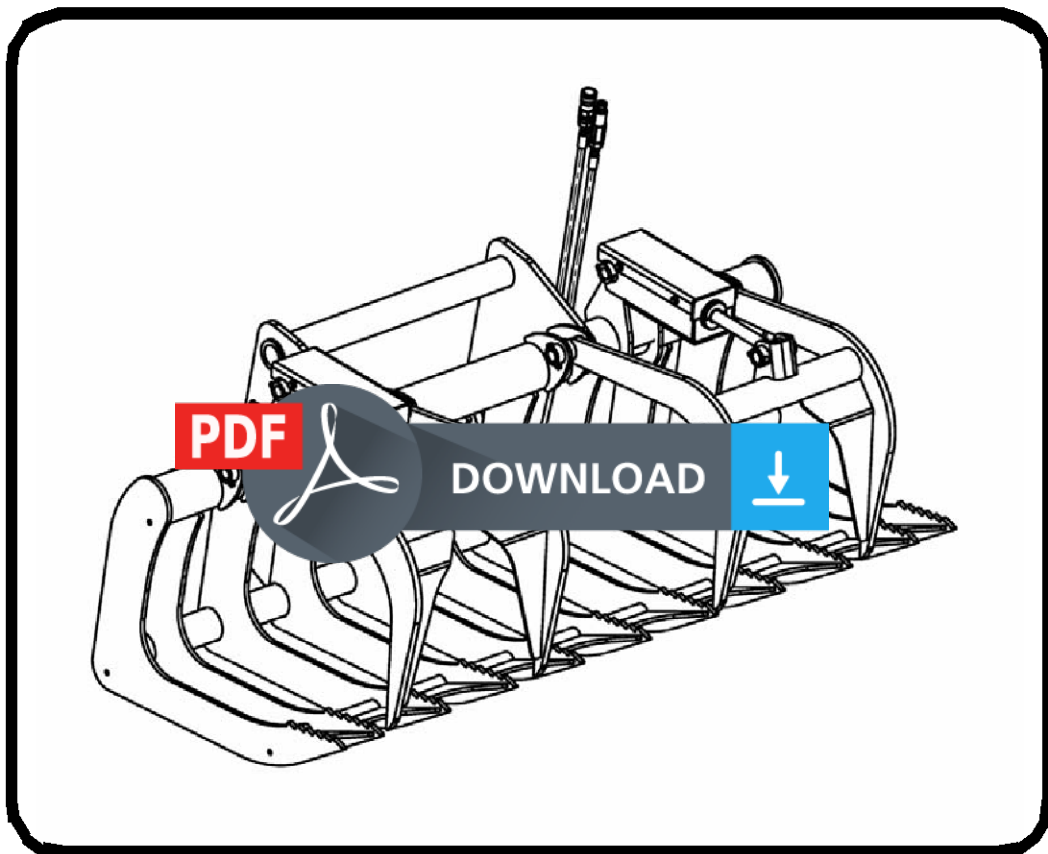

Bobcat®

Operation & Maintenance Manual Root Grapple

(82 V/H ROOT GRPL) S/N AJ5E00101 & Above



CONTENTS

FOREWORD3

SAFETY & TRAINING RESOURCES11

OPERATING INSTRUCTIONS19

PREVENTIVE MAINTENANCE39

SPECIFICATIONS59

WARRANTY69

ALPHABETICAL INDEX73

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	7
Attachment Serial Number	7
DELIVERY REPORT	7
ATTACHMENT IDENTIFICATION	8
Root Grapple	8
FEATURES AND ACCESSORIES	9
Standard Items	9



Thank you very much
for your reading.
Please click here
to get more information.