



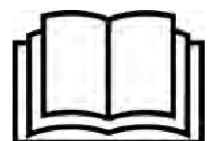

Bobcat®

Operation & Maintenance Manual Root / Industrial Grapple

(36 Root Grapple) S/N A67800101 & Above
(48 Root Grapple) S/N A87D00101 & Above
(36 Ind Grapple) S/N A6S100101 & Above
(48 Ind Grapple) S/N A87900101 & Above

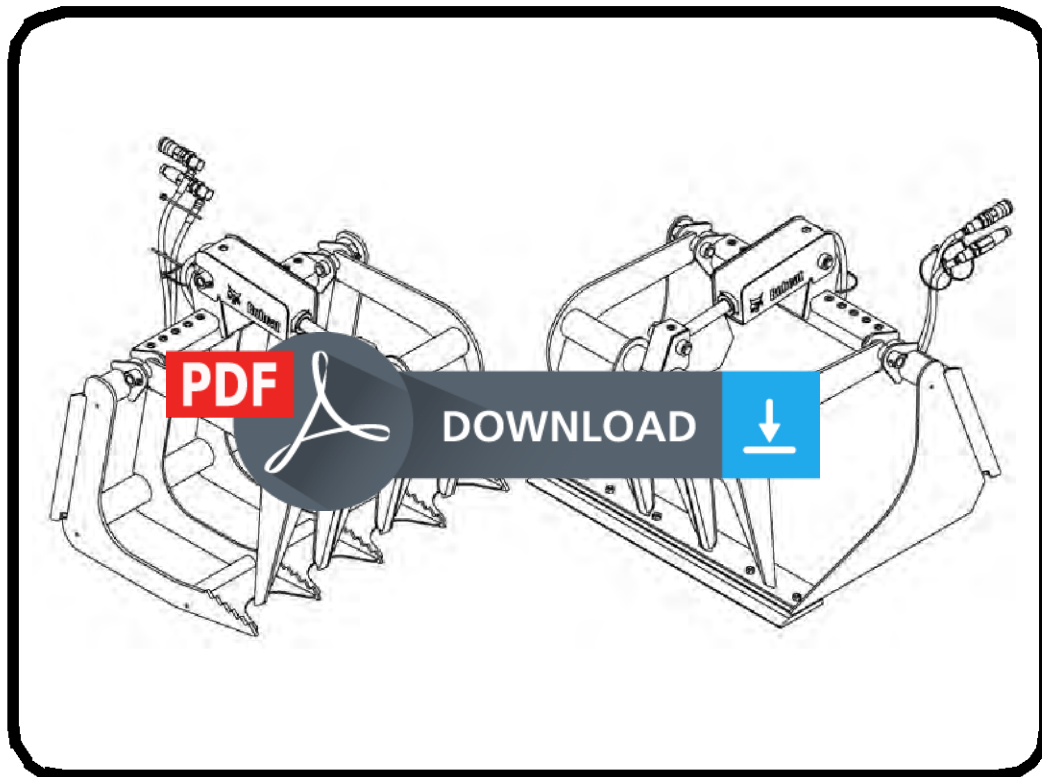

CONTENTS

FOREWORD3
SAFETY AND TRAINING RESOURCES9
OPERATING INSTRUCTIONS17
PREVENTIVE MAINTENANCE53
SPECIFICATIONS73
WARRANTY79
ALPHABETICAL INDEX83

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	6
Attachment Serial Number	6
DELIVERY REPORT	6
ATTACHMENT IDENTIFICATION	7
FEATURES AND ACCESSORIES	8
Standard Items	8



Thank you very much
for your reading.
Please click here
to get more information.