
 


Operation & Maintenance Manual Rotating Grapple

(Model 30) S/N 775400101 & Above (Model 30) S/N 775700101 & Above (Model 40) S/N 775300101 & Above (Model 40) S/N 775600101 & Above

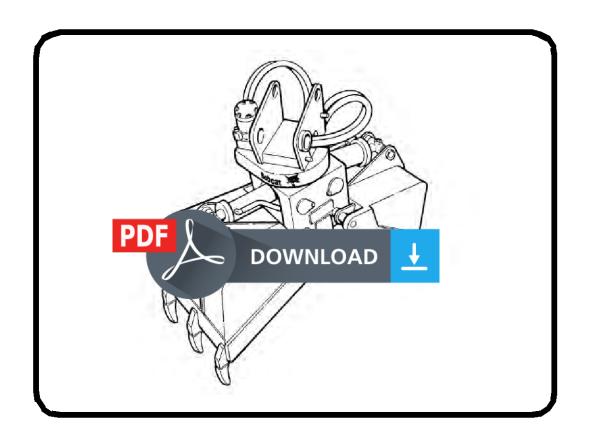



CONTENTS

FOREWORD	
SAFETY & TRAINING RESOURCES	
OPERATING INSTRUCTIONS	19
PREVENTIVE MAINTENANCE	
SPECIFICATIONS	51
WARRANTY	57
ALPHABETICAL INDEX	
REFERENCE INFORMATION	
Write the correct information for YOUR Bobcat attreferring to your Bobcat attachment.	tachment in the spaces below. Always use these numbers when
Attachment Serial Number	
NOTES:	
YOUR BOBCAT DEALER:	
ADDRESS:	
PHONE:	
Bobcat Company	Doosan Benelux SA Drève Richelle 167

Bobcat Company P.O. Box 128 Gwinner, ND 58040-0128 UNITED STATES OF AMERICA Doosan Benelux SA Drève Richelle 167 B-1410 Waterloo BELGIUM



FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	. 5
SERIAL NUMBER LOCATION	
DELIVERY REPORT	. 7
ATTACHMENT IDENTIFICATION	. 8
FEATURES AND ACCESSORIES	.9
Special Applications Kit Inspection And Maintenance	. 9



Thank you very much for your reading.

Please click here to get more information.