



Service Manual

Fastrac

3170, 3170 Plus
3190, 3190 Plus
3200, 3200 Plus
3220, 3220 Plus
3230, 3230

PDF



DOWNLOAD



Published by the
TECHNICAL PUBLICATIONS DEPARTMENT
of
JCB SERVICE LTD;
World Parts Centre,
Waterloo Park
Uttoxeter, Staffordshire
ST14 7BS

Publication No. 9803/8030
Issue 9

| | |
|---------------------|---|
| General Information | 1 |
| Care & Safety | 2 |
| Routine Maintenance | 3 |
| Optional Equipment | A |
| Body & Framework | B |
| Electrics | C |
| Controls | D |
| Hydraulics | E |
| Transmission | F |
| Brakes | G |
| Steering | H |
| Suspension | S |
| Engine | T |

Introduction

This publication is designed for the benefit of JCB Distributor Service Engineers who are receiving, or have received, training by JCB Technical Training Department.

These personnel should have a sound knowledge of workshop practice, safety procedures, and general techniques associated with the maintenance and repair of hydraulic earthmoving equipment.

Renewal of oil seals, gaskets, etc., and any component showing obvious signs of wear or damage is expected as a matter of course. It is expected that components will be cleaned and lubricated where appropriate, and that any opened hose or pipe connections will be blanked to prevent excessive loss of hydraulic fluid and ingress of dirt. Finally, please remember above all else

SAFETY MUST COME FIRST!

The manual is compiled in sections, the first three are numbered and contain information as follows:

- 1 = General Information** - includes torque settings and service tools.
- 2 = Care & Safety** - includes warnings and cautions pertinent to aspects of workshop procedures etc.
- 3 = Routine Maintenance** - includes service schedules and recommended lubricants for the whole machine.

The remaining sections are alphabetically coded and deal with Dismantling, Overhaul etc. of specific components, for example:

- A = Optional Equipment**
- B = Body & Framework ...etc**

The page numbering in each alphabetically coded section is not continuous. This allows for the insertion of new items in later issues of the manual.

Section contents, technical data, circuit descriptions, operation descriptions etc. are inserted at the beginning of each alphabetically coded section.

All sections are listed on the front cover; tabbed divider cards align directly with individual sections on the front cover for rapid reference.

Page cross references are generally made by presenting the subject title printed in bold, followed by the title of the section containing the subject. For example:

“**24** If the axle is still on the machine, fit the brake calipers (see **Brake Caliper Removal and Replacement**, Section G).”

Note: If only the subject title in bold is given, i.e. no section title, the cross reference is to another part of the same section.

Use the contents list at the beginning of each section to find the exact page number.

Where a torque setting is given as a single figure it may be varied by plus or minus 3%. Torque figures indicated are for dry threads, hence for lubricated threads may be reduced by one third.

‘Left Hand’ and ‘Right Hand’ are as viewed from the rear of the machine facing forwards.



Thank you very much
for your reading.
Please click here
to get more information.