

T250

TURBO

T250

TURBO

HIGH FLOW



Bobcat®

Service Manual

S/N 523111001 & Above
S/N 523011001 & Above


PDF



DOWNLOAD



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of its service marks, logos, or other proprietary identifying marks in this manual is historical or non-affiliative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

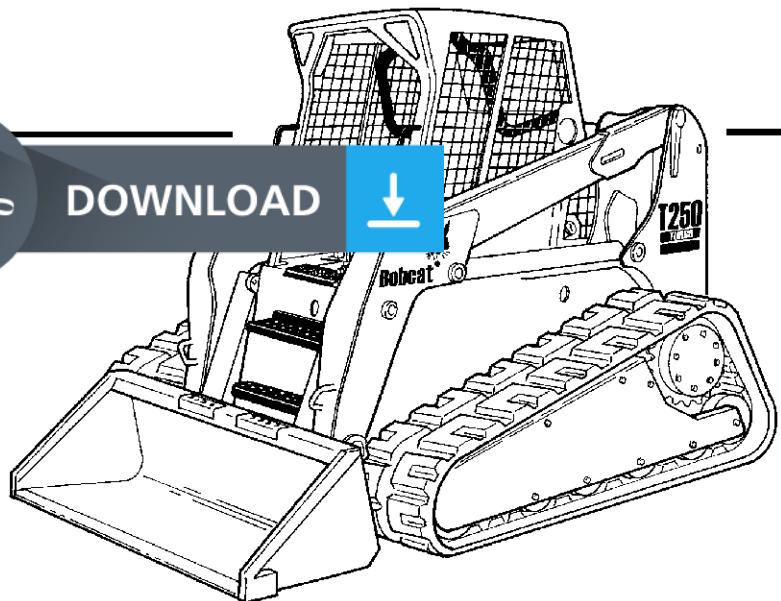

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6902451 (10-12)

Printed in U.S.A.

© Bobcat Company 2006

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

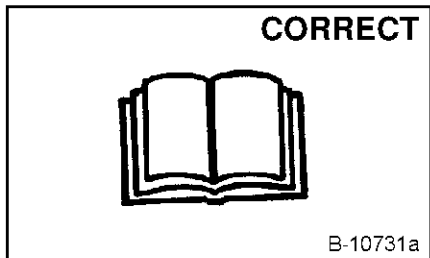


⚠ Never service the Bobcat Compact Track Loader without instructions.

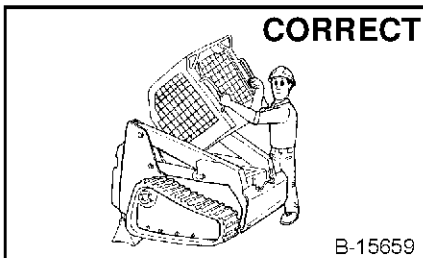

 
⚠ Use the correct procedure to lift or lower operator cab.

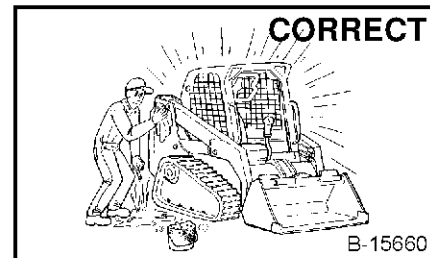

 
⚠ Cleaning and maintenance are required daily.

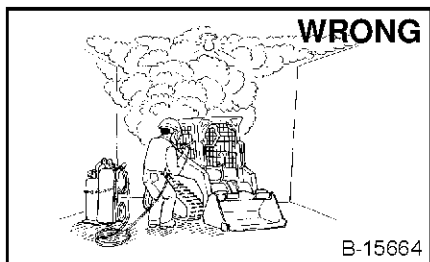


⚠ Have good ventilation when welding or grinding painted parts.
 ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
 ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

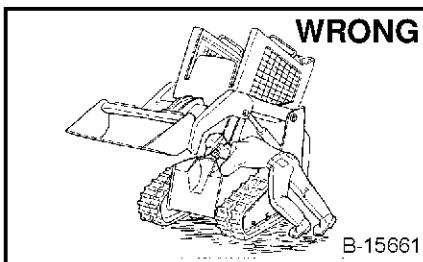


⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

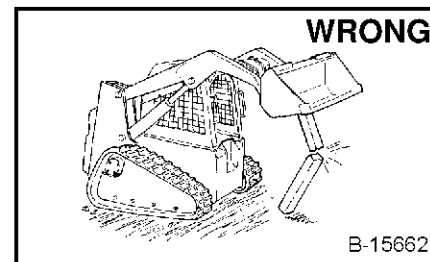

⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
 ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

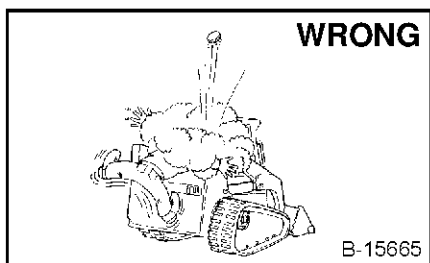

⚠ Stop, cool and clean engine of flammable materials before checking fluids.
 ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
 ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
 ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

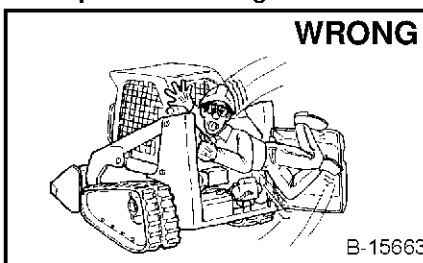

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
 ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
 ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.



⚠ Lead-acid batteries produce flammable and explosive gases.
 ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
 ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS).....	60-01	GENERAL AIR CONDITIONING SERVICE	
AIR CLEANER	70-01	GUIDELINES.....	80-01
AIR CLEANER SERVICE	10-01	HEATER COIL.....	80-01
AIR CONDITIONING SERVICE	80-01	HEATER VALVE	80-01
AIR CONDITIONING SYSTEM FLOW	80-01	HYDRAULIC CONNECTION SPECS	SPEC-01
ALTERNATOR.....	60-01	HYDRAULIC CONTROL VALVE	
		(ADVANCED CONTROL SYSTEM) (ACS).....	20-01
BASIC TROUBLESHOOTING	80-01	HYDRAULIC CONTROL VALVE	
BATTERY	60-01	(FOOT CONTROL).....	20-01
BICS™ SYSTEM	60-01	HYDRAULIC FLUID RESERVOIR	20-01
BLOWER FAN	80-01	HYDRAULIC/HYDROSTATIC	
BOBCAT CONTROLLERS	60-01	FLUID SPECIFICATIONS	SPEC-01
BOB-TACH	10-01, 50-01	HYDRAULIC/HYDROSTATIC FILTER.....	20-01
BRAKE.....	40-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
BUCKET POSITION VALVE	20-01	HYDRAULIC PUMP	20-01
		HYDRAULIC PUMP (CHARGE).....	20-01
CHARGE PRESSURE SENDER.....	30-01	HYDRAULIC PUMP (HI FLOW).....	20-01
COMPONENTS	80-01	HYDRAULIC SYSTEM INFORMATION.....	20-01
COMPRESSOR	80-01	HYDROSTATIC MOTOR	30-01
CONDENSER	80-01	HYDROSTATIC PUMP	30-01
CONTROL HANDLE.....	50-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)			
(ACS) SELECTABLE HAND/FOOT CONTROL ...	50-01	INSIDE ACCESS PANEL	50-01
CONTROL PANEL.....	50-01	INSTRUMENT PANEL	60-01
CONTROL PEDALS	50-01		
CONTROL PEDALS (ACS)	50-01	LIFT ARMS.....	50-01
CONVERSIONS	SPEC-01	LIFT ARM BY-PASS CONTROL VALVE	20-01
COOLING FAN	70-01	LIFT ARM SUPPORT DEVICE	10-01
CYLINDER (LIFT).....	20-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CYLINDER (POWER BOB-TACH)	20-01	LIGHTS	60-01
CYLINDER (TILT)	20-01	LOADER SPECIFICATIONS (S250)	SPEC-01
		LOADER SPECIFICATIONS (S300)	SPEC-01
DIAGNOSTICS SERVICE CODE	60-01	LUBRICATING THE LOADER	10-01
DRIVE BELT	30-01		
DRIVE COMPONENTS	40-01	MAIN RELIEF VALVE (ACS).....	20-01
		MAIN RELIEF VALVE (FOOT CONTROL)	20-01
ELECTRICAL/HYDRAULIC CONTROLS		MUFFLER.....	70-01
REFERENCE.....	60-01		
ELECTRICAL SYSTEM INFORMATION.....	60-01	OIL COOLER (SEAL TO CONNECT) (STC).....	30-01
ENGINE	70-01	OPERATOR CAB	10-01, 50-01
ENGINE COOLING SYSTEM.....	10-01	OPERATOR SEAT	50-01
ENGINE LUBRICATION SYSTEM	10-01	OPERATOR SEAT (SUSPENSION)	50-01
ENGINE SPECIFICATIONS	SPEC-01		
ENGINE SPEED CONTROL	70-01	POWER BOB-TACH	10-01, 50-01
EVAPORATOR	80-01	POWER BOB-TACH BLOCK	20-01
EVAPORATOR/HEATER UNIT	80-01	POWER BOB-TACH BLOCK (EARLY MODELS)...	20-01
EXPANSION VALVE	80-01	PRESSURE RELIEF VALVE.....	80-01
		PRESSURE SWITCH.....	80-01
FAN GEARBOX.....	10-01		
FLYWHEEL AND HOUSING	70-01		
FLYWHEEL RPM SENSOR	60-01		
FRONT AUXILIARY HYD. COUPLER BLOCK.....	20-01		
FUEL SYSTEM.....	10-01		
FUEL TANK	50-01		



Thank you very much
for your reading.
Please click here
to get more information.