

# T300

TURBO

# T300

TURBO

HIGH FLOW



# Bobcat®

 
## Service Manual

S/N 521911001 & Above  
S/N 522011001 & Above

PDF



DOWNLOAD

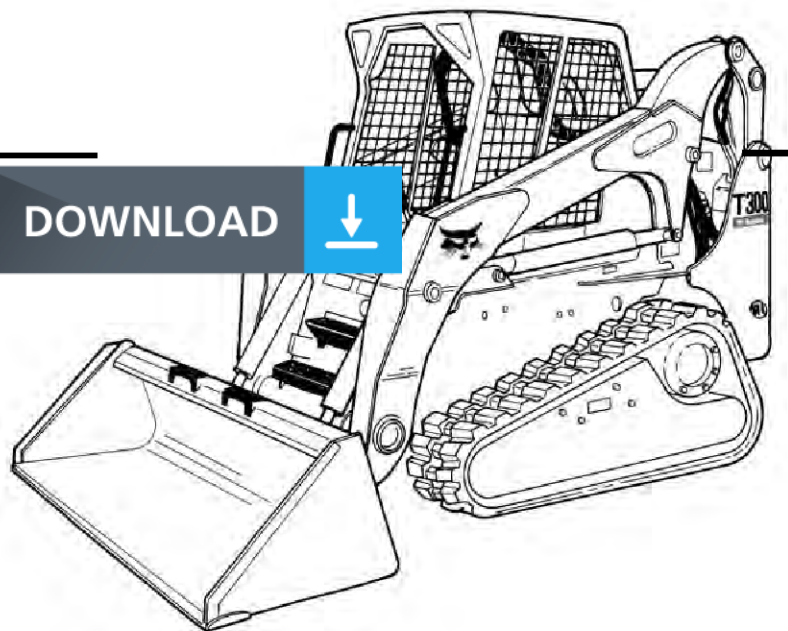

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of its service marks, logos, or other proprietary identifying marks in this manual is historical or informational in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)

6901936 (10-12)

Printed in U.S.A.

© Bobcat Company 2006



# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

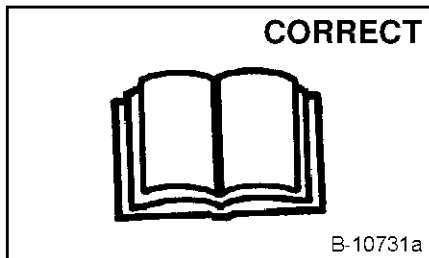


B-10731a

 - ⚠ Never service the Bobcat Compact Track Loader without instructions.

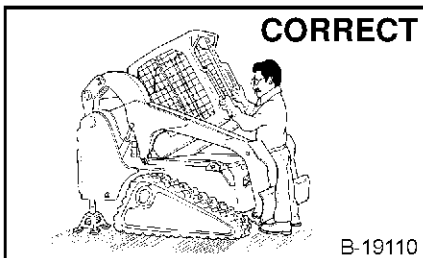


B-19110

 - ⚠ Use the correct procedure to lift to lower operator cab.

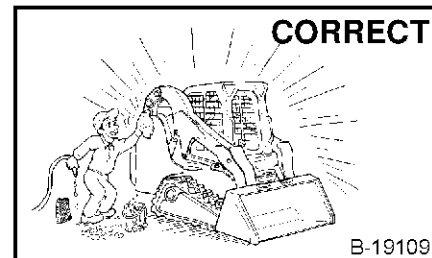


B-19109

 - ⚠ Cleaning and maintenance are required daily.

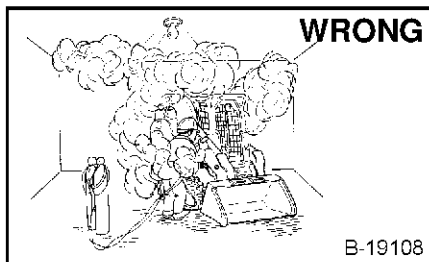


B-19108

 - ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

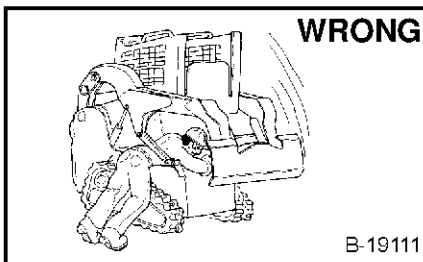


B-19111

 - ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

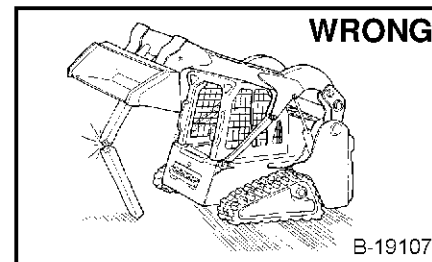


B-19107

 - ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

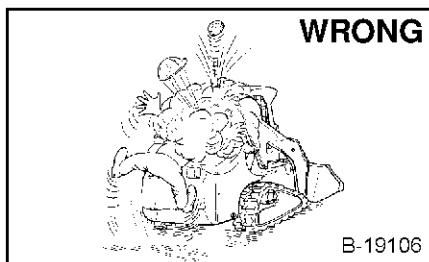

B-19106

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

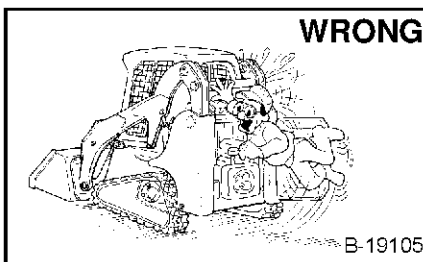

B-19105

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS).....	60-01	HYDRAULIC?HYDROSTATIC FILTER.....	20-01
AIR CLEANER .....	70-01	HYDROSTATIC MOTOR .....	30-01
AIR CLEANER SERVICE .....	10-01	HYDROSTATIC PUMP .....	30-01
ALTERNATOR.....	60-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
BATTERY .....	60-01	INSTRUMENT PANEL .....	60-01
BICS™ SYSTEM .....	60-01	INSIDE ACCESS PANEL .....	50-01
BOBCAT CONTROLLER.....	60-01	 	
BOBCAT INTERLOCK		LIFT ARM .....	50-01
CONTROL SYSTEM (BICS™) .....	60-01	LIFT ARM BY-PASS CONTROL VALVE .....	20-01
BOB-TACH .....	10-01, 50-01	LIFT ARM SUPPORT DEVICE .....	10-01
BRAKE.....	40-01	LIFTING AND BLOCKING THE LOADER.....	10-01
BUCKET POSITION VALVE .....	20-01	LIGHTS .....	60-01
 		LOADER SPECIFICATIONS.....	SPEC-01
CHARGE PRESSURE.....	30-01	LUBRICATING THE LOADER .....	10-01
CONTROL HANDLE.....	50-01	 	
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)		MAIN RELIEF VALVE (ACS).....	20-01
(ACS) SELECTABLE HAND/FOOT CONTROL ...	50-01	MAIN RELIEF VALVE (FOOT CONTROL) .....	20-01
CONTROL PANEL.....	50-01	MUFFLER.....	70-01
CONTROL PEDALS .....	50-01	 	
CONTROL PEDALS (ACS) .....	50-01	OIL COOLER.....	30-01
CONVERSIONS .....	SPEC-01	OPERATOR CAB.....	10-01, 50-01
COOLING FAN .....	70-01	OPERATOR SEAT .....	50-01
CYLINDER (LIFT).....	20-01	OPERATOR SEAT (SUSPENSION).....	50-01
CYLINDER (POWER BOB-TACH) .....	20-01	 	
CYLINDER (TILT) .....	20-01	POWER BOB-TACH .....	10-01, 50-01
 		POWER BOB-TACH BLOCK (EARLY MODELS)...	20-01
DIAGNOSTICS SERVICE CODES .....	60-01	POWER BOB-TACH BLOCK (LATER MODELS)...	20-01
DRIVE BELT.....	30-01	 	
DRIVE COMPONENTS .....	40-01	RADIATOR .....	70-01
 		REAR AUXILIARY DIVERTER VALVE	
ELECTRICAL/HYD. CONTROLS REF .....	60-01	(EARLY MODELS) .....	20-01
ELECTRICAL SYSTEM INFORMATION.....	60-01	REAR AUXILIARY DIVERTER VALVE	
ENGINE .....	70-01	(LATER MODELS) .....	20-01
ENGINE COOLING SYSTEM.....	10-01	REAR DOOR .....	50-01
ENGINE LUBRICATION SYSTEM .....	10-01	REAR GRILL .....	50-01
ENGINE SPECIFICATIONS .....	SPEC-01	RECONDITIONING THE ENGINE.....	70-01
ENGINE SPEED CONTROL .....	70-01	REGULAR MAINTENANCE .....	80-01
 		REMOTE START .....	10-01
FAN GEARBOX.....	10-01	 	
FLYWHEEL AND HOUSING .....	70-01	SEAT BAR.....	50-01
FRONT AUXILIARY HYD. COUPLER BLOCK.....	20-01	SEAT BAR SENSOR.....	60-01
FLYWHEEL RPM SENSOR .....	60-01	SERVICE SCHEDULE .....	10-01
FUEL SYSTEM.....	10-01	STARTER.....	60-01
FUEL TANK .....	50-01	 	
 		TORQUE SPECIFICATIONS FOR BOLTS ...	SPEC-01
HYDRAULIC CONTROL VALVE		TRACTION LOCK .....	60-01
(ADVANCED CONTROL SYSTEM) (ACS).....	20-01	TRANSPORTING THE BOBCAT LOADER .....	10-01
HYDRAULIC CONTROL VALVE		TROUBLESHOOTING .....	70-01
(FOOT CONTROL).....	20-01	 	
HYDRAULIC FLUID RESERVOIR.....	20-01	ACS- ADVANCED CONTROL SYSTEM	
HYDRAULIC/HYDROSTATIC		AHC- ADVANCED HAND CONTROL SYSTEM	
FLUID SPECIFICATIONS .....	SPEC-01	BICS™-BOBCAT INTERLOCK CONTROL SYSTEM	
HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01		
HYDRAULIC PUMP.....	20-01		
HYDRAULIC PUMP (CHARGE) .....	20-01		
HYDRAULIC PUMP (HI FLOW)			
(S/N 521911523 & BELOW) .....	20-01		
HYDRAULIC PUMP (HI FLOW)			
(S/N 521911524 & ABOVE).....	20-01		
HYDRAULIC SYSTEM INFORMATION .....	20-01		



Thank you very much  
for your reading.  
Please click here  
to get more information.