




Bobcat®

Service Manual

T250 Compact Track Loader

S/N A5GS11001 - A5GS19999

S/N A5GT11001 - A5GT19999

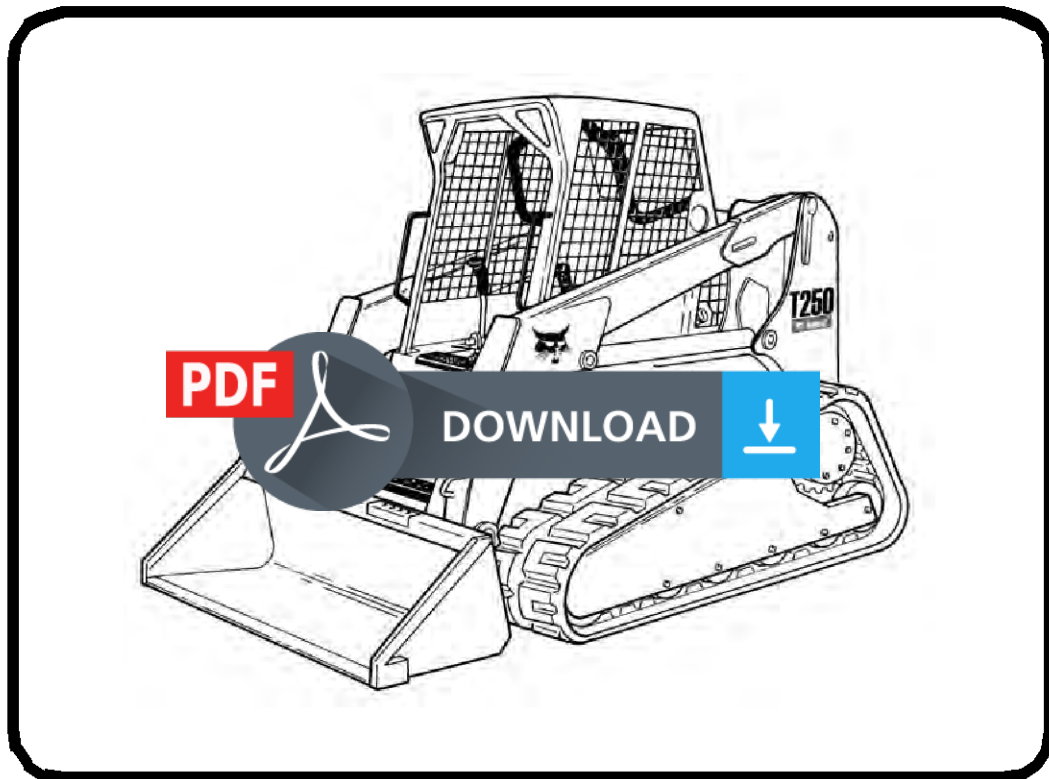

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)



MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

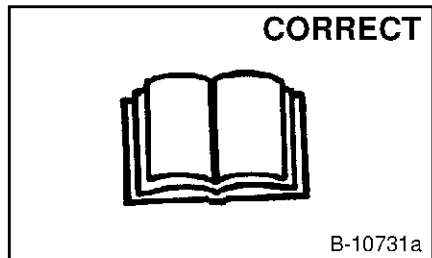


⚠ Never service the Bobcat Compact Track Loader without instructions.

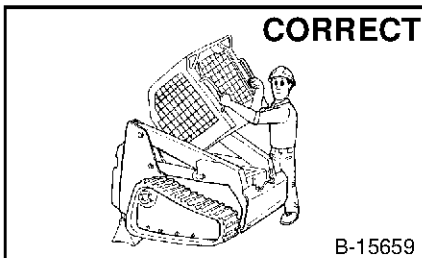

 
⚠ Use the correct procedure to lift or lower operator cab.

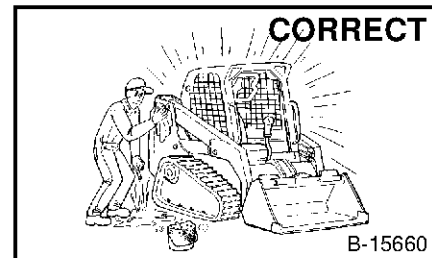

 
⚠ Cleaning and maintenance are required daily.

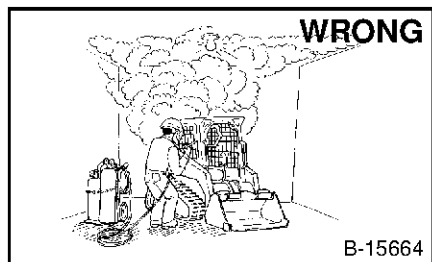


⚠ Have good ventilation when welding or grinding painted parts.
 ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
 ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

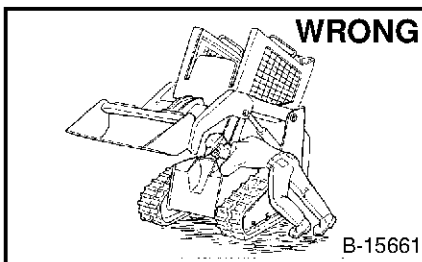


⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

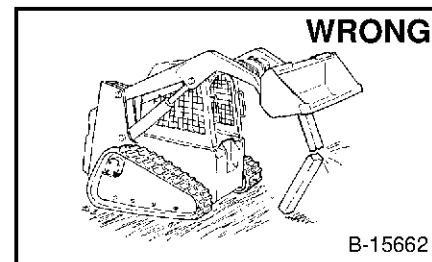

⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
 ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

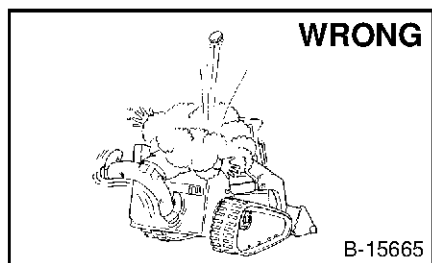

⚠ Stop, cool and clean engine of flammable materials before checking fluids.
 ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
 ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
 ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

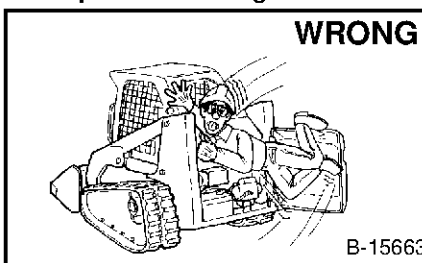

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
 ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
 ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.



⚠ Lead-acid batteries produce flammable and explosive gases.
 ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
 ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

| | | | |
|---|--------------|---|--------------|
| ACCESS PANEL (INSIDE) | 50-01 | ELECTRICAL / HYDRAULIC CONTROLS..... | 60-01 |
| ACCESS PANEL (INSIDE) (SJC) | 50-01 | ELECTRICAL / HYDRAULIC CONTROLS (SJC).... | 60-01 |
| AIR CLEANER | 70-01 | ELECTRICAL SYSTEM INFORMATION..... | 60-01 |
| AIR CLEANER SERVICE | 10-01 | ENGINE COOLING SYSTEM | 10-01, 70-01 |
| AIR CONDITIONING SYSTEM FLOW | 80-01 | ENGINE INFORMATION | 70-01 |
| ALTERNATOR | 60-01 | ENGINE LUBRICATION SYSTEM | 10-01 |
| | | ENGINE SPEED CONTROL | 70-01 |
| BACK-UP ALARM SYSTEM..... | 60-01 | ENGINE SPEED CONTROL (SJC)..... | 70-01 |
| BATTERY..... | 60-01 | EVAPORATOR | 80-01 |
| BOBCAT CONTROLLER (ACS)..... | 60-01 | EVAPORATOR / HEATER UNIT..... | 80-01 |
| BOBCAT CONTROLLER (MAIN)..... | 60-01 | EXHAUST GAS RECIRCULATION (EGR) | |
| BOBCAT CONTROLLER (SJC) (DRIVE) | 60-01 | SYSTEM..... | 80-01 |
| BOBCAT INTERLOCK CONTROL SYSTEM | | EXPANSION VALVE | 80-01 |
| (BICS) | 60-01 | | |
| BLOWER FAN | 80-01 | FLYWHEEL AND HOUSING | 70-01 |
| BOB-TACH (HAND LEVER) | 10-01, 50-01 | FLYWHEEL RPM SENSOR | 60-01 |
| BOB-TACH (POWER - OPTION)..... | 10-01, 50-01 | FRONT AUXILIARY HYDRAULIC COUPLER | |
| BOB-TACH (POWER) BLOCK..... | 20-01 | BLOCK | 20-01 |
| BRAKE..... | 40-01 | FUEL SYSTEM..... | 10-01, 70-01 |
| BUCKET POSITION VALVE | 20-01 | FUEL TANK | 50-01 |
| | | | |
| CAB DOOR..... | 50-01 | HEATER COIL..... | 80-01 |
| CALIBRATION | | HEATER VALVE | 80-01 |
| (SELECTABLE JOYSTICK CONTROL) (SJC) | 60-01 | HYDRAULIC CONNECTION SPECIFICATIONS.. | SPEC-01 |
| CAMSHAFT AND TIMING GEARS..... | 70-01 | HYDRAULIC CONTROL VALVE (ACS) OR (SJC).. | 20-01 |
| CASE DRAIN FILTER..... | 30-01 | HYDRAULIC CONTROL VALVE (STANDARD) | 20-01 |
| CHARGE PRESSURE..... | 30-01 | HYDRAULIC FLUID RESERVOIR | 20-01 |
| COMPRESSOR | 80-01 | HYDRAULIC / HYDROSTATIC FILTERS | 20-01 |
| CONDENSER | 80-01 | HYDRAULIC / HYDROSTATIC FLUID | |
| CONTROL HANDLE / LEVER..... | 50-01 | SPECIFICATIONS | SPEC-01 |
| CONTROL HANDLE / LEVER (ACS) | 50-01 | HYDRAULIC / HYDROSTATIC SYSTEM..... | 10-01 |
| CONTROL HANDLE / LEVER (SJC)..... | 50-01 | HYDRAULIC PUMP (STANDARD)..... | 20-01 |
| CONTROL PANEL (SJC)..... | 50-01 | HYDRAULIC PUMP (STANDARD) (HIGH FLOW).. | 20-01 |
| CONTROL PANEL | 50-01 | HYDRAULIC PUMP (SJC) (HI FLOW)..... | 20-01 |
| CONTROL PANEL SETUP | 60-01 | HYDRAULIC PUMP (SJC) | 20-01 |
| CONTROL PEDALS AND LINKAGES..... | 50-01 | HYDRAULIC SYSTEM INFORMATION | 20-01 |
| CONTROL PEDALS (ACS) | 50-01 | HYDROSTATIC MOTOR | 30-01 |
| CONTROL SYSTEM (ACS)..... | 60-01 | HYDROSTATIC PUMP | 30-01 |
| CONVERSIONS | SPEC-01 | HYDROSTATIC PUMP (SJC)..... | 30-01 |
| CRANKSHAFT AND PISTONS | 70-01 | HYDROSTATIC SYSTEM INFORMATION | 30-01 |
| CYLINDER HEAD..... | 70-01 | | |
| CYLINDER (LIFT) | 20-01 | INSTRUMENT PANEL..... | 60-01 |
| CYLINDER (BOB-TACH) | 20-01 | | |
| CYLINDER (TILT) | 20-01 | JOYSTICK CONTROL | 50-01 |
| | | | |
| DIAGNOSTICS SERVICE CODES | 60-01 | LIFT ARMS..... | 50-01 |
| DRIVE BELT | 30-01 | LIFT ARM BYPASS CONTROL VALVE | 20-01 |
| | | LIFT ARM SUPPORT DEVICE | 10-01 |
| | | LIFTING AND BLOCKING THE LOADER..... | 10-01 |
| | | LIGHTS | 60-01 |
| | | T250 LOADER SPECIFICATIONS..... | SPEC-01 |
| | | LOADER STORAGE AND RETURN | |
| | | TO SERVICE..... | 10-01 |
| | | LUBRICATION SYSTEM..... | 70-01 |
| | | LUBRICATING THE LOADER..... | 10-01 |
| | | | |
| | | MAIN RELIEF VALVE..... | 20-01 |
| | | MAINTENANCE CLOCK..... | 60-01 |
| | | MUFFLER..... | 70-01 |



Thank you very much
for your reading.
Please click here
to get more information.