

450M, 450M Precutter, and 550M Round Balers



JOHN HARE



COLLECTION

TECHNICAL MANUAL 450M, 450M Precutter, and 550M Round Balers

TM148219 01DEC18 (ENGLISH)



John Deere Ottumwa Works

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

The technical manual contains two types of information: diagnostics and repair. Diagnostic groups help you identify the

majority of routine failures quickly. Repair groups tell how to repair the components.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

AG.OUMX005,1036-19-20060803

Section 10 - General

- [Group 05 - Safety](#)
- [Group 10 - Specifications](#)
- [Group 15 - General Information](#)
- [Group 20 - Lubricants](#)

Section 20 - Drive Train

- [Group 05 - General Information](#)
- [Group 10 - Diagnosing Malfunctions](#)
- [Group 15 - Drive Train Protection](#)
- [Group 20 - PTO Driveline](#)
- [Group 25 - Gear Case Repair](#)
- [Group 27 - T-Gear Case Repair](#)
- [Group 30 - Roll Drives](#)
- [Group 31 - Third Roll Drive](#)
- [Group 35 - Rolls](#)
- [Group 40 - Miscellaneous](#)

Section 30 - Hydraulics

- [Group 05 - General Information](#)
- [Group 10 - Diagnosing Malfunctions](#)
- [Group 15 - Operation and Tests](#)
- [Group 20 - Valve Repair](#)
- [Group 30 - Cylinder Repair](#)
- [Group 35 - Optional Hydraulic Bale Ramp Repair](#)

Section 40 - Twine Application-Electric

Section 50 - CoverEdge™ (If Equipped)

- [Group 05 - General Information](#)
- [Group 10 - Diagnosing Malfunctions](#)
- [Group 15 - CoverEdge™ Repair](#)

Section 60 - Electrical System

- [Group 05 - General Information](#)
- [Group 10 - Common Electrical Tests and Checks](#)
- [Group 15 - Diagnosing Malfunctions-BaleTrak™ System](#)
- [Group 20 - Tests and Adjustments-BaleTrak™ System](#)
- [Group 30 - BaleTrak™ Monitor-Controller Operations](#)
- [Group 35 - Repair-BaleTrak™ System](#)
- [Group 40 - Connector Repair](#)

Section 70 - Feed System

- [Group 05 - General Information](#)
- [Group 10 - Diagnosing Malfunctions](#)

- [Group 15 - Regular Pickup Repair](#)
- [Group 25 - MegaWide™ Pickup Common Repair](#)
- [Group 26 - MegaWide™ Plus Pickup Repair \(Non-Precutter\)](#)
- [Group 27 - MegaWide™ HC2 Pickup Repair \(Precutter\)](#)
- [Group 28 - Precutter Repair](#)
- [Group 29 - Rotor Repair-MegaWide™ HC2 Pickup](#)
- [Group 30 - Gauge Wheels](#)

Section 80 - Miscellaneous

- [Group 05 - Wheel Repair](#)
- [Group 10 - Gate Repair](#)
- [Group 15 - Tension Arm Repair](#)
- [Group 20 - Tongue Repair](#)
- [Group 25 - Belt Repair](#)
- [Group 30 - Main Frame Repair](#)

Section 99 - Dealer Fabricated Tools

- [Group 05 - Dealer Fabricated Tools](#)

Section 240 - Electrical

- [Group 20 - Theory of Operation](#)
- [Group 30 - Schematics](#)

Section 249 - Electrical Component Information

- [Group 40A - Electrical Assemblies](#)
- [Group 40B - Sensors](#)
- [Group 40E - Lights](#)
- [Group 40S - Switches](#)
- [Group 40X - Interconnects and Ground Points](#)
- [Group 40Y - Electronically Actuated Mechanical Devices](#)

Section 270 - Hydraulics

- [Group 20 - Theory of Operation](#)
- [Group 30 - Schematics](#)

Section 279 - Hydraulic Component Information

- [Group 40C - Cylinder, Actuator, or Piston](#)
- [Group 40D - Check Valve](#)
- [Group 40G - Valve Block, Assembly, or Gearcase](#)
- [Group 40V - Valve](#)
- [Group 40X - Diagnostic Receptacle or Coupler](#)
- [Group 40Y - Solenoid Valve](#)

Contents

	Page		Page
Group 05 - Safety			
<u>Recognize Safety Information</u>	<u>10-05-1</u>	<u>Practice Safe Maintenance</u>	<u>10-05-10</u>
<u>Understand Signal Words.....</u>	<u>10-05-1</u>	<u>Use Proper Tools.....</u>	<u>10-05-10</u>
<u>Follow Safety Instructions.....</u>	<u>10-05-1</u>	<u>Construct Dealer-Made Tools Safely.....</u>	<u>10-05-10</u>
<u>Handle Fluids Safely-Avoid Fires</u>	<u>10-05-2</u>	<u>Dispose of Waste Properly.....</u>	<u>10-05-11</u>
<u>Prevent Battery Explosions</u>	<u>10-05-2</u>	<u>Protect Against High Pressure Spray.....</u>	<u>10-05-11</u>
<u>Prepare for Emergencies.....</u>	<u>10-05-2</u>	<u>Live With Safety</u>	<u>10-05-11</u>
<u>Park Machine Safely.....</u>	<u>10-05-2</u>	Group 10 - Specifications	
<u>Operate Baler Safely</u>	<u>10-05-3</u>	<u>Machine Specifications-450M and 550M</u>	<u>10-10-1</u>
<u>Protect Bystanders</u>	<u>10-05-3</u>	<u>Metric Bolt and Screw Torque Values.....</u>	<u>10-10-3</u>
<u>Service Round Baler Safely.....</u>	<u>10-05-4</u>	<u>Unified Inch Bolt and Screw Torque Values</u>	<u>10-10-4</u>
<u>Support Machine Properly</u>	<u>10-05-6</u>	<u>Service Recommendations For 37° Flare and 30°</u>	<u>10-10-5</u>
<u>Wear Protective Clothing.....</u>	<u>10-05-6</u>	<u> Cone Seat Connectors.....</u>	
<u>Work in Clean Area</u>	<u>10-05-6</u>	Group 15 - General Information	
<u>Service Machines Safely</u>	<u>10-05-6</u>	<u>Machine Decal Identification</u>	<u>10-15-1</u>
<u>Work In Ventilated Area.....</u>	<u>10-05-7</u>	<u>Machine Description-4x5 and 5x5</u>	<u>10-15-1</u>
<u>Illuminate Work Area Safely</u>	<u>10-05-7</u>	Group 20 - Lubricants	
<u>Replace Safety Signs</u>	<u>10-05-7</u>	<u>Grease.....</u>	<u>10-20-1</u>
<u>Use Proper Lifting Equipment.....</u>	<u>10-05-7</u>	<u>Gear Case Oil.....</u>	<u>10-20-1</u>
<u>Avoid High-Pressure Fluids</u>	<u>10-05-8</u>	<u>Alternative and Synthetic Lubricants</u>	<u>10-20-2</u>
<u>Remove Paint Before Welding or Heating.....</u>	<u>10-05-8</u>	<u>Mixing of Lubricants</u>	<u>10-20-2</u>
<u>Avoid Heating Near Pressurized Fluid Lines</u>	<u>10-05-8</u>	<u>Lubricant Storage</u>	<u>10-20-2</u>
<u>Precautions for Welding</u>	<u>10-05-8</u>	<u>Perform Lubrication and Maintenance</u>	<u>10-20-2</u>
<u>Service Tires Safely.....</u>	<u>10-05-9</u>		



Thank you very much
for your reading.
Please click here
to get more information.