

John Deere Agriculture

**5075M (FT4/Stage IIIB), 5085M, 5100M, 5100MH,
5100ML, 5115M and 5115ML (IT4/Stage IIIB)
Tractors Repair Technical Manual**

REPAIR MANUAL

**5075M, 5085M, 5100M, 5100MH, 5100ML, 5115M,
5115ML**



TM116419, June 2013



Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Specifications
- Group 15 - Fuel and Lubricants
- Group 20 - Serial Number Locations

Section 20 - ENGINE

- Group 05 - Engine
- Group 10 - Cooling System

Section 30 - FUEL, AIR INTAKE AND EXHAUST SYSTEMS

- Group 05 - Fuel System
- Group 15 - Air Intake System
- Group 20 - Air Exhaust System

Section 40 - ELECTRICAL SYSTEM

- Group 05 - Battery, Starter and Alternator
- Group 10 - Electrical System Components
- Group 15 - Wiring Harnesses

Section 50 - POWER TRAIN

- Group 05 - Separation
- Group 10 - SS Transmission
- Group 15 - PR/SR Transmission
- Group 20 - PR Plus Transmission
- Group 25 - Clutch Assembly—SS Transmission
- Group 30 - Clutch Assembly—PR/SR Transmission
- Group 35 - Clutch Assembly—PR Plus Transmission
- Group 40 - Differential
- Group 45 - Control Valve
- Group 50 - Final Drives
- Group 55 - Hi-Crop Final Drives
- Group 60 - Rear PTO Drive Shaft
- Group 65 - Mechanical Front-Wheel Drive
- Group 70 - Creeper Assembly
- Group 75 - Front PTO

Section 60 - STEERING AND BRAKE

- Group 05 - Steering Repair
- Group 10 - Brake Repair
- Group 15 - Air Brakes Repair

Section 70 - HYDRAULIC

- Group 05 - Hydraulic Pump and Filter
- Group 10 - Hydraulic Oil Cooler
- Group 15 - Hitch Valve
- Group 20 - Hydraulic Rear Selective Control Valve
- Group 25 - Hydraulic Mid-Mount Selective Control Valve
- Group 30 - Hydraulic Lines
- Group 35 - Hydraulic Trailer Brake Valve
- Group 40 - Front Hitch

Section 80 - MISCELLANEOUS

- Group 05 - Front Axle—2WD
- Group 10 - 3-Point Hitch

Group 15 - Fenders

Group 20 - Hood

Section 90 - OPERATOR'S STATION

Group 05 - Seat and Support

Group 10 - Control Console

Group 15 - Roll-Gard

Group 20 - Cab Components

Group 25 - Open Operator Station Components

Group 30 - Air Conditioning System

Group 35 - Heating System

Section 99 - SPECIAL TOOLS

Group 05 - Dealer Fabricated Tools

Group 10 - Service Tools

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.