

**5085M, 5100M,
5100MH, 5100ML,
5115M, & 5115ML
Tractors (FT4)
Diagnostic**

DIAGNOSIS TECHNICAL MANUAL

**5085M, 5100M, 5100MH, 5115M, 5100ML, 5115ML (S.N. MY2014-,
MY2014-Dec-2014, MY2016-)**

TM134219 16FEB16 (ENGLISH)



Table of contents

FOREWORD

Section 210 - GENERAL INFORMATION

- Group 05A - Safety
- Group 05B - General References
- Group 05C - Technical Specific References

Section 211 - DIAGNOSTIC TROUBLE CODES

- Group CCU - CCU Code Diagnostics
- Group ECU - ECU Code Diagnostics
- Group EIC - EIC Code Diagnostics
- Group HCU - HCU Code Diagnostics
- Group ICC - ICC Code Diagnostics
- Group JDL - JDL Code Diagnostics
- Group PTR - PTR Code Diagnostics

Section 212 - OBSERVABLE SYMPTOMS AND SYSTEM DIAGNOSTICS

- Group 05B - General References
- Group 20 - Engine Diagnostics
- Group 30 - Fuel, Air Intake, Exhaust, and Cooling Diagnostics
- Group 40 - Electrical Diagnostics
- Group 45 - Electronic Control Unit Diagnostics
- Group 50 - Drive Systems and Transmission Diagnostics
- Group 60 - Steering and Brakes Diagnostics
- Group 70 - Hydraulic Diagnostics
- Group 90 - Cab/Open Operator's Station Diagnostics

Section 220 - ENGINE

- Group 05B - General References
- Group 40AA - Engine Component and Connector Information
- Group 50AA - Engine Tests and Adjustments

Section 230 - FUEL, AIR INTAKE, EXHAUST, AND COOLING

- Group 05B - General References
- Group 20AA - Fuel, Air Intake, Exhaust, and Cooling Theory of Operation

Section 240A - ELECTRICAL GENERAL AND THEORY OF OPERATION

- Group 05B - General References
- Group 20DD - Turn Signal Switch and Warning Lights
- Group 20MA - Wipers (Two Speed)
- Group 20MC - Rear Wipers
- Group 20PA - Instrument Cluster Control (ICC)
- Group 20UA - Electrohydraulic Control Unit (EHC)
- Group 20UB - Hitch Control Unit (HCU)
- Group 20UC - Power Train Reverser (PTR)
- Group 20UD - Chassis Control Unit (CCU) (PR Transmission)
- Group 20UE - Chassis Control Unit (CCU) (SS Transmission)
- Group 20VA - Engine Control Unit (ECU)
- Group 20WA - Controller Area Network

Section 240B - ELECTRICAL SCHEMATICS

- Group 05B - General References
- Group 30AA - Key Switch, Starter, and Alternator (SE01)
- Group 30AB - Neutral Start (SS Transmission) (SE02A)
- Group 30AC - Neutral Start (PR Transmission) (SE02B)
- Group 30BA - Accessory Power (SE03)
- Group 30CA - Horn (SE04)
- Group 30DA - Light Switch and Headlights (SE05A)
- Group 30DB - Turn and Brake Lights (SE05B)

- Group 30DC - Cab Work Lighting (SE05C)
- Group 30DD - Open Operator Station Work Lighting (SE05D)
- Group 30DE - Warning Lights (SE06)
- Group 30FA - Junction Block Power (SE09)
- Group 30GA - Implement Connector (SE10)
- Group 30HA - Loader Lights (SE12)
- Group 30IA - Back-Up Alarm (SE13A)
- Group 30IB - Beacon Light (SE13B)
- Group 30JA - Mid-Mount SCV (SE14)
- Group 30KA - Power Outlets (SE15)
- Group 30LA - Heating (SE16)
- Group 30LB - Air Conditioning (SE17)
- Group 30MA - Front Wiper (Two Speed) (SE19)
- Group 30MC - Rear Wiper (SE21)
- Group 30NA - Dome Light, Door Switch, and Radio (SE22)
- Group 30OA - Air Seat (SE23)
- Group 30PA - Instrument Cluster Control (ICC) (SE24)
- Group 30QA - Seat Switch, Rear PTO Switch, and Wheel Speed Sensor (SE25)
- Group 30RA - ELX Relay and Fuses (SE26)
- Group 30SA - Mechanical Front-Wheel Drive (MFWD) (SE27)
- Group 30TA - Brake Switch (SE28)
- Group 30UA - Chassis Control Unit (CCU) (PR Transmission) (SE29A)
- Group 30UB - Electrohydraulic Control Unit (EHC) (SE29B)
- Group 30UC - Hitch Control Unit (HCU) (SE29C)
- Group 30UD - Chassis Control Unit (CCU) (SS Transmission) (SE29D)
- Group 30VA - Engine Control Unit (ECU) (SE30)
- Group 30WA - Controller Area Network (SE32)
- Group 30WB - AutoTrac Universal (ATU) (SE33)
- Group 30WC - JDLINK (SE34)

Section 240C - ELECTRICAL COMPONENTS AND CONNECTORS

- Group 05B - General References
- Group 40AA - Key Switch, Starter, and Alternator (SE01)
- Group 40AB - Neutral Start (SS Transmission) (SE02A)
- Group 40AC - Neutral Start (PR Transmission) (SE02B)
- Group 40BA - Accessory Power (SE03)
- Group 40CA - Horn (SE04)
- Group 40DA - Light Switch and Headlights (SE05A)
- Group 40DB - Turn and Brake Lights (SE05B)
- Group 40DC - Cab Work Lighting (SE05C)
- Group 40DD - Open Operator Station Work Lighting (SE05D)
- Group 40DE - Warning Lights (SE06)
- Group 40FA - Junction Block Power (SE09)
- Group 40GA - Implement Connector (SE10)
- Group 40HA - Loader Lights (SE12)
- Group 40IA - Back-Up Alarm (SE13A)
- Group 40IB - Beacon Light (SE13B)
- Group 40JA - Mid-Mount SCV (SE14)
- Group 40KA - Power Outlets (SE15)
- Group 40LA - Heating (SE16)
- Group 40LB - Air Conditioning (SE17)
- Group 40MA - Front Wiper (Two Speed) (SE19)
- Group 40MC - Rear Wiper (SE21)
- Group 40NA - Dome Light, Door Switch and Radio (SE22)

- Group 400A - Air Seat (SE23)
- Group 40PA - Instrument Control Cluster (ICC) (SE24)
- Group 40QA - Seat Switch, Rear PTO Switch, and Wheel Speed Sensor (SE25)
- Group 40RA - ELX Relay and Fuses (SE26)
- Group 40SA - Mechanical Front-Wheel Drive (MFWD) (SE27)
- Group 40TA - Brake Switch (SE28)
- Group 40UA - Chassis Control Unit (CCU) (PR Transmission) (SE29A)
- Group 40UB - Electrohydraulic Control Unit (EHC) (SE29B)
- Group 40UC - Hitch Control Unit (HCU) (SE29C)
- Group 40UD - Chassis Control Unit (CCU) (SS Transmission) (SE29D)
- Group 40VA - Engine Control Unit (ECU) (SE30)
- Group 40WA - Controller Area Network (SE32)
- Group 40WB - AutoTrac Universal (ATU) (SE33)
- Group 40WC - JDLINK (SE34)
- Group 40ZA - Fuses and Relays
- Group 40ZB - Ground Points
- Group 40ZC - Interconnects
- Group 40ZD - Wiring Harnesses

Section 240D - ELECTRICAL TESTS AND ADJUSTMENTS

- Group 05B - General References
- Group 50AA - Tests and Adjustments

Section 245 - ELECTRONIC CONTROL UNITS

- Group 05B - General References
- Group 10AA - Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Theory of Operation
- Group 30AA - Schematics
- Group 40AA - Component and Connector Information
- Group 50AA - Tests and Adjustments
- Group CCU - Chassis Control Unit (CCU)
- Group ECU - Engine Control Unit (ECU)
- Group EIC - Engine Interface Control Unit (EIC)
- Group HCU - Hitch Control Unit (HCU)
- Group ICC - Instrument Cluster Control Unit (ICC)
- Group PTR - Power Train Reverser (PTR)

Section 250 - DRIVE SYSTEMS AND TRANSMISSIONS

- Group 05B - General References
- Group 10AA - Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Creeper Theory of Operation
- Group 20AB - Differential Theory of Operation
- Group 20AC - Differential Lock Theory of Operation
- Group 20AD - Final Drive Theory of Operation
- Group 20BB - Rear PTO Theory of Operation
- Group 20CA - High Crop Axle Theory of Operation
- Group 20CB - MFWD Theory of Operation
- Group 20DA - PR Transmission Theory of Operation
- Group 20DB - PR Plus Transmission Theory of Operation
- Group 20DC - SS Transmission Theory of Operation
- Group 30AA - Drive Systems Schematics
- Group 30BA - Transmission Schematics
- Group 40AA - Drive Systems Component and Connector Information
- Group 40BA - Transmission Component and Connector Information
- Group 50AA - Drive Systems Tests and Adjustments
- Group 50BA - Transmission Tests and Adjustments

Section 260 - STEERING AND BRAKES

- Group 05B - General References
- Group 10AA - Brake Calibrations, Preliminary Checks and Operational Checks
- Group 10BA - Steering Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Brake Theory of Operation
- Group 20BA - Steering Theory of Operation
- Group 30AA - Brake Schematics
- Group 30BA - Steering Schematics
- Group 40AA - Brake Component and Connector Information
- Group 40BA - Steering Component and Connector Information
- Group 50AA - Brake Tests and Adjustments
- Group 50BA - Steering Tests and Adjustments

Section 270 - HYDRAULICS

- Group 05B - General References
- Group 10AA - Hydraulic Calibrations, Preliminary and Operational Checks
- Group 20AA - General Hydraulics Theory of Operation
- Group 20BA - Electrohydraulic Hitch Theory of Operation
- Group 20BB - Mechanical Hitch Theory of Operation
- Group 20BC - Front Hitch Theory of Operation
- Group 20CA - Hydraulic Filter Theory of Operation
- Group 20CB - Hydraulic Pump Theory of Operation
- Group 20DA - Dual Mid-Mount SCV Theory of Operation
- Group 20DB - Power Beyond Theory of Operation
- Group 20DC - Quick Disconnect Coupler Theory of Operation
- Group 20DD - Dual Rear SCV Theory of Operation
- Group 20DE - Triple Mid-Mount SCV Theory of Operation
- Group 20DF - Triple Rear SCV Theory of Operation
- Group 30AA - Schematics
- Group 40AA - Component and Connector Information
- Group 50AA - Tests and Adjustments

Section 290 - CAB/OPEN OPERATOR'S STATION

- Group 05B - General References
- Group 10AA - Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - HVAC Theory of Operation
- Group 20BA - Seat Theory of Operation
- Group 30AA - Schematics
- Group 40AA - Component and Connector Information
- Group 50AA - Tests and Adjustments

Section 299 - SPECIAL TOOLS

- Group 05B - General References
- Group 05C - Dealer Fabricated and Service Tools



Thank you very much
for your reading.
Please click here
to get more information.