

CROWN



PDF



DOWNLOAD



Service Manual

ESR4000 Series

CROWN

TABLE OF CONTENT

Page intentionally left blank
Seite absichtlich freigelassen
Page intentionnellement laissée blanche

Index

MA – SAFETY	PAGE	SER. NO. SEC.	ISSUE
Symbols Used In The Manual	M/P-MA-0000-001		
General Maintenance and Repair Safety Instructions	M/P-MA-0000-001		
- Maintenance and Repair	M/P-MA-0000-002		
- Before Parking the Truck	M/P-MA-0000-002		
- Before Working on the Truck	M/P-MA-0000-002		
- Before Starting the Truck	M/P-MA-0000-002		
Truck Warnings and Labels	M/P-MA-0000-002		
ITD – INTRODUCTION	PAGE	SER. NO. SEC.	ISSUE
General	M/P-ITD-2140-001		
- Operating Instructions	M/P-ITD-2140-001		
- Service Training	M/P-ITD-2140-001		
- Ordering Spare Parts	M/P-ITD-2140-001		
- Using the Manual	M/P-ITD-2140-001		
- Page Numbering in the Manual	M/P-ITD-2140-002		
Model Number	M/P-ITD-2140-003		
M1 – LUBRICATION AND ADJUSTMENT	PAGE	SER. NO. SEC.	ISSUE
Jacking up the Truck	M-1.0-2140-001		
Raising the Truck with a Crane	M-1.0-2140-002		
Towing the Truck	M-1.0-2140-002		
Component Access	M-1.0-2140-003		
- Removing the Floorboard	M-1.0-2140-004	-----	Rev.1 08/00
- Seat Disassembly / Installation	M-1.0-2140-004		
- Plastic Panel Disassembly / Assembly	M-1.0-2140-004		
Maintenance	M-1.1-2140-001		
- Driver Participation	M-1.1-2140-001		
- Daily Maintenance Log	M-1.1-2140-001		
- Recommended Lubricants and Oils	M-1.1-2140-002		
- Lubrication Items and Intervals	M-1.2-2140-001		
- Inspection and Maintenance Schedule	M-1.2-2140-002	-----	Rev.1 08/00
Torques	M-1.9-0000-001		
M2 – HYDRAULICS	PAGE	SER. NO. SEC.	ISSUE
Changing Hydraulic Oil	M-2.0-0000-001		
Hydraulic Pipes and Accessories	M-2.1-2140-001		
- Filter	M-2.2-2140-002		
- Tank	M-2.3-2140-002		
- System Bleeding	M-2.3-2140-002		
- Drift Test	M-2.3-2140-002		
Functional Description	M-2.3-2140-003		
Hydraulic Symbols	M-2.3-2140-013		
Valve Block	M-2.4-2140-001		
- Safety Valve Setting (RV1 and RV2)	M-2.4-2140-001		
- Proportional Valve Setting (PVA and PVH)	M-2.4-2140-001		
M3 – DRIVE UNIT	PAGE	SER. NO. SEC.	ISSUE
Drive Unit	M-3.1-2140-001		
- Removal	M-3.1-2140-001		
- Draining the Oil	M-3.1-2140-001		
- Steering Chain Removal	M-3.1-2140-002		
- Drive Wheel Removal	M-3.1-2140-002		
- Tools	M-3.1-2140-003		

- Measurement Tools	M-3.1-2140-004
- Equipment	M-3.1-2140-005
Gear Unit Maintenance	M-3.1-2140-008
- Disassembly	M-3.1-2140-510
- Pre-Assembly Test	M-3.1-2140-013
- Assembly	M-3.1-2140-013
- Final Assembly	M-3.1-2140-019
- Gear Upper Section Assembly	M-3.1-2140-021
- Live Ring Bearing Maintenance	M-3.1-2140-021
- Gear Unit Assembly	M-3.1-2140-022

M4 – ELECTRICS	PAGE	SER. NO. SEC.	ISSUE
Electrics - General	M-4.0-0000-001		
- Wire Colour Codes	M-4.0-0000-001		
- Abbreviations	M-4.0-0000-002		
- Electrical Symbols	M-4.0-0000-004		
Load Monitor (Display)	M-4.3-2140-200		
- Troubleshooting	M-4.3-2140-203		
Encoder ECR2	M-4.3-2140-300		
ESR4000 Status Codes	M-4.3-2140-400		
- Power-up circuit diagram	M-4.3-2140-401		
- Status codes 200 to 294	M-4.3-2140-402		
- Status codes 311 to 399	M-4.3-2140-427		
- Status codes 813 to 838	M-4.2-2140-403	-----	Rev.1 08/00
Access 1-2-3	M-4.3-2140-600		
- Access 1, Design and Function	M-4.3-2140-600		
- Battery Discharge Indicator	M-4.3-2140-601		
- Power "on"	M-4.3-2140-601		
- Operator Improper Sequence Error	M-4.3-2140-601		
- Service Due Key Display	M-4.3-2140-601		
- Navigation Keys	M-4.3-2140-602		
- Message Display	M-4.3-2140-602		
- Load Monitor	M-4.3-2140-601		
Operator Menu	M-4.3-2140-603		
Service Menu	M-4.3-2140-605		
Analyzer Menu	M-4.3-2140-606		
Calibration Menu	M-4.3-2140-611		
- Accessing the CALIBRATION Menu	M-4.3-2140-613		
- When to calibrate	M-4.3-2140-613		
- Calibration Procedures	M-4.3-2140-613		
- Calibration Complete	M-4.3-2140-613		
Features Menu	M-4.3-2140-621		
Menü HOUR METERS	M-4.3-2140-629	-----	Rev.1 08/00
Log Events Menu	M-4.3-2140-630		
Performance Menu	M-4.3-2140-631		
Utilities Menu	M-4.3-2140-644	-----	Rev.1 08/00
Emergency Disconnect Contactor	M-4.4-2140-001		
Battery Maintenance	M-4.6-2140-001		
Charging the Battery	M-4.6-2140-001		
Replacing the Battery	M-4.6-2140-001		
Traction / Pump Motor Maintenance	M-4.35-2140-001		
- Access	M-4.35-2140-001		
- Maintenance	M-4.35-2140-001		

M5 – BRAKE	PAGE	SER. NO. SEC.	ISSUE
Brake System	M-5.0-2140-001		
- Bleeding the Brake System	M-5.0-2140-001		
- Motor Brake	M-5.0-2140-002		



Thank you very much
for your reading.
Please click here
to get more information.