

CROWN

ESR

Maintenance Manual



ESR4500 Series

This master manual is subject to continual updates.
It is meant exclusively for businesses authorized by CROWN.
It is not permitted to pass on the contents or copies thereof to third parties.

CROWN Gabelstapler GmbH & Co. KG
- European Headquarter -
Moosacher Str. 52
80809 Munich
Germany

Phone +49 (0) 89 93 00 2 - 0
Fax +49 (0) 89 93 00 2 - 133



TABLE OF CONTENTS

Blank page

Table of Contents

MA – SAFETY	PAGE
Safety Symbols used in the Manual	3
General Maintenance and Repair Safety Notes	3
ITD – INTRODUCTION	PAGE
Maintenance and Repair	3
Before Leaving the Truck	4
Before Carrying out Work on the Truck	4
Before Operating the Truck	4
Warnings and Labels on the Truck	4
General	7
Operating Instructions	7
Service Training	7
Ordering Spare Parts	7
Using the Manual	7
M1 – LUBRICATION AND ADJUSTMENT	PAGE
Lifting the Truck	11
Towing the Truck	11
Jacking up the Truck	12
Component Access	13
Access to the Motor Compartment	14
Removing the Floorboard	14
Plastic Panel Disassembly / Assembly	14
Maintenance	16
Recommended Lubricants and Oils	16
Lubricants	16
Cold Store Trucks	16
Truck Decommissioning	16
Restoring the Truck to Service	16
Battery Maintenance	16
Daily Safety Check	18
Inspection and Maintenance Schedule	20
Cold Store Trucks	20
Torques	26
Screw Grade Marking	26
Nut Grade Marking	26
Hydraulic Symbols	29
Functional Description	33
Abbreviations	33
Lifting	35
Lowering	35
Mast Reach Carriage Retraction	37
Mast Reach Carriage Extension	37
Tilt Back Circuit	39
Tilt Down Circuit	39
Sideshift Left	41
Sideshift Right	41
M2 – HYDRAULICS	PAGE
Hydraulic Components	42
Hydraulic Lines	42
Valve Block	43
Relief Valve RV1	43
Lowering Speed Adjustment Valve AVL	44
Pressure Load Switch PLS	44

M2 – HYDRAULICS		PAGE
Hydraulic Reservoir		45
Discharging the Hydraulic Reservoir		45
Filling the Hydraulic Tank		45
Filter		46
Replacing the Return Filter		46
Replacing the Aeration Filter		47
Replacing the Suction Filter		47
Pump Motor		48
Hydraulic Pump		48
Disassembly		48
Commissioning		48
Bleeding the Hydraulic System	50	
Bleeding the Free Lift Cylinder		50
Bleeding the Lift Cylinders		50
Bleeding the Reach Cylinder		51
Bleeding the Sideshift Cylinder		51
Bleeding the Tilt Cylinders		51
Bleeding the 5th Function Cylinder		51
Flushing the Cylinders		51
Drift Tests	52	
Lift cylinder drift test		52
Tilt cylinder drift test		52
Causes of Drift		52
M3 – DRIVE UNIT		PAGE
Gear unit	55	
Preparation		55
Removal		55
Servicing		55
General		57
Gear Unit Disassembly / Assembly		57
Disassembly		57
Assembly		57
Preparing the gear unit		57
Inserting the bevel pinion shaft		58
Assembling the flange shaft		58
Adjusting the Bevel Wheel Set		58
Checking the flank tooth bearing		59
Final Assembly		59
Re-Assembly		60
Traction motor		60
M4 – ELECTRICS		PAGE
Electrical Components	63	
ACS		63
BFS		63
BLS		63
BPS		63
BRS		63
BRAKE		63
Option BS		63
ECR1		63
ECR2		63
ECR3		63
ECR4		63
Option ECR5 up to serial no. 5A203818		63

M4 – ELECTRICS	PAGE
Option ECR5 from serial no. 5A203820	64
EDS	64
ED1	64
Option ED2	64
Option ED3	64
Option FAN1	64
FAN2	64
FAN3, FAN4	64
Option FKS	64
Option FLS	64
FS	64
FU1 (15 A)	64
FU2 (15 A)	64
FU3 (15 A) up to serial no. 5A204796	64
FU3 (10 A) from serial no. 5A204798	64
FU4 (30 A) up to serial no. 5A204796	65
FU4 (10 A) from serial no. 5A204798	65
Option FU5 (15 A) & FU6 (15 A)	65
FU7 (425 A)	65
Option FU8 (30 A)	65
Option FU9 (50 A)	65
FU13 (50 A) from serial no. 5A204798	65
HDM	65
HN	65
HNS	65
HGTS (up to serial no. 5A203818)	65
HGTS from serial no. 5A203820	65
Option HGTRS up to serial no. 5A203818	65
Option HGTRS from serial no. 5A203820	65
Option K1 & K2	65
Option K3 & K4	65
.....	65
Option K5	66
Option K6	66
Option K7 & K8	66
Option K9 & K10	66
K11	66
Option K12 & K13	66
Option K14	66
KYS	66
LS	66
MVL	66
Option ORS	66
POT1	66
POT2	66
POT3	66

M4 – ELECTRICS	PAGE
POT4	67
POT5	67
<input type="checkbox"/> POT6	67
PLS	67
PVL	67
PVAR	67
PVAL	67
PVRT	67
PVRE	67
RES1	67
RES2	67
RS	67
RV	67
<input type="checkbox"/> SD	68
SDM	68
SES	68
SFS 1SA	68
SFS 2	68
<input type="checkbox"/> SI	68
SPS	68
SVR	68
SVS	68
SVT	68
<input type="checkbox"/> SW	68
TDM	68
THS1	69
THS2	69
<input type="checkbox"/> THS3	69
THS4 (from serial no. 5A203820)	69
ESR4500 Status Codes	71
Status Codes	71
When a Service Code Occurs	71
Truck does not operate and there is no Status Code .	71
1. Fault during power-up	71
2. The fault is not electrical	71
3. Malfunction in one of a group of unmonitored	
inputs	71
Power Up Circuit up to Ser. No. 5A204796	72
Power Up Circuit up from Ser. No. 5A204798	73
Statuscode 100 - 102	74
Statuscode 110 - 111	75
Statuscode 112 - 120	76
Statuscode 121 - 130	77
Statuscode 131 - 160	79
Statuscode 180 - 181	80
Statuscode 182 - 183	81
Statuscode 184 - 186	82
Statuscode 200	83
Statuscode 201 - 210	84
Statuscode 211 - 213	85
Statuscode 214 - 220	86
Statuscode 221 - 222	87
Statuscode 223 - 224	88
Statuscode 225 - 230	89
Statuscode 240 (up to Ser. No. 5A204796)	90



Thank you very much
for your reading.
Please click here
to get more information.