

CROWN

Maintenance Manual



GPC2000 Series

This master maintenance manual is subject to continual updates.
It is meant exclusively for businesses authorized by CROWN.
It is not permitted to pass on the contents or copies thereof to third parties.

CROWN Gabelstapler GmbH
- European Headquarter -
Moosacher Str. 52
80809 Munich
Germany

Phone +49 (0)89 93 00 2 – 0
Fax +49 (0)89 93 00 2 – 133

CROWN

TABLE OF CONTENT

Page intentionally left blank

Table of Content

MA – SAFETY	PAGE	SER-NR. CUT	REV.
Safety Symbols used in the Manual	3		Rev.1 04/00
General Maintenance and Repair Safety Notes	3		
Maintenance and Repair	3		Rev.1 04/00
Before Leaving the Truck	4		
Before Carrying out Work on the Truck	4		
Before Operating the Truck	4		
Warnings and Labels on the Truck	4		
ITD – INTRODUCTION	PAGE	SER-NR. CUT	REV.
General	7		
Operating Instructions	7		
Service Training	7		
Ordering Spare Parts	7		
Using the Manual	7		
Model-Number	8		
M1 – LUBRICATION AND ADJUSTMENT	PAGE	SER-NR. CUT	REV.
Jacking up the Truck	11		
Lifting the Truck with a Crane	11		
Towing the Truck	13		
De-commissioning	14		
Re-commissioning	14		
Component Access	15		
Models	17		
Maintenance	18		
Check and Maintenance Schedule	18		
Recommended Lubricants and Oils	27		
Lubricants	27		
Cold Store Trucks	27		
Grease items and grease intervals	28		
Torques	30		
M2 – HYDRAULICS	PAGE	SER-NR. CUT	REV.
Hydraulic Symbols	35		
Hydraulic System	39		
Operation	39		
GPC2020/2040/2040S	39		
Platform Lift	40		
Fork High Lift	41		
Platform Lift and Fork High Lift	42		
Hydraulic Unit Removal	43		
Replacing the Hydraulic Pump	44		
Removal	44		
Installation	44		
Replacing the Hydraulic Filter	44		
Replacing the Suction Filter	44		
Replacing the Oil	44		
Start-Up	44		
Checking the Valve Settings	46		
Checking the Non-Return Valve	46		
Checking the Safety Valve	46		
Adjusting the Safety Valve	46		



Thank you very much
for your reading.
Please click here
to get more information.