


CROWN

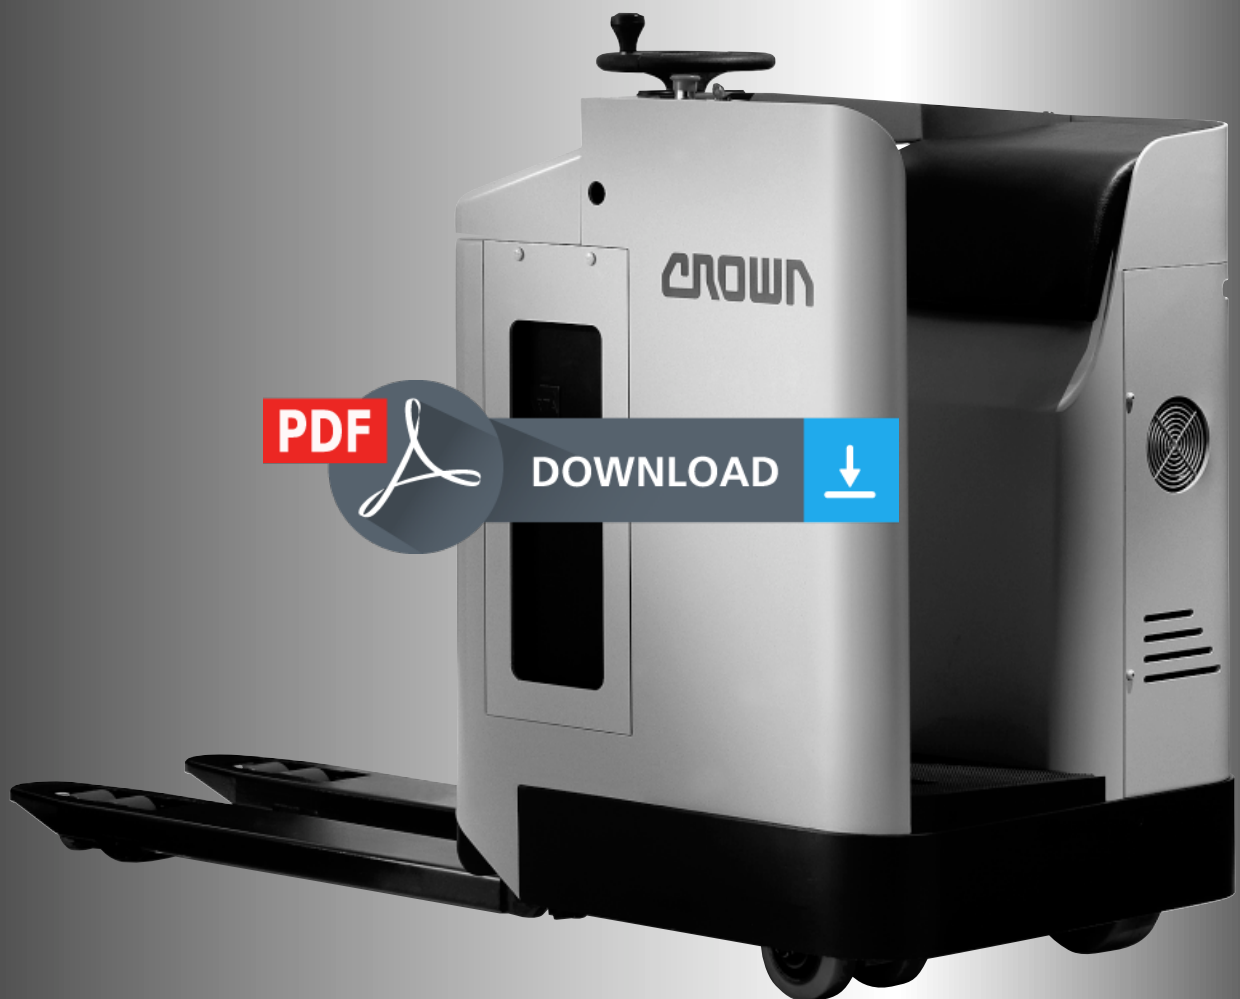

Service Manual
Wartungshandbuch
Manuel de maintenance

RT3010 Series

CROWN

TABLE OF CONTENT

Page intentionally left blank
Seite absichtlich freigelassen
Page intentionnellement laissée blanche

Table of Content

MA – SAFETY	PAGE	SER-NR. CUT	REV.
Safety Symbols used in the Manual	M/P-MA-0000-001		
General Maintenance and Repair Safety Notes	M/P-MA-0000-001		
- Maintenance and Repair	M/P-MA-0000-002		
- Before Leaving the Truck	M/P-MA-0000-002		
- Before Carrying out Work on the Truck	M/P-MA-0000-002		
- Before Operating the Truck	M/P-MA-0000-002		
Warnings and Labels on the Truck	M/P-MA-0000-002		
ITD – INTRODUCTION	PAGE	SER-NR. CUT	REV.
General	M/P-ITD-2800-001		
- Operating instruction	M/P-ITD-2800-001		
- Service training	M/P-ITD-2800-001		
- Replacement parts orders	M/P-ITD-2800-001		
- Structure of the Manual	M/P-ITD-2800-001		
- Page Numbers	M/P-ITD-2800-002		
Truck Data Numbering Sheet	M/P-ITD-2800-004		
M1 – LUBRICATION AND ADJUSTMENT	PAGE	SER-NR. CUT	REV.
Jacking up the Truck	M-1.0-2800-001		
Raising the Truck with a Crane	M-1.0-2800-002		
Towing the Truck	M-1.0-2800-002		
Component Access	M-1.0-2800-003		
Removing the Floorboard	M-1.0-2800-005		
Removing the Side Panel	M-1.0-2800-005		
Access to Drive Unit, Hydraulic System and Electrical Components	M-1.0-2800-005		
Maintenance	M-1.1-2800-001		
- Driver Participation	M-1.1-2800-001		
- Daily Maintenance Log	M-1.1-2800-001		
- Recommended Lubricants and Oils	M-1.1-2800-001		
- Lubricants	M-1.1-2800-002		
Grease items and grease intervals	M-1.2-2800-001		
- Inspection and Maintenance Schedule	M-1.2-2800-002		
- Daily or every 8 service hours	M-1.2-2800-003		
- Monthly or every 100 service hours	M-1.2-2800-005		
- Every three months or 250 service hours	M-1.2-2800-007		
- Every six months or 500 service hours	M-1.2-2800-009		
- Annually or every 1.000 service hours	M-1.2-2800-011		
- Every 2 years or 2.000 service hours	M-1.2-2800-011		
Caster	M-1.5-2800-001		
Torques	M-1.9-2800-002		
M2 – HYDRAULICS	PAGE	SER-NR. CUT	REV.
Hydraulic System	M/P-M2.1-2800-001		
Operation	M/P-M2.1-2800-001		
Removing the Hydraulic Unit	M-2.2-2800-001		
Replacing the Hydraulic Pump	M-2.3-2800-001		
- Disassembly	M-2.3-2800-001		
- Assembly	M-2.3-2800-001		
- Start-up	M-2.3-2800-001		
Replacing the Hydraulic Filter	M-2.3-2800-001		
- Replacing the Suction Filter	M-2.3-2800-001		
- Oil Change	M-2.3-2800-002		

Valve Setting Control	M-2.3-2800-004
Non-return valve control	M-2.3-2800-004
Safety Valve Control	M-2.3-2800-004
Safety Valve Setting	M-2.3-2800-004

M3 – DRIVE UNIT	PAGE	SER-NR. CUT	REV.
Gear Unit	M-3.1-2800-001		
Preparation	M-3.1-2800-001		
Maintenance	M-3.1-2800-002		
- General	M-3.1-2800-002		
Drive Unit Disassembly	M-3.1-2800-003		
Assembly	M-3.1-2800-003		
Adjusting the Bevel Wheel Set	M-3.1-2800-004		
Final Assembly	M-3.1-2800-004		
Drive Unit Re-Installation	M-3.1-2800-005		
Live Ring Bearing Replacement	M-3.1-2800-005		
Forcing out the Live Ring Bearing	M-3.1-2800-005		
Pressing in the Live Ring Bearing	M-3.1-2800-005		
Installation of the Live Ring Bearing in the Drive Unit ...	M-3.1-2800-005		

M4 – ELECTRICS	PAGE	SER-NR. CUT	REV.
Electrical Components	M-4.2-2800-001		
Transmitter (MMI, MMA, PT)	M-4.2-2800-001		
Fast / Slow Switch (HES)	M-4.2-2800-001		
Safety Pedal (PCT)	M-4.2-2800-001		
Lift / Lower Switch (PCS, PCD)	M-4.2-2800-001		
Lift Limit Switch (MFF)	M-4.2-2800-001		
Pressure Switch (PS)	M-4.2-2800-001		
Horn Switch (PCX)	M-4.2-2800-001		
Horn (CX)	M-4.2-2800-001		
Key Switch (QC)	M-4.2-2800-001		
Seat Height Adjustment Switch (PSDS)	M-4.2-2800-001		
Steering Angle-Dependent Speed Reduction Microswitch ..	M-4.2-2800-001		
Seat Height Adjustment Limit Switch (MF)	M-4.2-2800-002		
Fans (VNT)	M-4.2-2800-002		
Brake (FE)	M-4.2-2800-002		
Emergency Disconnect Switch (PE)	M-4.2-2800-002		
Fuses (F1, F2, FA)	M-4.2-2800-002		
Traction Motor (M1)	M-4.2-2800-002		
Pump Motor (M2)	M-4.2-2800-002		
Pump Contactor (K3)	M-4.2-2800-002		
Main Contactor (K4)	M-4.2-2800-002		
^{OPTION} Steering Motor (M3)	M-4.2-2800-002		
^{OPTION} Encoder (MS)	M-4.2-2800-002		
^{OPTION} Limit Switch (MF)	M-4.2-2800-002		
^{OPTION} Steering-Contactor (K6)	M-4.2-2800-002		
^{OPTION} Fuses (F3, FA3)	M-4.2-2800-002		
ES1 Traction Controller	M-4.3-2800-001		
General	M-4.3-2800-001		
- Precautionary Measures	M-4.3-2800-001		
Operational Features	M-4.3-2800-001		
- Speed Control	M-4.3-2800-001		
- Reduced Speed Range	M-4.3-2800-001		
- Downhill Speed Control	M-4.3-2800-001		
- Regenerative Braking	M-4.3-2800-001		
- Anti-Roll-Down-Function	M-4.3-2800-001		



Thank you very much
for your reading.
Please click here
to get more information.