



SP 3400 SERIES

Four-Point

MAINTENANCE MANUAL



Bestell Nummer: 812569-006
Revision: A • Printed in Germany

This master manual is subject to continual updates.
It is intended solely for companies authorized by CROWN.
The content of this manual, including copies, may not be transmitted to third parties.

CROWN Gabelstapler GmbH & Co. KG
– European Headquarters –
Moosacher Str. 52
80809 Munich
Germany

Tel: +49 (0)89 93 00 2 - 0
Fax: +49 (0)89 93 00 2 - 133

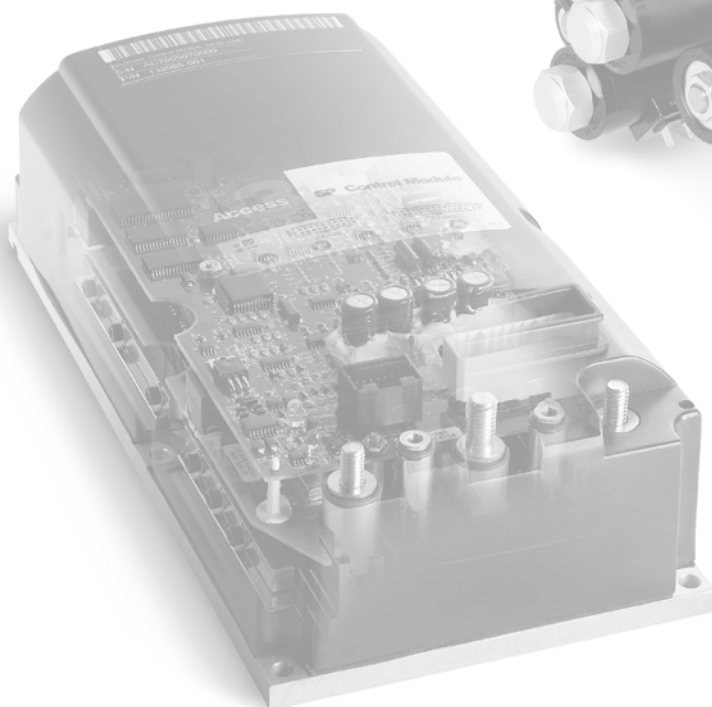
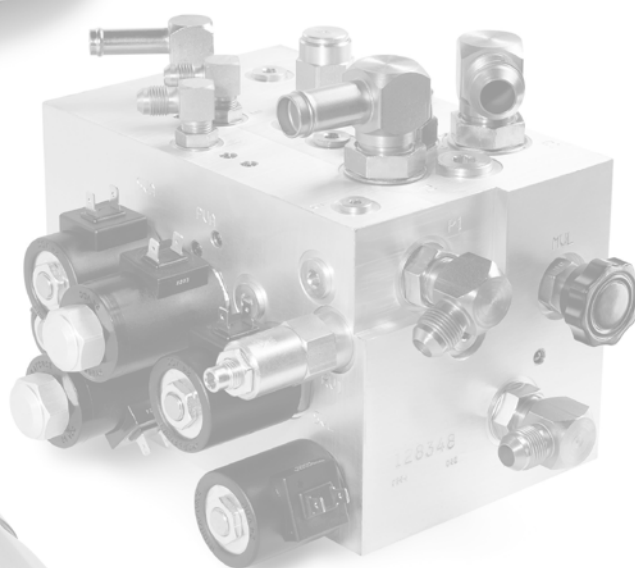


TABLE OF CONTENTS

Notes:



TABLE OF CONTENTS

TABLE OF CONTENTS

SAFETY	PAGE	SERIAL NO. CUT	REV.
Symbols Used in the Manual	3		
Safety Symbols	3		
General Symbols	3		
Fork direction	3		
General Safety Instructions	4		
Maintenance and Repair Instructions	4		
Maintenance and Repair	4		
Before Parking the Truck	4		
Before Working on the Truck	4		
Before Starting the Truck	4		
Warning and Instruction Decals on the Truck	5		
Control of Hazardous Energy	6		
Battery	6		
Safety Rules	6		
Battery Removal	7		
Battery Installation	7		
Lockout - Tagout	8		
Brake	8		
Capacitance	9		
Hydraulic System	10		
Depressurising the hydraulic system	10		
Accumulator	11		
Lifting and Blocking	12		
Required tools	12		
Raising the Side	12		
Raising the Drive Wheel	13		
Blocking Mast Stages	14		
Cleaning Methods	15		
 INTRODUCTION	 PAGE	 SERIAL NO. CUT	 REV.
General	19		
Operating Instructions	19		
Service Training	19		
Ordering Spare Parts	19		
Using the Manual	19		
Data Plate	20		
 LUBRICATION & ADJUSTMENT	 PAGE	 SERIAL NO. CUT	 REV.
Lubricants	25		
Maintenance	29		
General	29		
Component Accessibility	29		
Componentry	41		
Accumulator	42		
ALM1	42		
BRES1, BRES2	42		
BRK1	42		
BRS1	42		
CHS1, CHS2	44		



Thank you very much
for your reading.
Please click here
to get more information.