



SP 3400 Series Maintenance Manual



Order Number: 812563-006
Revision: A • Printed in Germany

This master manual is subject to continual updates.
It is meant exclusively for businesses authorized by CROWN.
It is not permitted to pass on the contents or copies thereof to third parties.

CROWN Gabelstapler GmbH & Co. KG
– European Headquarter –
Moosacher Str. 52
80809 München
Germany

Phone +49 (0)89 93 00 2 – 0

Fax +49 (0)89 93 00 2 – 133

CROWN



TABLE OF CONTENTS

Notes:

TABLE OF CONTENTS

SAFETY	PAGE	SER-NR. CUT	REV.
Symbols Used in the Manual	3		
Safety Symbols	3		
General Symbols	3		
Fork direction	3		
General Safety Instructions	4		
Maintenance and Repair Instructions	4		
Maintenance and Repair	4		
Before Parking the Truck	4		
Before Working on the Truck	4		
Before Starting the Truck	5		
Warning and Instruction Decals on the Truck	5		
Control of Hazardous Energy	7		
Battery	7		
Safety Rules	7		
Battery Removal	8		
Battery Installation	8		
Lockout - Tagout	8		
Brake	9		
Capacitance	10		
Hydraulic System	10		
Depressurising the hydraulic system	10		
Accumulator	11		
Lifting and Blocking	12		
Required tools	12		
Raising the Side	12		
Raising the Drive Wheel	13		
Blocking Masts	14		
Cleaning Methods	15		
INTRODUCTION	PAGE	SER-NR. CUT	REV.
General	19		
Operating Instructions	19		
Service Training	19		
Ordering Spare Parts	19		
Using the Manual	20		
Data Plate	20		
Model Number	21		
Truck Data Number	22		
LUBRICATION & ADJUSTMENT	PAGE	SER-NR. CUT	REV.
General	27		
Charts	30		
Componentry	40		
Accumulator	40		
ALM1			
Status Alarm	40		
BRES1, BRES2 (Option)			
Battery Restraint Switch	40		
BRK1			



Thank you very much
for your reading.
Please click here
to get more information.