



TSP6000 SERIES MAINTENANCE MANUAL



PDF



DOWNLOAD



Order Number: 812564-006
Revision: A • Printed in Germany

This master manual is subject to continual updates.
It is meant exclusively for businesses authorized by CROWN.
It is not permitted to pass on the contents or copies thereof to third parties.

CROWN Gabelstapler GmbH & Co. KG
– European Headquarter –
Moosacher Str. 52
80809 München
Germany

Phone +49 (0)89 93 00 2 – 0

Fax +49 (0)89 93 00 2 – 133

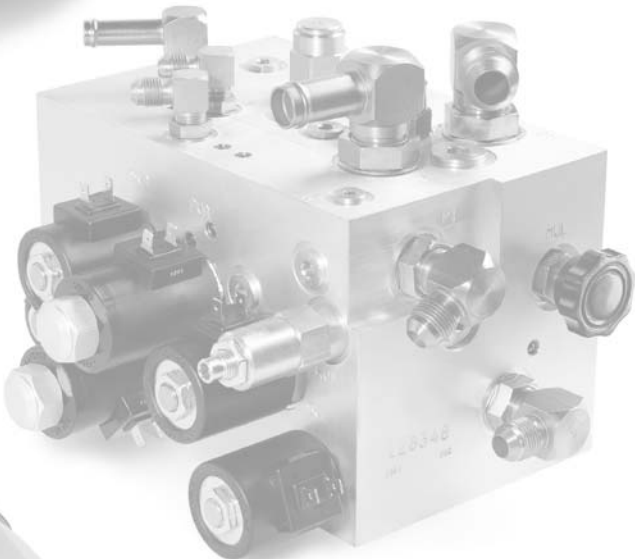


TABLE OF CONTENTS



Notes:



TABLE OF CONTENTS

TABLE OF CONTENTS

SAFETY	PAGE	SERIAL NO. CUT	REV.
Symbols Used in the Manual	3		
Safety Symbols	3		
General Symbols	3		
Fork direction	3		
General Safety Instructions	4		
Maintenance and Repair Instructions	4		
Maintenance and Repair	4		
Before Parking the Truck	4		
Before Working on the Truck	4		
Before Starting the Truck	4		
Warning and Instruction Decals on the Truck	5		
Control of Hazardous Energy	6		
Battery	6		
Safety Rules	6		
Battery Care	6		
Battery Removal	6		
Lockout - Tagout	7		
Brake	8		
Capacitance	8		
Hydraulic	9		
Depressurizing the Hydraulic System	9		
Lifting and Blocking	10		
Lifting one Side	10		
Lifting the Steered Wheel	11		
Masts	11		
Blocking Main Mast	11		
Blocking Auxiliary Mast	12		
Height Sensor	13		
Spring Removal	13		
Spring Installation	14		
Lifting Auxiliary Mast and Platform	15		
Auxiliary Mast	15		
Platform	15		
Service Platform	16		
Cleaning Methods	17		
INTRODUCTION	PAGE	SERIAL NO. CUT	REV.
General	21		
Operating Instructions	21		
Service Training	21		
Ordering Spare Parts	21		
Using the Manual	21		
Truck Data Number	22		
Table Lift Heights	23		
Table Guide Wheel Spreads	23		
LUBRICATION & ADJUSTMENT	PAGE	SERIAL NO. CUT	REV.
General	27		
Lube Identification	27		



Thank you very much
for your reading.
Please click here
to get more information.