


CROWN



MAINTENANCE MANUAL

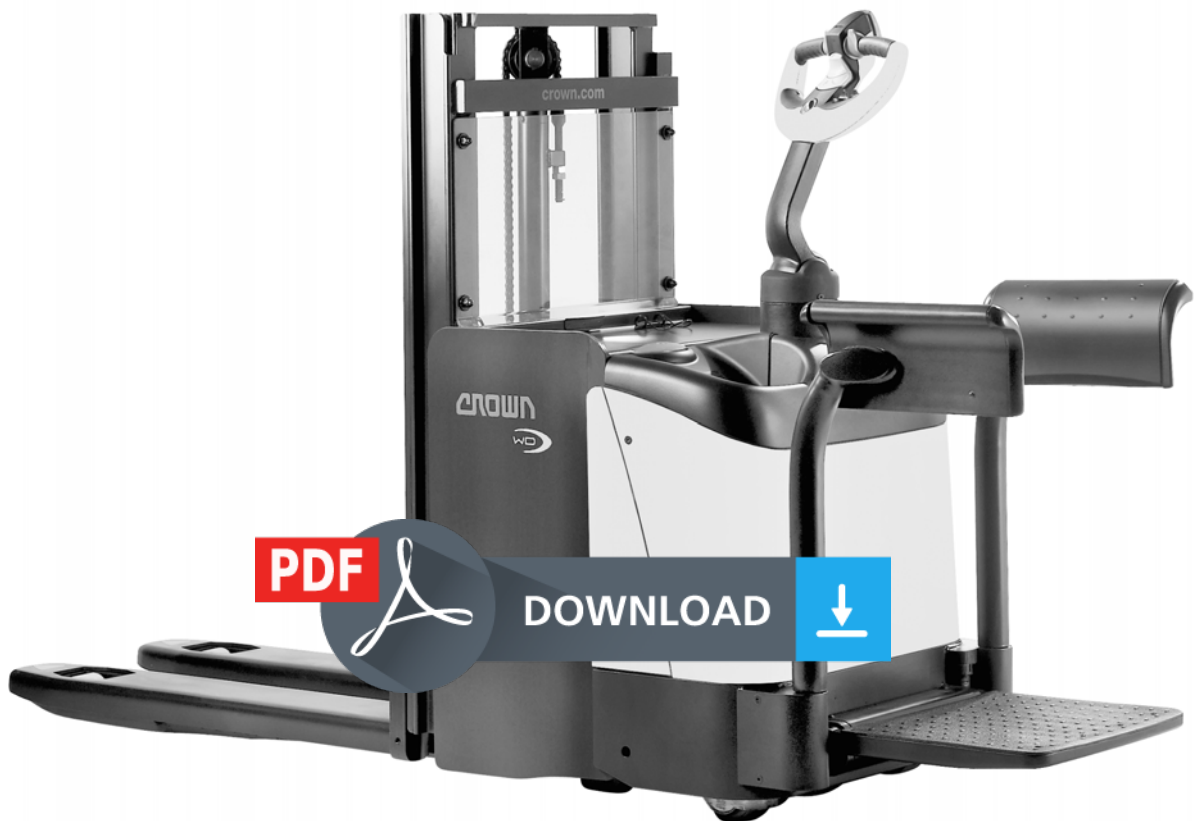

WD2300S SERIES

This master maintenance manual is subject to continual updates.
It is meant exclusively for businesses authorized by CROWN.
It is not permitted to pass on the contents or copies thereof to third parties.

CROWN Gabelstapler GmbH & Co. KG
– European Headquarter –
Moosacher Str. 52
80809 München
Germany

Phone +49 (0)89 93 00 2 – 0

Fax +49 (0)89 93 00 2 – 133

TABLE OF CONTENTS

MA- SAFETY	PAGE
Symbols Used in the Manual	3
General Safety Instructions	4
Maintenance and Repair Instructions	4
Maintenance and Repair	4
Before Parking the Truck	5
Before Working on the Truck	5
Before Starting the Truck	5
Warning and Instruction Decals on the Truck	5
ITD- INTRODUCTION	PAGE
Introduction	9
General	9
Operator manual	9
Service Training	9
Ordering Spare Parts	9
Using the Manual	10
M1- LUBRICATION & ADJUSTMENT	PAGE
Lifting the Truck	13
Lifting by Crane	13
Lifting with another Forklift Truck	13
Jacking up the Truck	14
Towing the Truck	15
Accessing the Components	16
Power unit cover	16
Control handle	16
Control handle knuckle	16
Mast	17
Platform and side restraint	17
Maintenance	19
Recommended Lubricants and Oils	19
Lubricants	19
Cold Store Trucks	19
Taking the truck out of service	19
Returning the Truck to Service	19
Inspection and Maintenance Schedule	21
Testing the Operation of the Safety Reverse Switch	25
Inspection and Maintenance Schedule	26
Lubrication Points	31
Drive Wheel and Castor Wheels	32
Setting the contact pressure	32
Torques	34

M2- HYDRAULICS	PAGE
Hydraulic Symbols	39
Hydraulic Unit Removal	43
Hydraulic System	44
Function	44
Lifting (Main Lift)	44
Lowering (Main Lift)	44
Lifting (Initial Lift)	44
Lowering (Initial Lift)	44
Hydraulic Reservoir Capacity	48
Changing the Hydraulic oil and Hydraulic Filter	48
Motor & Pump Assembly	50
Hydraulic lines and fittings	50
General Rules for Hydraulic Lines and Connections	50
Bleeding the Hydraulic System	51
Drift Test	51
Disassembly	51
Motor	52
Pump	52
Relief Valve	55
Replacing the relief valve	55
Relief valve setting	55
Relief valve test and setting	56
Testing and setting the load-sensing pressure switches	57
Setting the pressure switch points	58
Pressure switch PS1	58
Pressure switch PS2	58
Pressure switch PS3	58
M3- POWER UNIT	PAGE
Gear Unit	61
Preparatory Measures	61
Tools required:	61
Disassembly	61
Servicing	62
General	62
Gear Unit Disassembly / Assembly	64
Disassembly	64
Assembly	65
Preparing the gear unit	65
Assembling the flange shaft	65
Pinion Shaft Assembly	66
Adjusting the Bevel Wheel Set	66
Checking the Flank Tooth Bearing	67
Final Assembly	67
Re-Assembly	68
Traction motor	68

M4- ELECTRICAL SYSTEM	PAGE
Wire Colour Code	71
Abbreviations	72
Sundry Abbreviations	73
Electrical Wiring Diagrams	74
Electrical Components	76
Traction Pod (POT, FS, RS)	76
Fast / Slow Travel Switch (HSS)	76
Safety Reverse Switch (SAS)	76
Brake Switch (BRS)	76
Horn Switch (HNS1 & 2)	77
Key Switch (KYS)	77
Emergency Disconnect (BD)	77
Fuses (FU)	77
Thermo Switch (THS, optional)	77
Diode D4	77
Diode Block (DB)	77
Platform Logic (PLM)	77
Limit Switch (LMS1)	78
Limit Switch (LMS 2, only for masts > 1700mm)	78
Limit Switch (LMS3, only for masts > 1700mm)	78
Limit Switch LMS4	78
Pressure Switch (PS1)	78
Pressure Switch (PS2)	78
Pressure Switch (PS3)	78
Initial lift Switch	78
Hydraulic Control Module (HCM)	79
Raise / Lower Switches (RAS, LOS)	79
Control Handle Main PCB (Main PCB)	79
Hydraulic PCB (Hydr. PCB)	79
Speed Transmitter PCB (R/T PCB)	79
Heating Option (F/C)	79
Battery	81
General	81
Replacing the Battery	81
Battery Discharge Indicator (BDI)	82
Operation	82
General	83
Battery Discharge Indicator Setting (BDI)	83
Calibration for Wet Batteries	84
Troubleshooting	85
Contactors	86
Inspection	86
Contacts	86
Coils	86
Springs	86
Servicing	87
Dismantling	87
Assembly	87



Thank you very much
for your reading.
Please click here
to get more information.