



# CROWN



**Service Manual**  
Wartungshandbuch  
Manuel de maintenance

**WP2000S** Series



---

# **CROWN**

## ***TABLE OF CONTENT***

---

---

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

## Table of Content

<b>MA – SAFETY</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Safety Symbols used in the Manual</b> .....	<b>M/P-MA-0000-001</b>		
<b>General Maintenance and Repair Safety Notes</b> .....	<b>M/P-MA-0000-001</b>		
- Maintenance and Repair .....	M/P-MA-0000-002		
- Before Leaving the Truck .....	M/P-MA-0000-002		
- Before Carrying out Work on the Truck .....	M/P-MA-0000-002		
- Before Operating the Truck .....	M/P-MA-0000-002		
<b>Warnings and Labels on the Truck</b> .....	<b>M/P-MA-0000-002</b>		
<b>ITD – INTRODUCTION</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>General</b> .....	<b>M/P-ITD-1720-501</b>		
- Operating instruction .....	M/P-ITD-1720-501		
- Service training .....	M/P-ITD-1720-501		
- Replacement parts orders .....	M/P-ITD-1720-501		
- Structure of the Manual .....	M/P-ITD-1720-501		
- Page Numbers .....	M/P-ITD-1720-502		
<b>Truck Data Numbering Sheet</b> .....	<b>M/P-ITD-1720-504</b>		
<b>M1 – LUBRICATION AND ADJUSTMENT</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Component Access</b> .....	<b>M-1.0-1720-001</b>		
<b>Jacking up the Truck</b> .....	<b>M-1.0-1720-001</b>		
<b>Lifting by Crane</b> .....	<b>M-1.0-1720-001</b>		
<b>Lifting by Truck</b> .....	<b>M-1.0-1720-002</b>		Rev.1 09/00
<b>Components</b> .....	<b>M-1.0-1720-003</b>		Rev.1 09/00
<b>Maintenance</b> .....	<b>M-1.1-1720-004</b>		
- Driver Participation .....	M-1.1-1720-001		
- Daily Maintenance Log .....	M-1.1-1720-001		
- Recommended Lubricants and Oils .....	M-1.1-1720-001		
- Lubricants .....	M-1.1-1720-001		
- Cold Store Trucks .....	M-1.1-1720-001		
- Check and Maintenance Schedule .....	M-1.2-1720-001		
- Safety Reverse Switch - Functional Test .....	M-1.2-1720-003		Rev.1 09/00
- Grease items and grease intervals .....	M-1.2-1720-010		Rev.1 09/00
<b>Adjustment of castor- and drivewheel pressure</b> .....	<b>M-1.5-1720-501</b>		
<b>Torques</b> .....	<b>M-1.9-0000-001</b>		
<b>M2 – HYDRAULICS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Hydraulic Symbols</b> .....	<b>M-2.0-0000-001</b>		
<b>Hydraulic System</b> .....	<b>M-2.1-1720-001</b>		
- Removal .....	M-2.2-1720-001		
- Hydraulikpump .....	M-2.3-1720-001		
- Filter .....	M-2.3-1720-002		
- Pressure Filter .....	M-2.3-1720-002		
- Suction and Return Filters .....	M-2.3-1720-002		
- Oil Change .....	M-2.3-1720-002		
- Commissioning .....	M-2.3-1720-002		
<b>M3 – DRIVE UNIT</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Gear Unit</b> .....	<b>M-3.1-1720-501</b>		
- Removal .....	M-3.1-1720-501		
- Repair .....	M-3.1-1720-501		
- Disassembly/Assembly .....	M-3.1-1720-503		
- Installation .....	M-3.1-1720-505		



Thank you very much  
for your reading.  
Please click here  
to get more information.