




Service and Parts Manual

Wartungs- und
Ersatzteillhandbuch

Manuel de maintenance
et de pièces détachées

Series WE/WS

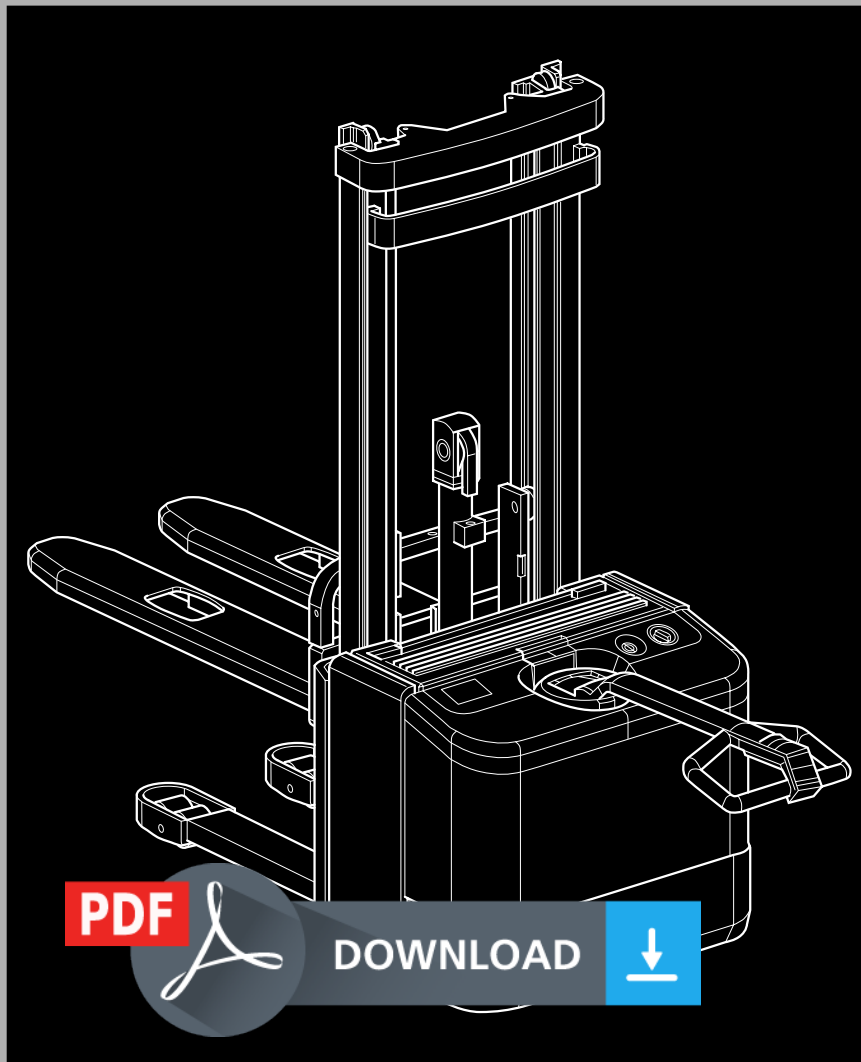

WE 1.25t WE 1.6t WS 1.35t WS 1.8t	REVISION	DESCRIPTION	SERIAL NUMBER OF UNITS USED ON	PAGE IDENTIFICATION NUMBER
	NUMBER		FROM: DATE	
	DATE		TO: DATE	
X X . X X		Introduction		ITD-0000-001
X X . X X		General maintenance instruction		MA-0000-001
SECTION		M1 LUBRICATION AND ADJUSTMENT		
X X . X X		Component access		M1.0-4220-001
X X . X X		Raising the truck		M1.0-4220-002
X X . X X		Inspection and maintenance plan		M1.1-4220-001
X X . X X		Service scope		M1.1-4220-001
X X . X X		Inspection and maintenance plan 8 hrs.		M1.1-4220-002
X X . X X		Inspection and maintenance plan 100 hrs.		M1.1-4220-004
X X . X X		Inspection and maintenance plan 250/500 hrs.		M1.1-4220-006
X X . X X		Inspection and maintenance plan 1000 hrs.		M1.1-4220-008
X X . X X		Lubrication		M1.2-4220-001
X X . X X		General		M1.2-4220-001
X X . X X		Lubrication points		M1.2-4220-006
X X . X X		Lubricants and oil recommendations table		M1.3-0000-001
X X . X X		Torque values		M1.9-0000-001
SECTION		M2 HYDRAULIC MAINTENANCE		
X X . X X		Hydraulic schematic symbols		M2.0-0000-001
X X . X X		Hydraulic system		M2.1-4220-001
X X . X X		General		M2.1-4220-001
X X . X X		Hydraulic oil tank		M2.1-4220-002
X X . X X		Valve block		M2.1-4220-005
X X . X X		Hydraulic oil pump		M2.1-4220-006
X X . X X		Hydraulic system/softlift		M2.1-4220-025
X X . X X		Hydraulic system		M2.7-4220-001
X X . X X		Ventilate TL/TF and TT Mast		M2.7-4220-001
SECTION		M3 DRIVE UNIT MAINTENANCE		
X X . X X		Drive Unit		M3.0-4220-001
X X . X X		Drive wheel		M3.0-4220-001
X X . X X		Gearbox		M3.0-4220-003
X X . X X		Gearbox/Repair		M3.0-4220-004
X X . X X		Turntable bearing		M3.0-4220-008
X X . X X		Pivoting carriage		M3.9-4220-001
X X . X X		General		M3.9-4220-001
X X . X X		Wheels and Tyres		M3.9-4220-003
X X . X X		General		M3.9-4220-003
X X . X X		Load wheel, single axle		M3.9-4220-003
X X . X X		Load wheel, tandem axle		M3.9-4220-004
X X . X X		Support wheel mounting		M3.9-4220-005
SECTION		M4 ELECTRICAL MAINTENANCE		
X X . X X		Basic electrics		M4.0-0000-001
X X . X X		Wiring colour code		M4.0-0000-001
X X . X X		Colour coding in accordance with DIN 47100		M4.0-1710-002

REVISION WE 1.25t WE 1.6t WS 1.35t WS 1.8t	REVISION	DESCRIPTION	SERIAL NUMBER OF UNITS USED FOR	PAGE IDENTIFICATION NUMBER
	NUMBER DATE		FROM: TO:	DATE DATE
X X . X X		Index of abbreviations switch symbols		M4.0-0000-003
X X . X X		Typical electrical symbols		M4.0-0000-005
X X . X X		Transistor control with pulse width modulation		M4.0-4220-006
X X . X X		Electrical components		M4.2-4220-001
X X . X X		Switches		M4.2-4220-001
X X . X X		Controller		M4.3-1710-001
X X . X X		General		M4.3-1710-001
X X . X X		Explanation of function		M4.3-1710-002
X X . X X		Pilot wire pins		M4.3-1710-007
X X . X X		Adjustment panel		M4.3-1710-008
X X . X X		LED Codes		M4.3-1710-009
X X . X X		Maintenance		M4.3-1710-011
X X . X X		Removal / installation		M4.3-1710-012
X X . X X		Safety instruction		M4.3-1710-013
X X . X X		Controler check		M4.3-1710-014
X X . X X		Programmer		M4.4-1710-001
X X . X X		General		M4.4-1710-001
X X . X X		Keypad definition		M4.4-1710-002
X X . X X		Operating modes		M4.4-1710-006
X X . X X		Values and fault codes for Controller		M4.5-4220-001
X . . . X		Controller settings		M4.5-4220-001
. . X . . X		Controller settings		M4.5-4220-003
X X . X X		Program menu		M4.5-1710-005
X X . X X		Test menu		M4.5-1710-006
X X . X X		Diagnostic and special diagnostic menu		M4.5-1710-007
X X . X X		Special program menu		M4.5-1710-008
X X . X X		Trouble shooting chart		M4.5-1710-009
X X . X X		Fault recovery		M4.5-1710-012
X X . X X		Battery level indicator/Operating hours counter		M4.6-4220-001
X X . X X		Key Switch		M4.8-4220-001
X X . X X		Disassembly/Assembly		M4.8-4220-001
X X . X X		Reverse safety switch		M4.8-4220-002
X X . X X		Drive switch		M4.8-4220-002
X X . X X		Switch raise/lower		M4.8-4220-005
X X . X X		Horn switch		M4.8-4220-006
X X . X X		Speed limiter switch		M4.8-4220-006
X X . X X		Brake switch		M4.8-4220-007
X X . X X		Override switch		M4.8-4220-009
X X . X X		Emergency off switch		M4.8-4220-010
X X . X X		Distributor board		M4.9-4220-001
X X . X X		Motor		M4.10-4220-001
X X . X X		General		M4.10-4220-001
X . . . X		Pump motor		M4.10-4220-002
X X . X X		Disassembly/Assembly		M4.10-4220-002
X X . X X		Maintenance/Repair		M4.10-4220-003
. . X . . X		Pump motor		M4.10-4220-006
X X . X X		Drive motor		M4.10-4220-008
X X . X X		Disassembly		M4.10-4220-006
X X . X X		Repair		M4.10-4220-007
X X . X X		Assembly		M4.10-4220-009
X X . X X		Maintenance		M4.10-4220-009
X X . X X		Electrics panel		M4.11-4220-001
X X . X X		General		M4.11-4220-001

WE 1.25t WE 1.6t WS 1.35t WS 1.8t	REVISION	DESCRIPTION	SERIAL NUMBER OF UNITS USED ON	PAGE IDENTIFICATION NUMBER
	NUMBER DATE		FROM: TO:	DATE DATE
X X.X X		Direction of contactor		M4.11-4220-002
X X.X X		General		M4.11-4220-002
X X.X X		Disassembly		M4.11-4220-002
X X.X X		Repairs		M4.11-4220-003
X X.X X		Pump contactor		M4.11-4220-004
X X.X X		General		M4.11-4220-004
X X.X X		Disassembly		M4.11-4220-004
X X.X X		Repairs		M4.11-4220-004
X X.X X		Battery		M4.12-4220-001
X X.X X		General		M4.12-4220-001
X X.X X		Checking the electrolyte level		M4.12-4220-001
X X.X X		Charging the battery		M4.12-4220-002
X X.X X		Maintenance		M4.12-4220-004
X X.X X		Battery connections		M4.12-4220-005
X X.X X		General		M4.12-4220-005
X X.X X		Disassembly		M4.12-4220-005
X X.X X		Repairs		M4.12-4220-005
X X.X X		Assembly		M4.12-4220-006
X X.X X		Test procedures (PMT)		M4.20-4220-001
X X.X X		General		M4.20-4220-001
SECTION		M5 BRAKE MAINTENANCE		
X X.X X		Brakes system		M5.0-4220-001
X X.X X		General		M5.0-4220-001
X X.X X		Setting		M5.0-4220-003
SECTION		M6 STEERING MAINTENANCE		
X X.X X		Steering		M6.0-4220-001
X X.X X		General		M6.0-4220-001
X X.X X		Removal of control handle		M6.0-4220-002
X X.X X		Cross joint		M6.0-4220-004
X X.X X		Chain tensioning device		M6.0-4220-005
X X.X X		Steering chain		M6.0-4220-006
SECTION		M7 MAST MAINTENANCE		
X X.X X		Mast		M7.0-4220-001
X X.X X		General		M7.0-4220-001
X X.X X		TL Mast		M7.0-4220-001
X X.X X		TF Mast		M7.0-4220-001
X X.X X		TT Mast		M7.0-4220-002
X X.X X		Mast disassembly/assembly		M7.0-4220-002
X X.X X		Fork carriage disassembly/assembly		M7.0-4220-003
X X.X X		Mast maintenance		M7.0-4220-004
X X.X X		Greasing roller tracks		M7.0-4220-004
X X.X X		Roller disassembly		M7.0-4220-005
X X.X X		Lift chain inspection		M7.5-0000-001
X X.X X		General		M7.5-0000-001
X X.X X		Lubrication		M7.5-0000-001
X X.X X		Identifying damages		M7.5-0000-002
X X.X X		Gabelzinkenprüfung		M7.8-0000-001
X X.X X		General		M7.8-0000-001
X X.X X		Fork identification		M7.8-0000-001

WE 1.25t WE 1.6t WS 1.35t WS 1.8t	REVISION	DESCRIPTION	SERIAL NUMBER OF UNITS USED FOR	PAGE IDENTIFICATION NUMBER
	NUMBER DATE		FROM: TO:	DATE DATE
	X X . X X	Repairs		M7.8-0000-002

SECTION M8 CYLINDER MAINTENANCE

X X . X X	Cylinder	M8.0-4220-001
X X . X X	General	M8.0-4220-001
X X . X X	Simplex mast cylinder	M8.0-4220-001
X X . X X	Lifting cylinder	M8.0-4220-002

SECTION M9 COVERS

X X . X X	Panels/Covers	M9.0-4220-001
X X . X X	General	M9.0-4220-001
X X . X X	Protective cover	M9.0-4220-001
X X . X X	Battery cover	M9.0-4220-001
X X . X X	Nuckle cover	M9.0-4220-002

SECTION DIA WIRING DIAGRAMS

X X . X X	Electrical diagrams	DIA-4220-001X
X X . X X	Schematic	DIA-4220-001X
X X . X X	Distribution panel	DIA-4220-002X
X X . X X	Handle and BDI	DIA-4220-003X
X X . X X	Traction controller	DIA-4220-004X
X X . X X	Brake/Option: charger	DIA-4220-005X
X X . X X	Electrical diagrams	DIA-4220-025X
X X . X X	Schematic	DIA-4220-025X
X X . X X	Distribution panel	DIA-4220-026X
X X . X X	Handle and BDI	DIA-4220-027X
X X . X X	Traction controller	DIA-4220-028X
X X . X X	Brake/Option: charger	DIA-4220-029X
X X . X X	Propotional electronic	DIA-4220-030X

SECTION HYD HYDRAULIC SCHEMATICS

X X . X X	Hydraulck Schematic	HYD-4220-001
X X . X X	Simplex	HYD-4220-001
X X . X X	Duplex	HYD-4220-002
X X . X X	Triplex	HYD-4220-002
X X . X X	Simplex	HYD-4220-003
X X . X X	Duplex	HYD-4220-004
X X . X X	Triplex	HYD-4220-004

SECTION WZ TOOLS

X X . X X	Tools	WZ -4220-001
-----------	-------	--------------



Thank you very much
for your reading.
Please click here
to get more information.