



Bobcat®


Operation & Maintenance Manual Three-Point Snow Blower

3SB

(54 Inch) S/N ABCW00101 & Above

(66 Inch) S/N ABCU00101 & Above

(72 Inch) S/N AB4K00101 & Above

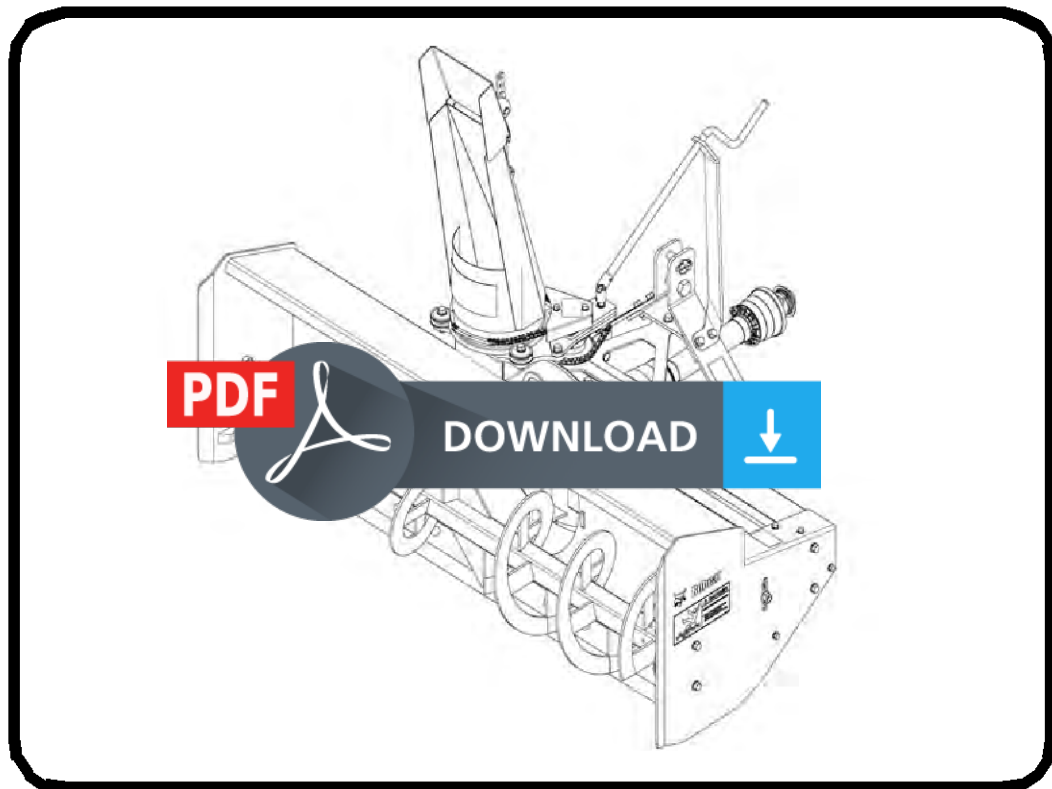

CONTENTS

FOREWORD.....	III
SAFETY & TRAINING RESOURCES.....	IX
OPERATING INSTRUCTIONS.....	OI-1
PREVENTIVE MAINTENANCE.....	PM-1
MACHINE SIGN TRANSLATIONS.....	MST-1
SPECIFICATIONS.....	SPEC-1
WARRANTY.....	WARRANTY-1
ALPHABETICAL INDEX.....	INDEX-1

REFERENCE INFORMATION

Write the correct information for YOUR three-point snow blower in the spaces below. Always use these numbers when referring to your three-point snow blower.

Three-Point Snow Blower Serial Number

NOTES:

YOUR BOBCAT® DEALER:

ADDRESS:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium

FOREWORD

**SAFETY &
TRAINING
RESOURCES**

**OPERATING
INSTRUCTIONS
(OI)**

**PREVENTIVE
MAINTENANCE
(PM)**

**MACHINE SIGN
TRANSLATIONS
(MST)**

**SPECIFICATIONS
(SPEC)**

WARRANTY

**ALPHABETICAL
INDEX**



FOREWORD

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the three-point snow blower. **READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR three-point snow blower.** If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED	V
DELIVERY REPORT	VI
FEATURES AND ACCESSORIES	VIII
Optional Items	VIII
Standard Items	VIII
IDENTIFICATION AND MACHINE SIGNS (DECALS)	VII
SERIAL NUMBER LOCATION	VI
Implement Serial Number	VI



Thank you very much
for your reading.
Please click here
to get more information.