

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

L213 L223

L215 L225

L218 L230

L220

Tier 3

200 Series Skid Steer Loader

PIN NGM418237 and above

C227

C232

C238

Tier 3

200 Series Compact Track Loader

PIN NGM418237 and above

PDF



DOWNLOAD



Part number 47948653

1st edition English

May 2016



Contents

1 GENERAL INFORMATION

Note to the owner.....	1-1
Electro-Magnetic Compatibility (EMC)	1-3
Product identification	1-4
Operator's manual storage on the machine	1-8
Machine orientation.....	1-9
Machine components.....	1-10

2 SAFETY INFORMATION

Safety rules and signal words	2-1
Safety rules.....	2-2
Utility safety.....	2-8
Proper entry and exit	2-9
Starting and stopping precautions.....	2-11
Seat belt precautions	2-12
Specific precautions to this machine	2-14
Fire extinguisher.....	2-14
Roll Over Protective Structure (ROPS).....	2-15
Welding on the machine.....	2-17
Loader arm lock and cab tilt procedure - radial lift machines.....	2-18
Loader arm lock and cab tilt procedure - vertical lift machines.....	2-22
No engine power - loader arm down control	2-26
Emergency exit	2-27
Ecology and the environment	2-28
Safety signs	2-29

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Door latches, cab.....	3-1
Window glass, cab	3-2
Windshield wiper and washer controls	3-2
Cab air louvers	3-3

OPERATOR'S SEAT

Standard seat.....	3-4
Mechanical suspension seat	3-4
Air seat	3-4
Seat belt operation	3-5
Shoulder belt	3-6
Restraint bar (if equipped).....	3-6

MECHANICAL HYDRAULIC CONTROLS

Steering and travel	3-7
Moving the machine	3-7
Turning the machine.....	3-8

Lift arm and bucket controls	3-9
Hand controls	3-9
Foot pedals	3-10

ELECTRO HYDRAULIC CONTROLS

Control pattern overview	3-11
Standard H control pattern	3-11
Standard ISO control pattern	3-12
Electro-hydraulic control handle adjustment	3-12
H control pattern steering and travel	3-13
Hand controls	3-13
Moving the machine	3-14
Turning the machine	3-15
H control pattern lift arm and bucket controls	3-16
Lift arm raise/lower control	3-16
Bucket curl/dump control	3-17
ISO control pattern steering and travel	3-18
Moving the machine	3-18
Turning the machine	3-19
ISO control pattern lift arm and bucket controls	3-21
Lift arm and bucket controls	3-21

CONTROL HANDLES

Switch configurations	3-22
Two-speed function	3-27

AUXILIARY HYDRAULICS

Standard auxiliary hydraulics	3-28
High flow auxiliary hydraulics	3-30
Enhanced High Flow (EHF) auxiliary hydraulics	3-32

INSTRUMENT CLUSTER

Electronic Instrument Cluster (EIC)	3-34
Advanced Instrument Cluster (AIC)	3-41
Instrument cluster	3-48
Left-hand column switch identification	3-64
ISO or H pattern control switch	3-67
Machine lights	3-68

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Operating Instructions	4-1
------------------------------	-----

STARTING THE UNIT

Engine operation	4-3
Operating in extreme temperatures	4-5
Throttle	4-6



Thank you very much
for your reading.
Please click here
to get more information.