



YZF-R1P YZF-R1PC

SERVICE MANUAL

LIT-11616-15-47 5PW-28197-10


CHAPTER TITLES

GENERAL INFORMATION	∂ **•3
GENERAL INFORMATION	GEN INFO
SPECIFICATIONS	-
SPECIFICATIONS	SPEC 2
PERIODIC INSPECTION AND	(4)
ADJUSTMENT	INSP 3
FNOINE	1
ENGINE	ENG 4
COOLING	X
COOLING	cool 5
CARRIDETION	4
CARBURETION	CARB 6
CHACCIC	Ø56
CHASSIS	CHAS
EL ECTRIC A I	
ELECTRICAL	ELEC 8
TROUBLE CHOOTING	?
TROUBLESHOOTING	TRBL 9



EAS00043

AIR FILTER CASE

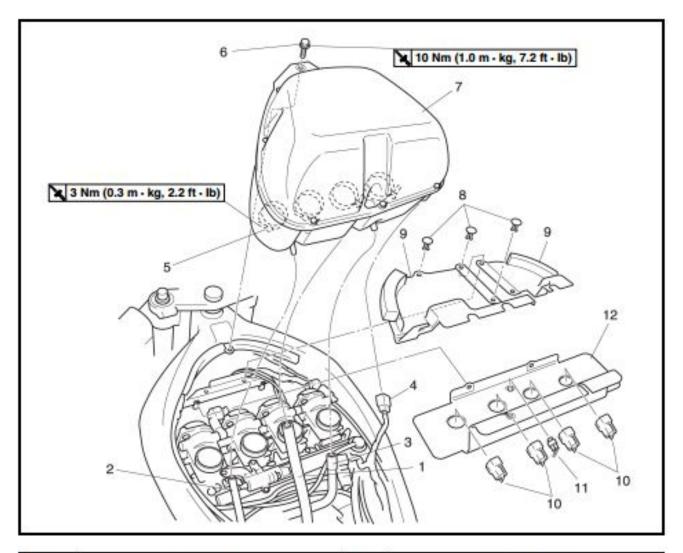

Order	Job/Part	Q'ty	Remarks
	Removing the air filter case		Remove the parts in the order listed.
	Rider seat and fuel tank		Refer to "SEATS" and "FUEL TANK".
1	Crankcase breather hose	1	
2	Air filter case breather hose	1	
3	Al system hose	1	
4	Intake temperature sensor coupler	1	
5	Clamp screw	4	Loosen.
6	Bolt	1	100000
7	Air filter case	1	
8	Quick fastener	3	
9	Ignition coil plate	2	
10	Ignition coil coupler	4	Disconnect.
11	Cylinder identification sensor coupler	1	3/1/2 8/3/2/
12	Rubber baffle	1	
			For installation, reverse the removal procedure.



Thank you very much for your reading.

Please click here to get more information.