





YZF-R1S YZF-R1SC

SERVICE MANUAL

LIT-11616-17-55 5VY-28197-10

EASDOOT.

TABLE OF CONTENTS

GENERAL INFORMATION	GEN INFO
SPECIFICATIONS	SPEC 2
PERIODIC CHECKS AND ADJUSTMENTS	CHK ADJ 3
CHASSIS	o√o CHAS 4
ENGINE	ENG 5
COOLING SYSTEM	cool 6
FUEL INJECTION SYSTEM	FI 7
ELECTRICAL SYSTEM	ELEC 8
TROUBLESHOOTING	? TRBL 9

CABLE ROUTING


SPEC

- the water hose and water pipe.
- H Route the lead by the inside of the water hose and water pipe.
- T Route by the outside of vehicle away from the water hose.
- J Point the tip of the clamp (excessive part) to the down rear side of the vehicle. Fasten the wire harness with a clamp.
- K Route the water hose so that it is Q Routing of the fuel tank drain placed at the outermost position finally after routing other leads and hoses in the guide.
- To the coolant reservoir tank

- G Route the lead by the inside of M There should be no exposure of R Arrange so as not for each hose bared conductors due to the displacement of the tube.
 - N Route the coolant reservoir tank drain hose so that it is routed at the innermost position to each hose and lead.
 - O Can be routed in any order.
 - P Align the molded part of the fuel tank drain hose with the stay 1.
 - hose.

EXUP servo motor, oil level switch and sidestand switch leads are omitted in this drawing.

to cross in the part between "BB" from the section "AA" which is in the illustration.

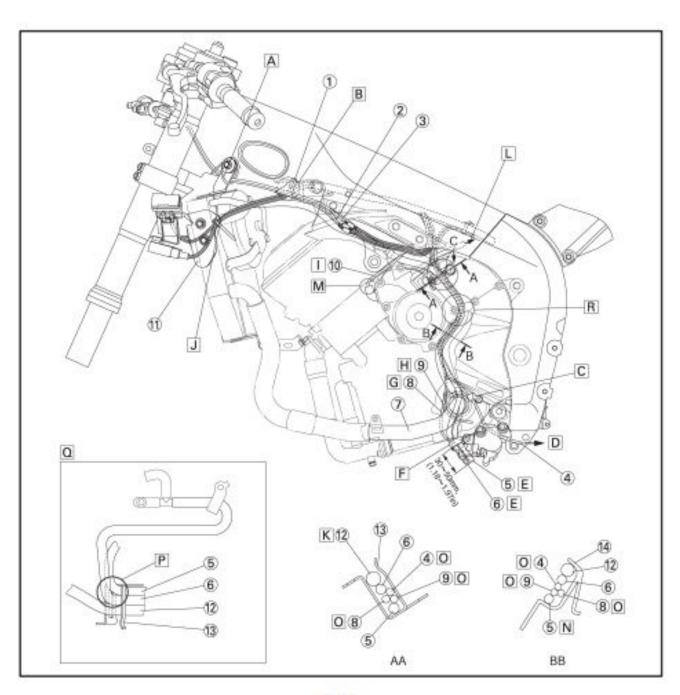



Thank you very much for your reading.

Please click here to get more information.