

Yamaha YZF1000RJ(C) Motorcycle Service Repair Workshop Manual












YAMAHA


**YZF1000R
YZF1000RJC**

SERVICE MANUAL


CHAPTER TITLES

GENERAL INFORMATION	
	GEN INFO 1
SPECIFICATIONS	
	SPEC 2
PERIODIC INSPECTION AND ADJUSTMENT	
	INSP ADJ 3
ENGINE	
	ENG 4
COOLING	
	COOL 5
CARBURETION	
	CARB 6
CHASSIS	
	CHAS 7
ELECTRICAL	
	ELEC 8
TROUBLESHOOTING	
	TRBL SHTG 9


STEERING HEAD INSPECTION

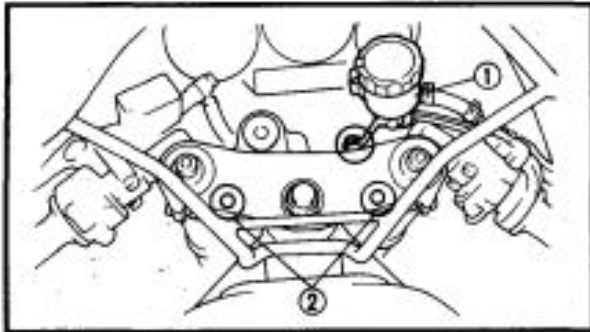


- 4.Remove:
- Brake reservoir ①
 - Blind plugs ②

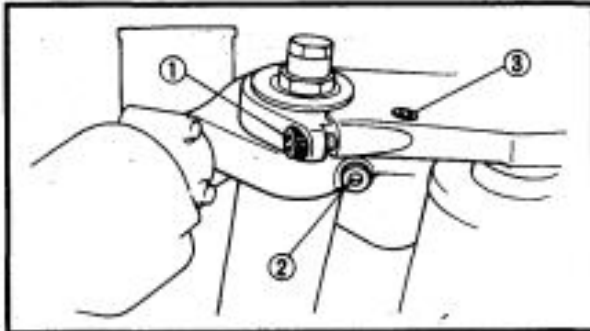

- 5.Loosen:
- Pinch bolts (upper bracket) ①
 - Pinch bolts (handlebar boss) ②
- 6.Remove:
- Bolts (handlebar) ③
 - Handlebar bosses (from the upper bracket)

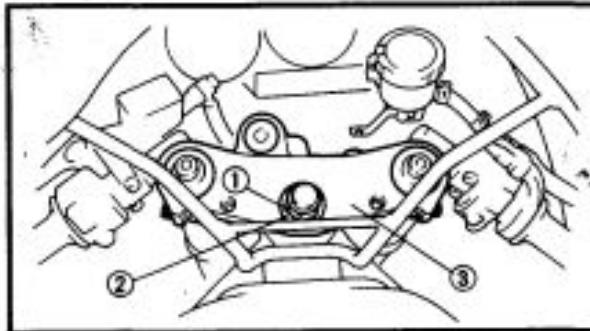

- 7.Remove:
- Nut (upper bracket) ①
 - Washer ②
 - Upper bracket ③

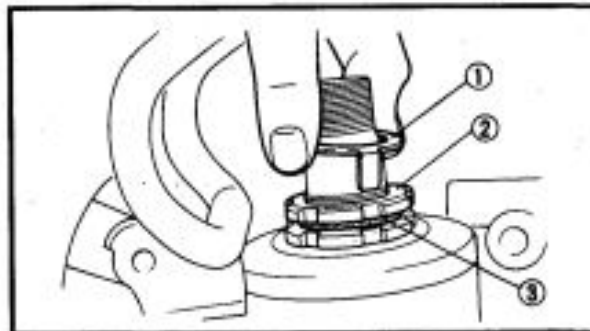


- 8.Adjust:
- Steering head


Adjustment steps:

- Remove the special washer ①, the upper ring nut ② and the rubber washer ③.
- Loosen the lower ring nut ④.
- Use a ring nut wrench ⑤ to tighten the lower ring nut.

NOTE:

Set the torque wrench at a right angle to the ring nut wrench.

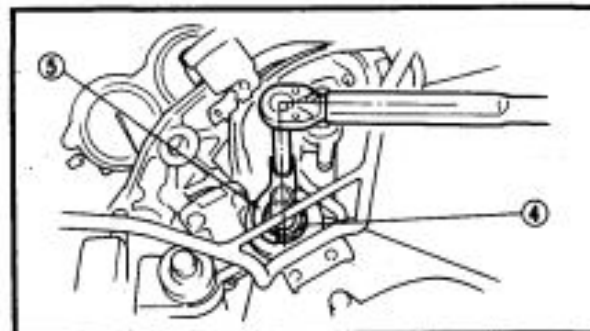

	Ring nut wrench: YU-33975/90890-01403
---	---



Thank you very much
for your reading.
Please click here
to get more information.