




Bobcat®

Operation & Maintenance Manual Angle Blade & Tine Rake

3AB60 - S/N A1FZ00101 & Above
3AB84 - S/N A1G000101 & Above
3AB84HD - S/N A1G100101 & Above
3AB96HD - S/N A1G200101 & Above

3TR72 - S/N A1FT00101 & Above
3TR84 - S/N A1FU00101 & Above

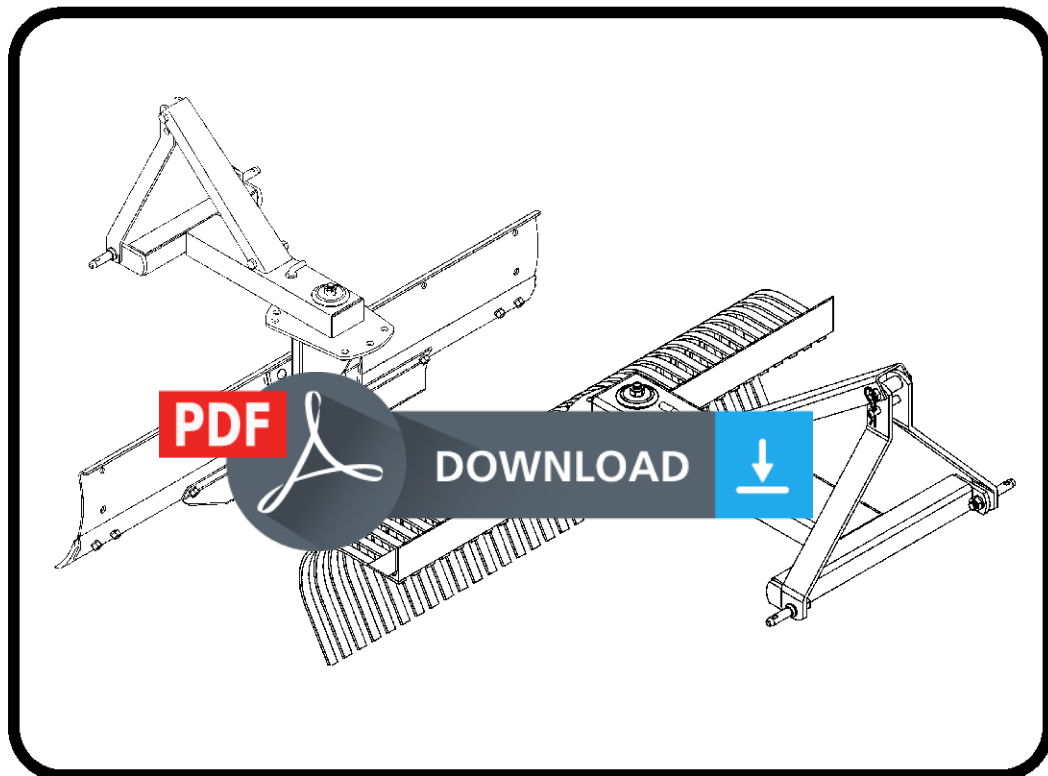

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



To the Owner/Operator/Dealer

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents. **BEFORE YOU START!!** Read the safety messages on the implement and shown in your manual. Observe the rules of safety and common sense!

WARNING

TO AVOID SERIOUS INJURY OR DEATH:

1. READ AND UNDERSTAND OPERATOR'S MANUAL.
2. TRACTOR MUST BE EQUIPPED WITH ROLL-OVER PROTECTION (ROPS) AND SWAY CHAINS.
3. ALWAYS WEAR SAFETY GLASSES, SAFETY SHOES, AND SEAT BELT FASTENED TIGHTLY.
4. STOP TRACTOR, LOCK BRAKES, AND BLOCK UP OR SUPPORT IMPLEMENT SECURELY BEFORE WORKING UNDER RAISED COMPONENTS.
5. ALLOW NO RIDERS AT ANY TIME ON TRACTOR OR IMPLEMENT. FALLING OFF CAN KILL.
6. KEEP BYSTANDERS CLEAR OF MOVING PARTS AND WORKING AREA. KEEP CHILDREN AWAY!
7. DO NOT LIFT, LOWER, OR OPERATE UNLESS EVERYONE IS CLEAR OF IMPLEMENT.
8. USE INCREASED CAUTION ON SLOPES & NEAR BANKS AND DITCHES TO PREVENT OVERTURN.
9. LOCK LIFT LEVER UP FOR TRANSPORT. HAVE SMV SIGN VISIBLE. FOLLOW LOCAL LAWS.
10. USE PARKING STAND OR BLOCK UP WHEN UNHITCHING FROM TRACTOR.

999200

WARRANTY INFORMATION:

Read and understand the complete Warranty Statement found in this Manual. The use of "will-fit" parts will void your warranty and can cause catastrophic failure with possible injury or death.

Table of Contents

SAFETY SECTION	1-1
Safety Messages	1-2
Decal Location	1-9
Decal Location	1-13
Decal Description	1-15
Federal Laws and Regulations	1-17
INTRODUCTION SECTION	2-1
Attention Owner/Operator	2-4
ASSEMBLY SECTION	3-1
Angle Blade	3-2
Optional Equipment	3-4
Tine Rake	3-5
Optional Equipment - Tailwheel	3-5
OPERATION SECTION	4-1
Standard Equipment and Specifications	4-3
OPERATOR REQUIREMENTS	4-4
TRACTOR REQUIREMENTS	4-5
ROPS and SEAT BELT	4-5
Tractor Horsepower	4-5
Front End Weight	4-6
GETTING ON AND OFF THE TRACTOR	4-6
Boarding the Tractor	4-7
Dismounting the Tractor	4-7
STARTING THE TRACTOR	4-8
CONNECTING THE IMPLEMENTS TO THE TRACTOR	4-8
Connecting the Angle Blade and Tine Rake	4-9
PRE-OPERATION INSPECTION AND SERVICE	4-10
Tractor Pre-Operation Inspection/Service	4-11
Angle Blade and Tine Rake Pre-Operation Inspection/Service	4-11
DRIVING THE TRACTOR AND IMPLEMENT	4-12
Starting the Tractor	4-13
Brake and Differential Lock Setting	4-14
Driving the Tractor and Implements	4-14
OPERATING THE TRACTOR AND IMPLEMENT	4-15
Operating the Angle Blade and Tine Rake	4-15
Angle Blade/Tine Rake & Tractor Preparation	4-16
Shutting Down the Implement	4-17
DISCONNECTING THE IMPLEMENT FROM THE TRACTOR	4-17
ANGLE BLADE AND TINE RAKE STORAGE	4-18
TRANSPORTING THE TRACTOR AND IMPLEMENT	4-18
Tire and Wheels	4-20
Transporting on Public Roadways	4-20
Hauling the Tractor and Implement	4-22
Troubleshooting	4-24
MAINTENANCE SECTION	5-1
Proper Torque For Fasteners	5-2



Bobcat®

FC-0032

SAFETY SECTION



Thank you very much
for your reading.
Please click here
to get more information.