


**Brushcat™  
Rotary  
Cutter**  
60 Inch  
90 Inch

 


**Bobcat®**  
**Operation  
&  
Maintenance  
Manual** 

60 Inch S/N 467002282 & Above  
60 Inch S/N 467200101 & Above  
90 Inch S/N 467100101 & Above



DOWNLOAD

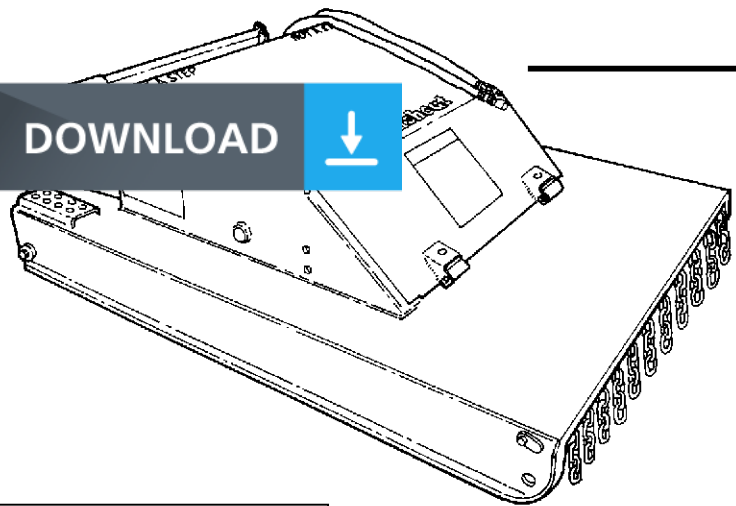

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.*

An  **Ingersoll-Rand** business



# OPERATOR SAFETY WARNINGS



 
## WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.


W-2001-1285




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

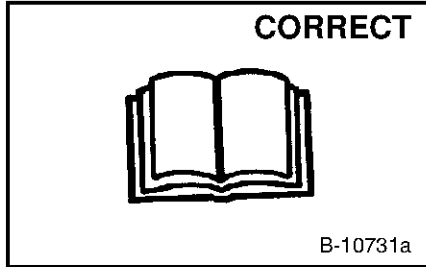

 
⚠ Never use the rotary cutter without instructions. See machine signs (decals), Operation & Maintenance Manual, and Operator's Handbook.

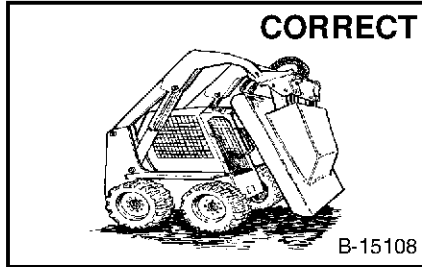

 
⚠ Always install approved lift arm support device when servicing rotary cutter. Raise lift arms and tilt Bob-Tach fully forward.

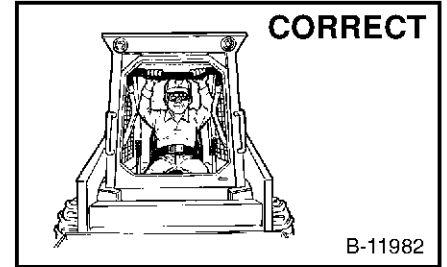

 
⚠ Always use the seat bar and fasten seat belt snugly.  
⚠ Always keep feet on the pedals when operating loader.

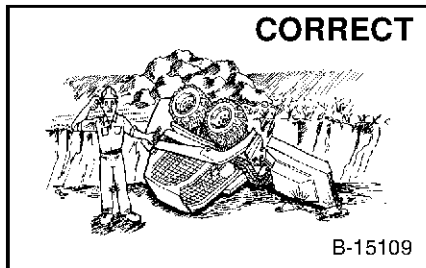

 
⚠ Always check work area before operating rotary cutter.  
⚠ Never use loader without operator cab with ROPS and FOPS approval. Fasten your seat belt.

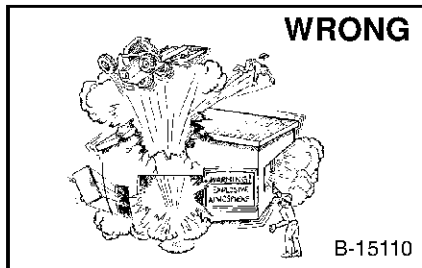

 
⚠ Do not use loader or rotary cutter in atmosphere with explosive dust, gas, or where exhaust can contact flammable material.

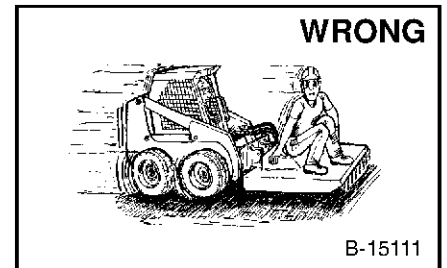

 
⚠ Never allow riders on rotary cutter.  
⚠ Keep bystanders away when operating rotary cutter.

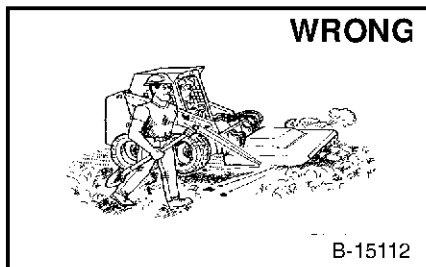

 ⚠ Keep bystanders away when operating rotary cutter.  
⚠ Do not operate without blade shut-off device.

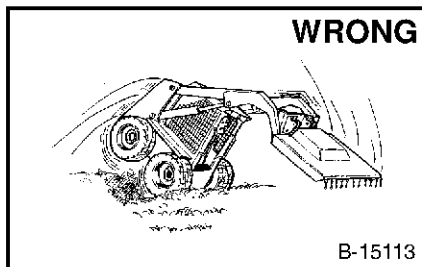

 ⚠ Always carry attachment as low as possible.  
⚠ Do not travel or turn with lift arms up.

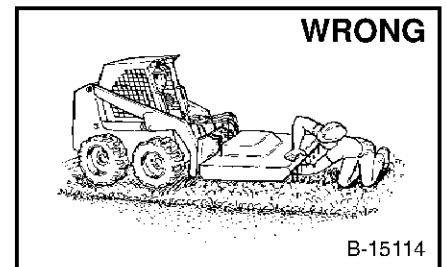

⚠ Do not put hands, feet, or objects under rotary cutter when engine is running.  
⚠ To park, engage parking brake and put attachment flat on the ground and stop engine.

## SAFETY EQUIPMENT

The Bobcat® loader must be equipped with safety items necessary for each job. Ask your dealer about attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. SEAT BAR: When up, it must lock the control.
3. OPERATOR CAB (ROPS and FOPS): It must be on the loader with all fasteners tight.
4. HANDBOOK: Must be in the cab.
5. MACHINE AND ATTACHMENT WARNING SIGNS: Replace if damaged.
6. SPECIAL APPLICATIONS KIT: Available from your Dealer.
7. GRAB HANDLES: Replace if damaged.
8. SAFETY TREADS: Replace if damaged.
9. LIFT ARM SUPPORT DEVICE
10. PARKING BRAKE
11. BLADE SHUT-OFF DEVICE

OSW33-0504



**Bobcat®**

# CONTENTS

FOREWORD..... III  
SAFETY INSTRUCTIONS ..... IX  
OPERATING INSTRUCTIONS..... OI-1  
PREVENTIVE MAINTENANCE ..... PM-1  
SPECIFICATIONS..... SPEC-1

## REFERENCE INFORMATION

Write the correct information for YOUR Brushcat™ Rotary Cutter in the spaces below. Always use these numbers when referring to your Brushcat Rotary Cutter.

Brushcat Rotary Cutter  
Serial Number

---

---

---

---

## NOTES

---

---

---

---

---

YOUR BOBCAT® DEALER:

ADDRESS:

PHONE:

Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128

Bobcat Company Europe  
J. Huysmanslaan 59  
B-1651 LOT  
Belgium

**FOREWORD**

**SAFETY  
INSTRUCTIONS**

**OPERATING  
INSTRUCTIONS**

**PREVENTIVE  
MAINTENANCE**

**SPECIFICATIONS**



Thank you very much  
for your reading.  
Please click here  
to get more information.