 
 


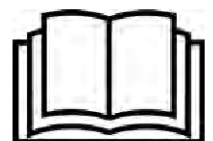

Bobcat®

Operation & Maintenance Manual Brushcat™ Rotary Cutter

(Brushcat 60) S/N A01900101 & Above
(Brushcat 60HF) S/N A01A00101 & Above
(Brushcat 72) S/N A00800101 & Above
(Brushcat 72HF) S/N A01B00101 & Above
(Brushcat 72X) S/N A01C00101 & Above

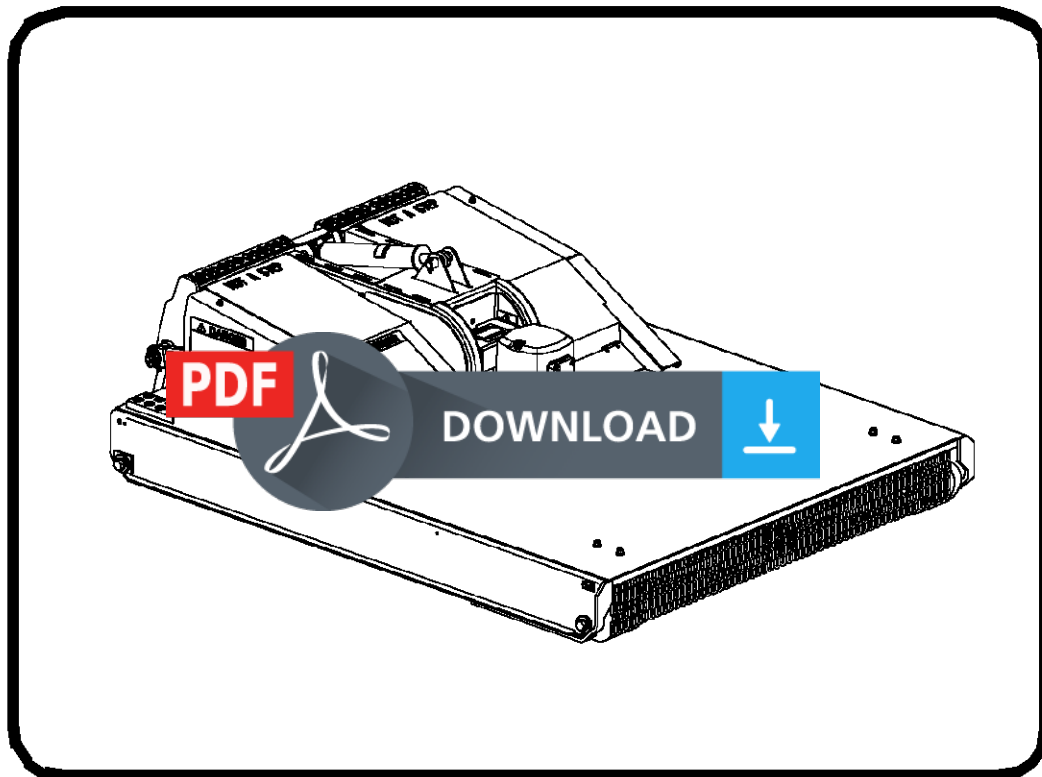

OPERATOR SAFETY WARNINGS



WARNING

 
Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

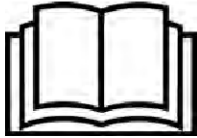

P-90216

- ⚠ Never use the rotary cutter without instructions. See machine signs (decals), Operation & Maintenance Manual, and Operator's Handbook.

 
CORRECT

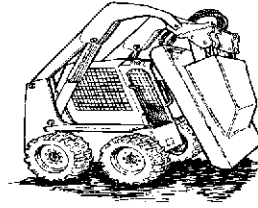

B-15108

- ⚠ Always install approved lift arm support device when servicing rotary cutter. Raise lift arm(s) and tilt Bob-Tach fully forward.

 
CORRECT

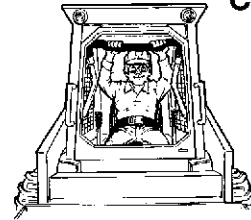

B-11982

- ⚠ Always use the seat bar and fasten seat belt snugly.
- ⚠ Always keep hands and feet on the controls when operating machine

 
CORRECT

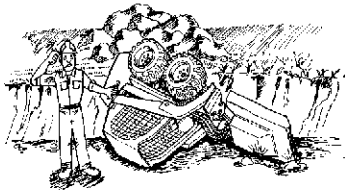

B-15109

- ⚠ Always check work area before operating rotary cutter.
- ⚠ Never use machine without operator cab with ROPS and FOPS approval. Fasten your seat belt.

 
WRONG

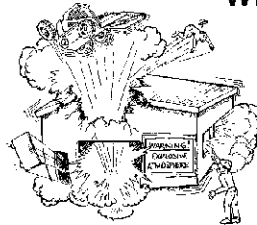

B-15110

- ⚠ Do not use machine or rotary cutter in atmosphere with explosive dust, explosive gas, or where exhaust can contact flammable material.

 
WRONG

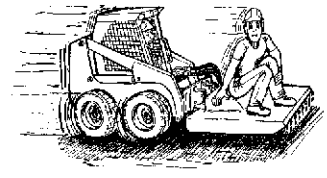

B-15111

- ⚠ Never allow riders on rotary cutter.
- ⚠ Keep bystanders away when operating rotary cutter.

 
WRONG

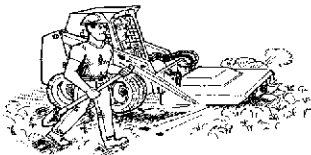

B-15112

- ⚠ Keep bystanders away when operating rotary cutter.
- ⚠ Do not operate without blade shutoff device.

 
WRONG

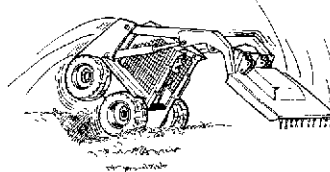

B-15113

- ⚠ Always carry attachment as low as possible.
- ⚠ Do not travel or turn with lift arm(s) up.

 WRONG

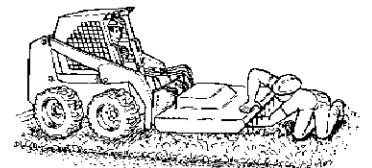

B-15114

- ⚠ Do not put hands, feet, or objects under rotary cutter when engine is running.
- ⚠ To park, engage parking brake and put attachment flat on the ground and stop engine.

SAFETY EQUIPMENT

The Bobcat machine and attachment must be equipped with safety items necessary for each job. Ask your dealer about attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. SEAT BAR OR ARM REST: When up, it must lock the controls.
3. OPERATOR CAB (ROPS and FOPS): It must be on the machine with all fasteners tight.
4. OPERATOR'S HANDBOOK: Must be in the cab.
5. MACHINE AND ATTACHMENT SAFETY SIGNS (DECALS): Replace if damaged.
6. SPECIAL APPLICATIONS KIT: Available from your Dealer.
7. GRAB HANDLES: Replace if damaged.
8. SAFETY TREADS: Replace if damaged.
9. LIFT ARM SUPPORT DEVICE
10. PARKING BRAKE
11. BLADE SHUTOFF DEVICE

OSW33-1209



Bobcat®

CONTENTS

| | |
|-------------------------------------|-----|
| FOREWORD | 5 |
| SAFETY AND TRAINING RESOURCES | 13 |
| OPERATING INSTRUCTIONS | 23 |
| PREVENTIVE MAINTENANCE | 79 |
| MACHINE SIGN TRANSLATIONS | 91 |
| SPECIFICATIONS | 105 |
| WARRANTY | 111 |
| ALPHABETICAL INDEX | 115 |

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Thank you very much
for your reading.
Please click here
to get more information.