

Brushcat™ Rotary Cutter



Bobcat®

 
Operation & Maintenance Manual

S/N 467000101 & Above

PDF



DOWNLOAD

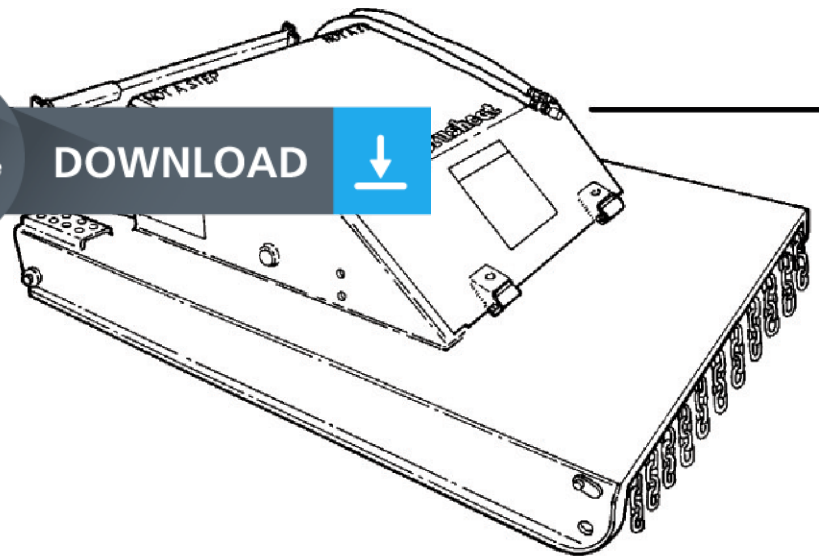

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



OPERATOR SAFETY WARNINGS

 


WARNING


Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285


! Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

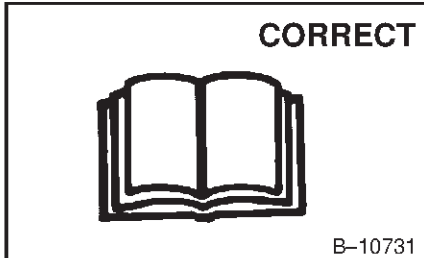

 
! Never use the rotary cutter without instructions. See machine signs (decals), Operation & Maintenance Manual and Handbook

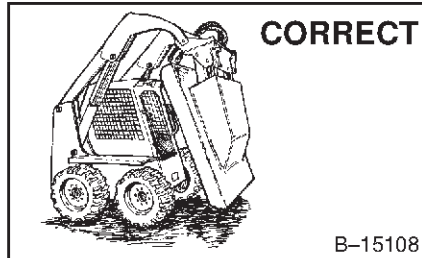

 
! Always install approved lift arm support device when servicing rotary cutter. Raise lift arms and tilt Bob-Tach fully forward.

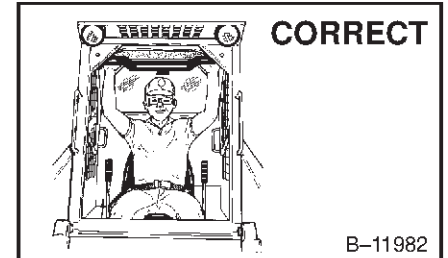

 
! Always use the seat bar and fasten seat belt snugly.
! Always keep feet on the pedals when operating loader.

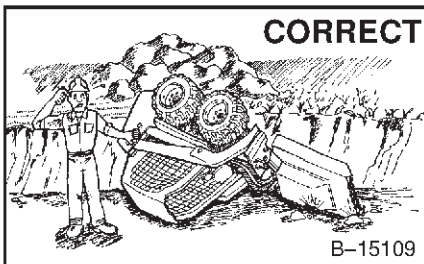

 
! Always check work area before operating rotary cutter.
! Never use loader without operator cab with ROPS and FOPS approval. Fasten your seat belt.

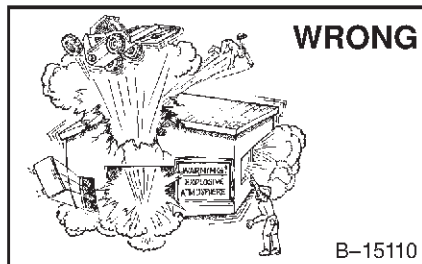

 
! Do not use loader or rotary cutter in atmosphere with explosive dust or gas or where exhaust can contact flammable material.

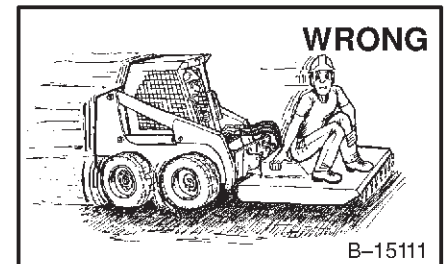

 
! Never allow riders on rotary cutter.
! Keep bystanders away when operating rotary cutter.

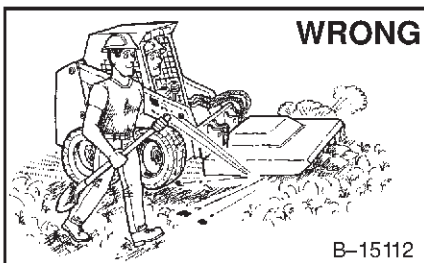

 ! Keep bystanders away when operating rotary cutter.
! Do not operate without blade shut-off device.

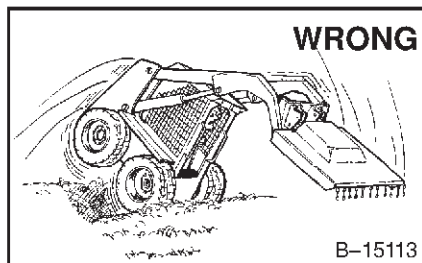

 ! Always carry attachment as low as possible.
! Do not travel or turn with lift arms up.

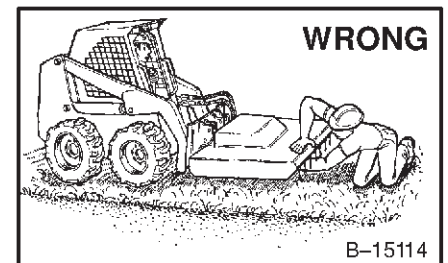

! Do not put hands, feet or objects under rotary cutter when engine is running.
! To park, engage parking brake and put attachment flat on the ground and stop engine.

SAFETY EQUIPMENT

The Bobcat loader must be equipped with safety items for each job. Ask your dealer about attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. SEAT BAR: When up, it must lock the control.
3. OPERATOR CAB (ROPS and FOPS): It must be on the loader with all fasteners tight.
4. HANDBOOK: Must be in the cab.
5. MACHINE AND ATTACHMENT WARNING SIGNS; Replace if damaged.
6. SPECIAL APPLICATIONS KIT; Available from your Dealer.
7. GRAB HANDLES: Replace if damaged.
8. SAFETY TREADS: Replace if damaged.
9. LIFT ARM SUPPORT DEVICE
10. PARKING BRAKE
11. BLADE SHUT-OFF DEVICE

OSW33-1298



Bobcat®

CONTENTS

FOREWORD	iii
SAFETY	vii
OPERATING INSTRUCTIONS	1
ROTARY CUTTER MAINTENANCE	19
SPECIFICATIONS	27

FOREWORD

SAFETY

**OPERATING
INSTRUCTIONS**

**ROTARY CUTTER
MAINTENANCE**

SPECIFICATIONS

REFERENCE INFORMATION

Write the correct information for YOUR Brushcat™ Rotary Cutter in the spaces below. Always use these numbers when referring to your Rotary Cutter.

Rotary Cutter Serial Number _____

NOTES: _____

YOUR LOADER DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
J. Huysmanslaan 59
B-1651 LOT
Belgium



Thank you very much
for your reading.
Please click here
to get more information.