



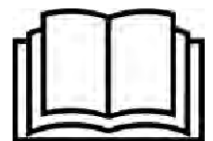

Bobcat®

Operation & Maintenance Manual Seeder

(Seeder 72SDR) S/N AEUD00101 & Above

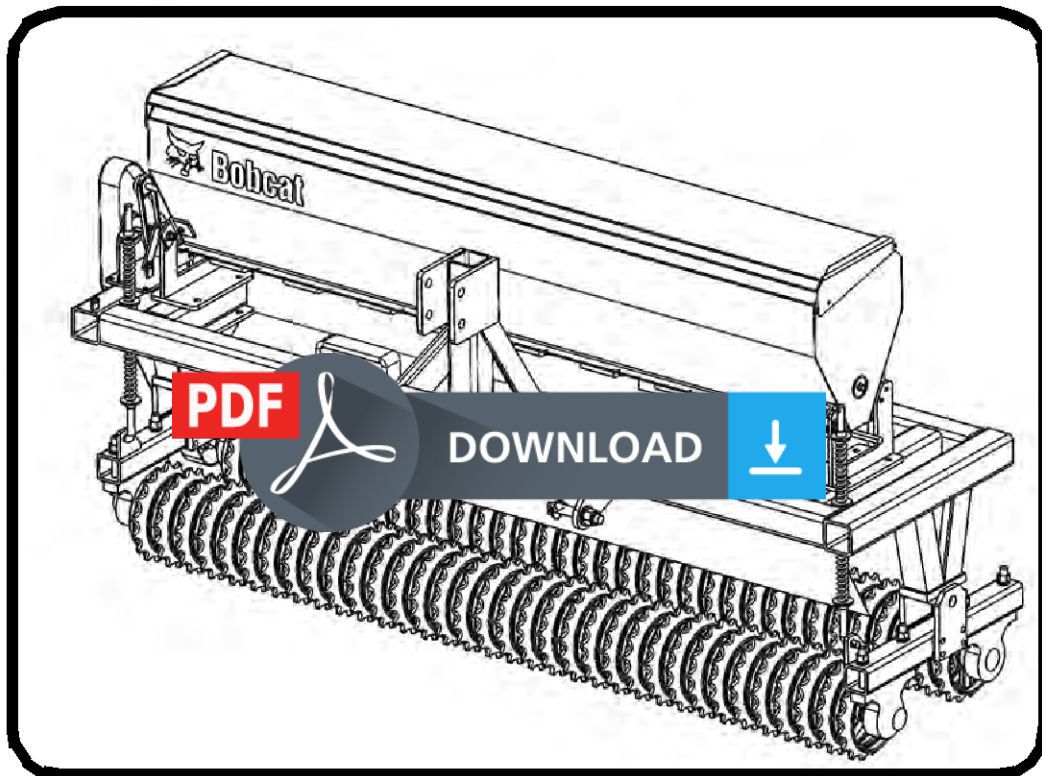

CONTENTS

FOREWORD	3
SAFETY AND TRAINING RESOURCES	11
OPERATING INSTRUCTIONS	21
PREVENTIVE MAINTENANCE	89
MACHINE SIGN TRANSLATIONS	99
SPECIFICATIONS	103
WARRANTY	107
INSTALLATION INSTRUCTIONS	1
XALPHABETICAL INDEX	113

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment / implement in the spaces below. Always use these numbers when referring to your Bobcat attachment / implement.

Attachment / Implement Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment / implement. **READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT / IMPLEMENT.** If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat attachment / implement.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	7
Attachment / Implement Serial Number	7
DELIVERY REPORT	7
ATTACHMENT / IMPLEMENT IDENTIFICATION	8
FEATURES AND ACCESSORIES	9
Standard Items	9
Options And Accessories	9



Thank you very much
for your reading.
Please click here
to get more information.