


Operation & Maintenance Manual Snow Pusher

(Snow Pusher 94) S/N A01500101 & Above (Snow Pusher 94R) S/N AV5V00101 & Above (Snow Pusher 120) S/N A01T00101 & Above (Snow Pusher 120R) S/N AV5U00101 & Above

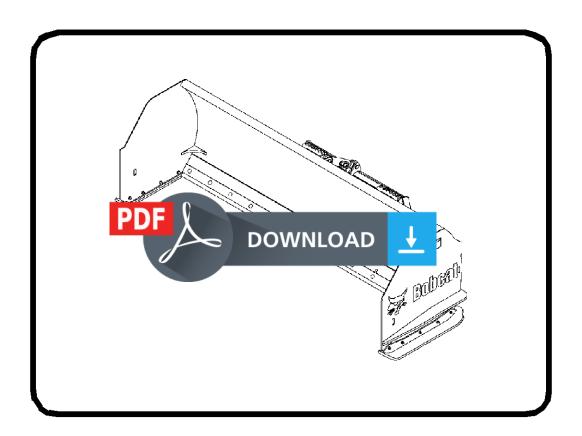



CONTENTS

FOREWORD
SAFETY AND TRAINING RESOURCES
OPERATING INSTRUCTIONS
PREVENTIVE MAINTENANCE
MACHINE SIGN TRANSLATIONS
SPECIFICATIONS
WARRANTY
ALPHABETICAL INDEX
REFERENCE INFORMATION
Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers whe referring to your Bobcat attachment.
Attachment Serial Number
NOTES:
YOUR BOBCAT DEALER:
ADDRESS:
PHONE:

Bobcat Company P.O. Box 128 Gwinner, ND 58040-0128 UNITED STATES OF AMERICA Doosan Bobcat Engineering s.r.o. U Kodetsky 1978 26312 Dobris CZECH REPUBLIC



FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	Ę
SERIAL NUMBER LOCATIONS	
DELIVERY REPORT	(
ATTACHMENT IDENTIFICATION	. 7
FEATURES AND ACCESSORIES	8
ODIIO113 ATIU ACCESSOTIES	. С



Thank you very much for your reading.

Please click here to get more information.