 


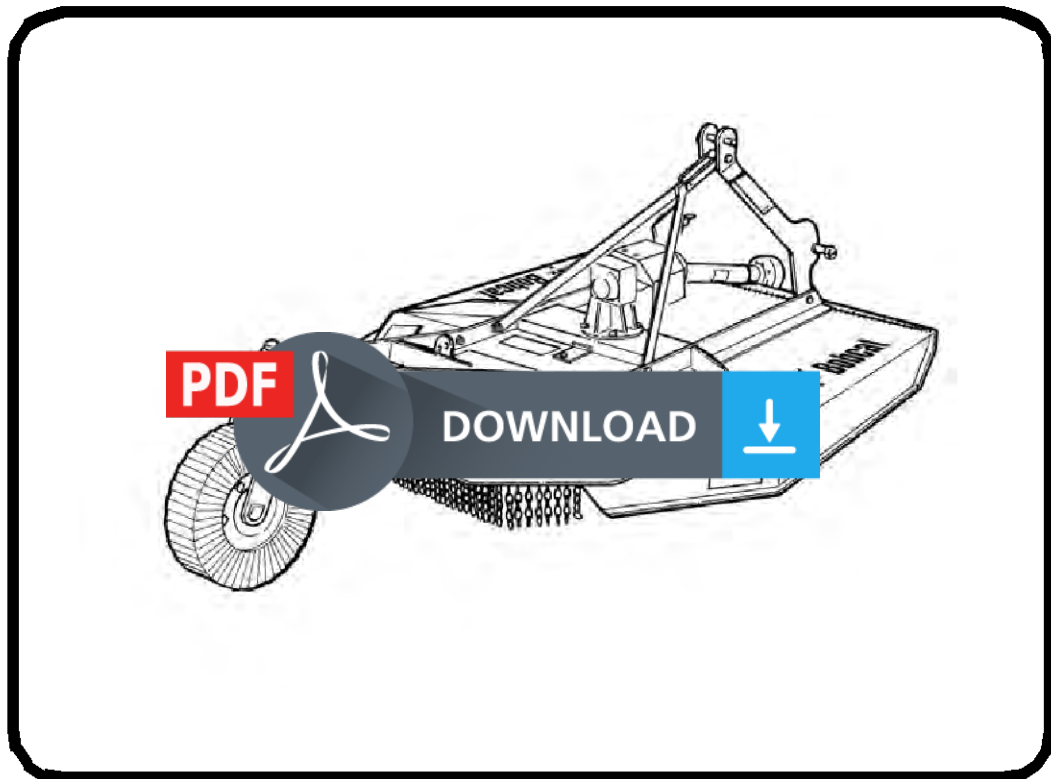

Bobcat®

Operation & Maintenance Manual Three-Point Rotary Cutter

(3RC60) - S/N A7RR00101 & Above
(3RC70) - S/N A7RS00101 & Above



OPERATOR SAFETY WARNINGS



 
WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.


W-2001-1285




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

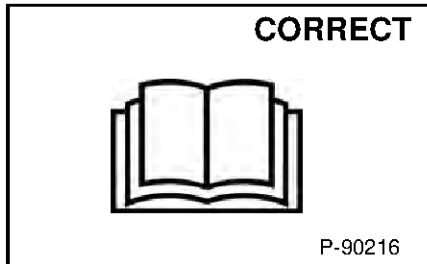

 
- ⚠ Never use the three-point rotary cutter without instructions. See machine signs (decals), Operation & Maintenance Manual, and Operator's Handbook.

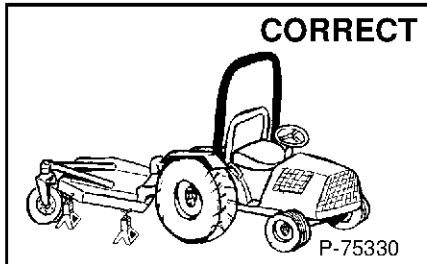

 
- ⚠ Securely block up the implement before working underneath.

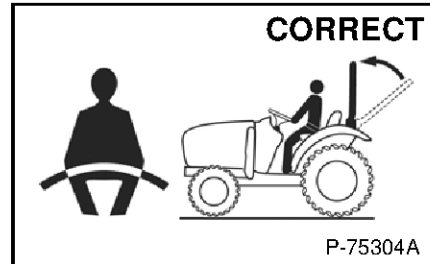

 
- ⚠ Fasten seat belt securely when Roll-Over Protective Structure (ROPS) is up and locked.
- ⚠ DO NOT wear seat belt if ROPS is down.

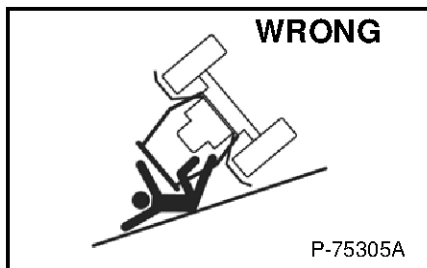

 
- ⚠ USE ROPS AND FASTEN SEAT BELT.
- ⚠ Always check work area before operating three-point rotary cutter.

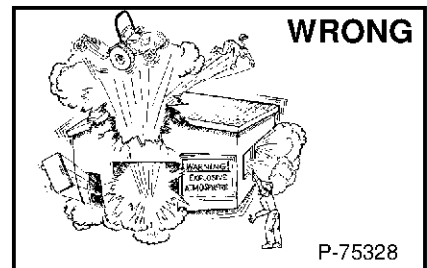

 
- ⚠ Do not use compact tractor or three-point rotary cutter in atmosphere with explosive dust, explosive gas, or where exhaust can contact flammable material.

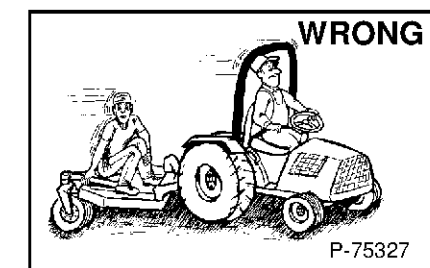

 - ⚠ Never allow riders on three-point rotary cutter.
- ⚠ Keep bystanders away when operating three-point rotary cutter.

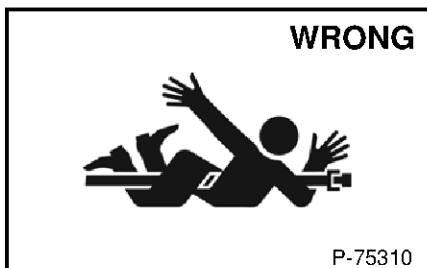


 - ⚠ Keep PTO master shield, implement shield, and driveline guards in place.
- ⚠ Keep away from moving parts.
- ⚠ Only operate from the operator's position.

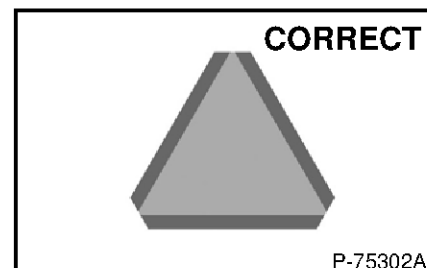

- ⚠ Obey all traffic regulations when on public roads. Use slow moving vehicle (SMV) emblem and hazard flashers when required.

 - ⚠ Lock brake pedals together for road travel.

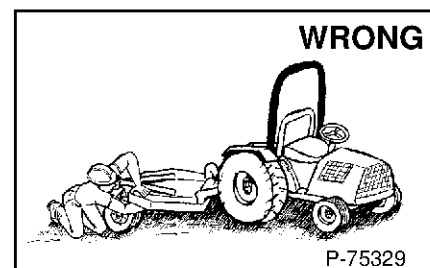

- ⚠ Do not put hands, feet, or objects under three-point rotary cutter when engine is running.
- ⚠ To park, engage PARKING BRAKE, put all controls in NEUTRAL, move PTO lever(s) to OFF, put attachment and implement flat on the ground and stop engine.

SAFETY EQUIPMENT

The Compact Tractor and Three-Point Rotary Cutter Implement must be equipped with safety items necessary for each job. Ask your dealer about implements and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. OPERATOR CAB (ROPS): It must be on the compact tractor with all fasteners tight.
3. MACHINE AND IMPLEMENT WARNING SIGNS: Replace if damaged.
4. COMPACT TRACTOR PTO SHIELD: Replace if damaged.
5. PARKING BRAKE.
6. IMPLEMENT PTO SHIELD: Replace if damaged.
7. PTO DRIVELINE GUARD: Replace if damaged.
8. FRONT AND REAR CHAIN GUARDS: Replace if damaged.

OSW53-0209



Bobcat®

CONTENTS

FOREWORD.....	III
SAFETY & TRAINING RESOURCES.....	XI
OPERATING INSTRUCTIONS.....	OI-1
PREVENTIVE MAINTENANCE.....	PM-1
MACHINE SIGN TRANSLATIONS.....	MST-1
SPECIFICATIONS.....	SPEC-1
WARRANTY.....	WARRANTY-1
ALPHABETICAL INDEX.....	INDEX-1

REFERENCE INFORMATION

Write the correct information for YOUR three-point rotary cutter in the spaces below. Always use these numbers when referring to your three-point rotary cutter.

Three-Point Rotary Cutter Serial Number

NOTES:

YOUR BOBCAT® DEALER:

ADDRESS:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium

FOREWORD

**SAFETY &
TRAINING
RESOURCES**

**OPERATING
INSTRUCTIONS
(OI)**

**PREVENTIVE
MAINTENANCE
(PM)**

**MACHINE SIGN
TRANSLATIONS
(MST)**

**SPECIFICATIONS
(SPEC)**

WARRANTY

**ALPHABETICAL
INDEX**



Thank you very much
for your reading.
Please click here
to get more information.