



# Bobcat®

---

## Operation & Maintenance Manual Three-Point Rotary Cutter

 
 
---

**(3RC60SB) S/N AL1M00101 & Above**

**(3RC72SB) S/N AL1N00101 & Above**

**(3RC60SC) S/N AL1K00101 & Above**

**(3RC72SC) S/N AL1L00101 & Above**

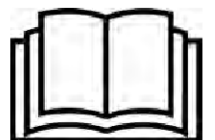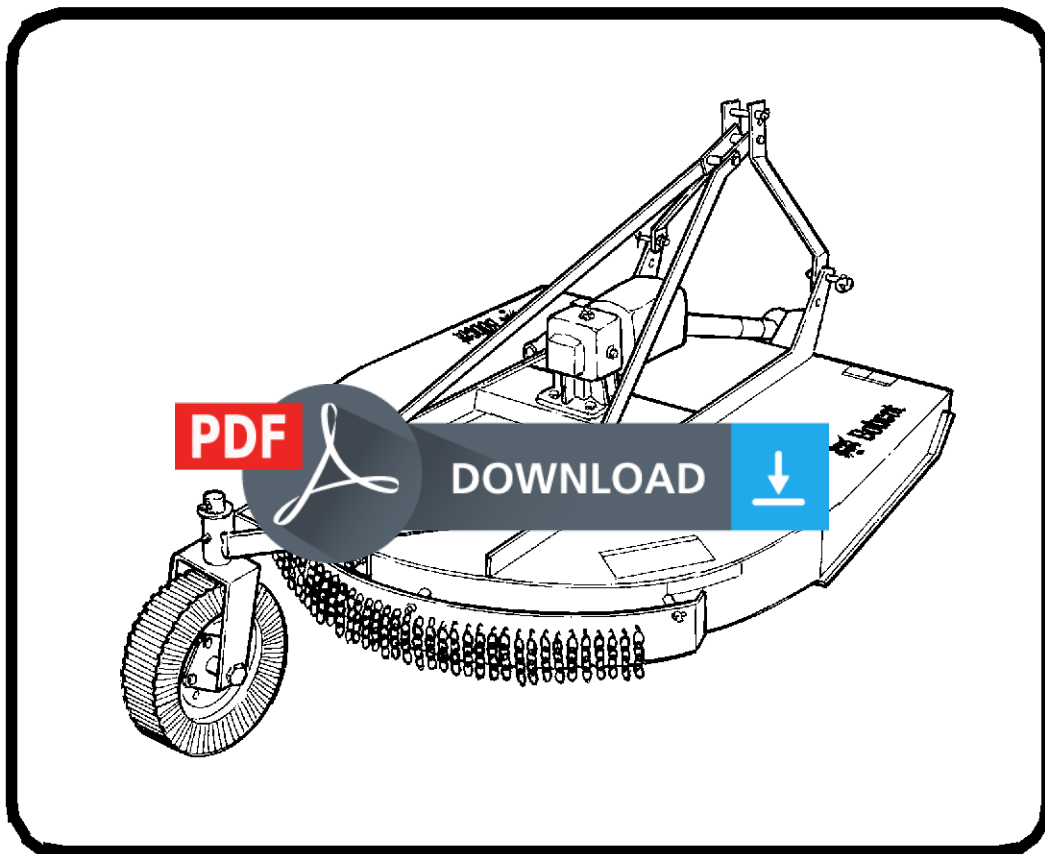



# OPERATOR SAFETY WARNINGS



 
## WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.


W-2001-0502




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

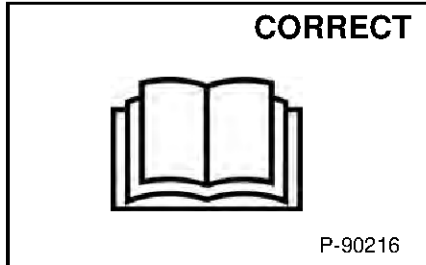

 
- ⚠ Never use the three-point rotary cutter without instructions. See machine signs (decals), Operation & Maintenance Manual, and Operator's Handbook.

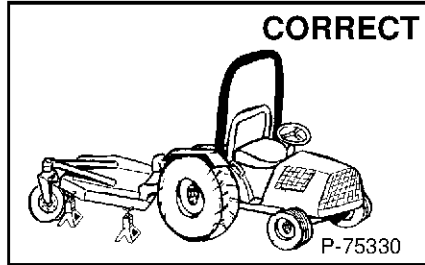

 
- ⚠ Securely block up the implement before working underneath.

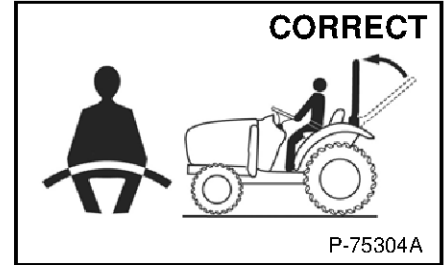

 
- ⚠ Fasten seat belt securely when Roll-Over Protective Structure (ROPS) is up and locked.
- ⚠ DO NOT wear seat belt if ROPS is down.

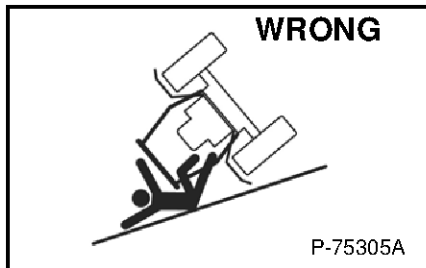

 - ⚠ USE ROPS AND FASTEN SEAT BELT.
- ⚠ Always check work area before operating three-point rotary cutter.

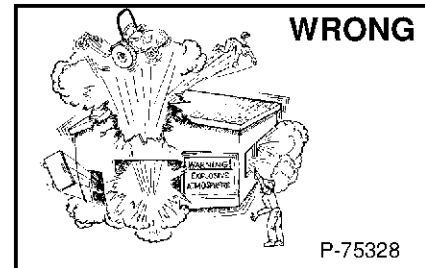

 
- ⚠ Do not use compact tractor or three-point rotary cutter in atmosphere with explosive dust, explosive gas, or where exhaust can contact flammable material.

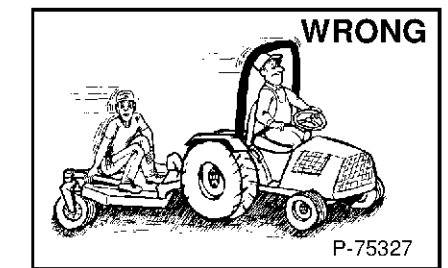

- ⚠ Never allow riders on three-point rotary cutter.
- ⚠ Keep bystanders away when operating three-point rotary cutter.




 - ⚠ Keep PTO master shield, implement shield, and driveline guards in place.
- ⚠ Keep away from moving parts.
- ⚠ Only operate from the operator's position.

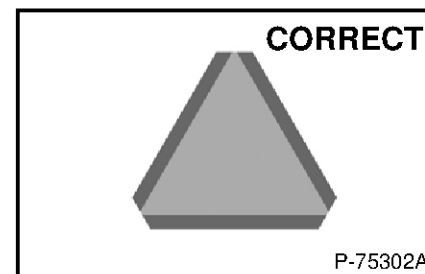

- ⚠ Obey all traffic regulations when on public roads. Use slow moving vehicle (SMV) emblem and hazard flashers when required.

 - ⚠ Lock brake pedals together for road travel.

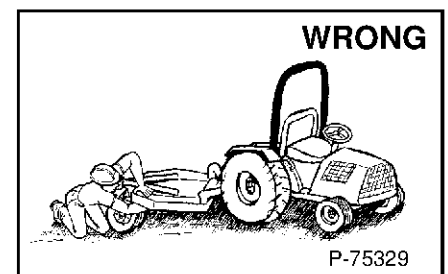

- ⚠ Do not put hands, feet, or objects under three-point rotary cutter when engine is running.
- ⚠ To park, engage PARKING BRAKE, put all controls in NEUTRAL, move PTO lever(s) to OFF, put attachment and implement flat on the ground and stop engine.

## SAFETY EQUIPMENT

The Compact Tractor and Three-Point Rotary Cutter Implement must be equipped with safety items necessary for each job. Ask your dealer about implements and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. OPERATOR CAB (ROPS): It must be on the compact tractor with all fasteners tight.
3. OPERATOR'S HANDBOOK: Must be on the machine.
4. MACHINE AND IMPLEMENT SAFETY SIGNS (DECALS): Replace if damaged.
5. COMPACT TRACTOR PTO SHIELD: Replace if damaged.
6. PARKING BRAKE.
7. IMPLEMENT PTO SHIELD: Replace if damaged.
8. PTO DRIVELINE GUARD: Replace if damaged.
9. FRONT AND REAR CHAIN GUARDS: Replace if damaged.

OSW53-0409



**Bobcat®**

# CONTENTS

CONTENTS .....	3
FOREWORD .....	5
SAFETY & TRAINING RESOURCES .....	11
OPERATING INSTRUCTIONS .....	21
PREVENTIVE MAINTENANCE .....	73
MACHINE SIGN TRANSLATIONS .....	83
SPECIFICATIONS .....	93
WARRANTY .....	99
ALPHABETICAL INDEX .....	103

## REFERENCE INFORMATION

Write the correct information for YOUR three-point rotary cutter in the spaces below. Always use these numbers when referring to your three-point rotary cutter.

Three-Point Rotary Cutter  
Serial Number \_\_\_\_\_

NOTES:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

YOUR BOBCAT DEALER:

\_\_\_\_\_

ADDRESS:

\_\_\_\_\_

PHONE:

\_\_\_\_\_

Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128  
UNITED STATES OF AMERICA

Doosan Benelux SA  
Drève Richelle 167  
B-1410 Waterloo  
BELGIUM



Thank you very much  
for your reading.  
Please click here  
to get more information.