


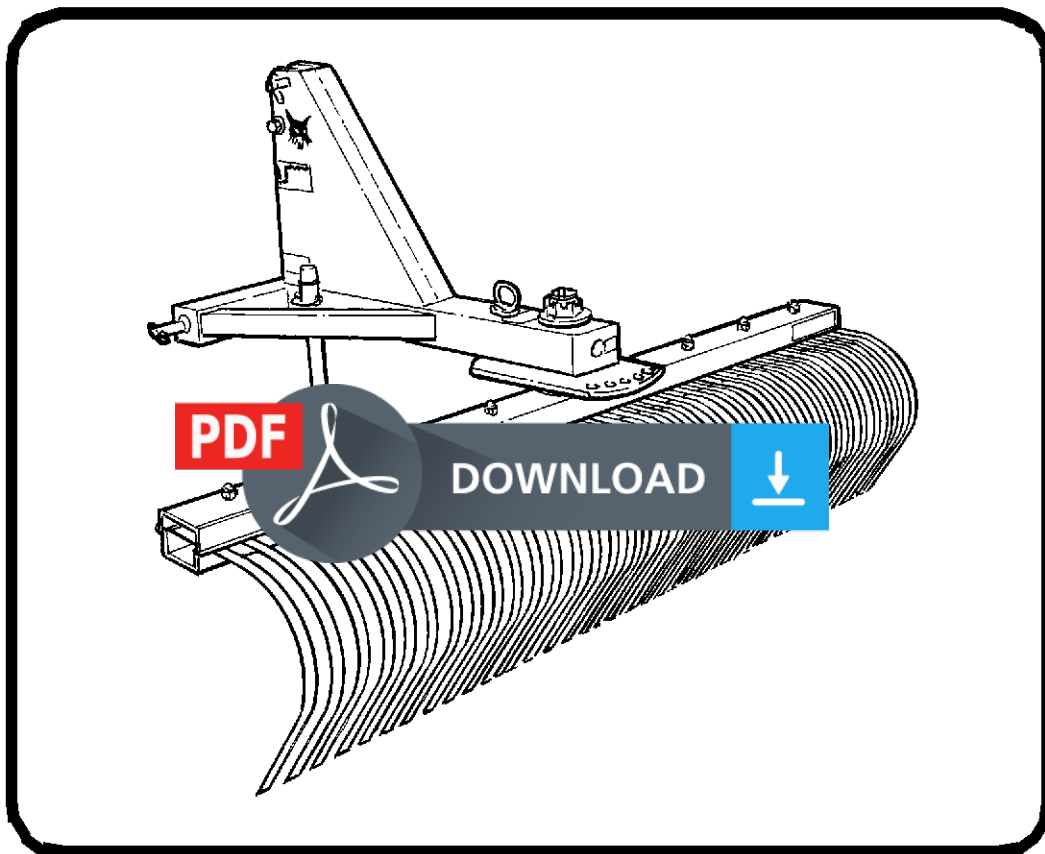

Bobcat®

Operation & Maintenance Manual Three-Point Tine Rake

(3TR60) S/N AKZN00101 & Above
(3TR72) S/N AKZP00101 & Above
(3TR84) S/N AKZR00101 & Above
(3TR96) S/N AKZS00101 & Above



CONTENTS

FOREWORD	3
SAFETY & TRAINING RESOURCES	9
OPERATING INSTRUCTIONS	19
PREVENTIVE MAINTENANCE	49
SPECIFICATIONS	61
WARRANTY	67
ALPHABETICAL INDEX	71

REFERENCE INFORMATION

Write the correct information for YOUR three-point tine rake in the spaces below. Always use these numbers when referring to your three-point tine rake.

Three-Point Tine Rake
Serial Number

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the three-point tine rake. **READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR THREE-POINT TINE RAKE.** If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your three-point tine rake.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	6
DELIVERY REPORT	6
IMPLEMENT IDENTIFICATION	7
FEATURES AND ACCESSORIES	8
Standard Items	8



Thank you very much
for your reading.
Please click here
to get more information.