

tm12435 - 310K Backhoe Loader Technical Manual

Main Sections

Foreword

Manual Identification—READ THIS FIRST!

General Information

Safety

Diagnostics

Engine Control Unit (ECU) Diagnostic Trouble Codes

Engagement and Monitor Unit (EMU) Diagnostic Trouble
Codes

Transmission Control Unit (TCU) Diagnostic Trouble Codes

Vehicle Control Unit (VCU) Diagnostic Trouble Codes

Auxiliary Valve Control (AVC) Diagnostic Trouble Codes



Operational

Operational Checkout Procedure

Engine

Theory of Operation

Diagnostic Information

Adjustments

Tests

Electrical System

System Information

System Diagrams

Sub-System Diagnostics

Monitor Operation

References

Power Train

Theory of Operation

Diagnostic Information

Adjustments

Tests

Hydraulic System

Theory of Operation

Diagnostic Information

Adjustments

Tests

Heating and Air Conditioning

Theory of Operation

Diagnostic Information

Tests

tm12435 - 310K Backhoe Loader

Table of Contents

Foreword

Manual Identification—READ THIS FIRST!

Section 9000: General Information

Group 01: Safety

Recognize Safety Information

Follow Safety Instructions

Operate Only If Qualified

Wear Protective Equipment

Avoid Unauthorized Machine Modifications

Inspect Machine

Stay Clear of Moving Parts

Avoid High-Pressure Oils

Avoid High-Pressure Fluids

Work In Ventilated Area

Prevent Fires

Prevent Battery Explosions

Handle Chemical Products Safely

Decommissioning — Proper Recycling and Disposal of Fluids and Components

Prepare for Emergencies

Use Steps and Handholds Correctly

Start Only From Operator's Seat

Use and Maintain Seat Belt

Prevent Unintended Machine Movement

Prevent Unintended Machine Movement—If Equipped With Pilot Controls

Avoid Work Site Hazards

Keep Riders Off Machine

Avoid Backover Accidents

Avoid Machine Tipover

Add and Operate Attachments Safely

Use Special Care When Operating

Operating or Traveling On Public Roads

Inspect and Maintain ROPS

Park and Prepare for Service Safely

Service Cooling System Safely

Remove Paint Before Welding or Heating

Make Welding Repairs Safely

Drive Metal Pins Safely

Service Tires Safely

Section 9001: Diagnostics

Group 10: Engine Control Unit (ECU) Diagnostic Trouble Codes

Engine Control Unit (ECU) Diagnostic Trouble Codes

000029.03 - Hand Throttle

000029.04 - Hand Throttle

000029.14 - Hand Throttle

000091.03 - Foot Throttle

000091.04 - Foot Throttle

000091.14 - Foot Throttle

000111.07 - Engine Coolant Level

000190.16 - Engine Speed

000237.31 - Vehicle ID Number

000628.12 - Memory Error

000647.03 - Engine Fan Driver

000647.05 - Engine Fan Driver

001075.06 - Fuel Pump Control

001321.05 - Starter Relay



Thank you very much
for your reading.
Please click here
to get more information.