

SERVICE MANUAL

SpaceSaver®

S60B–S70B–S80B–S100B

Challenger

H60C–H70C–H80C–H100C–H120C


















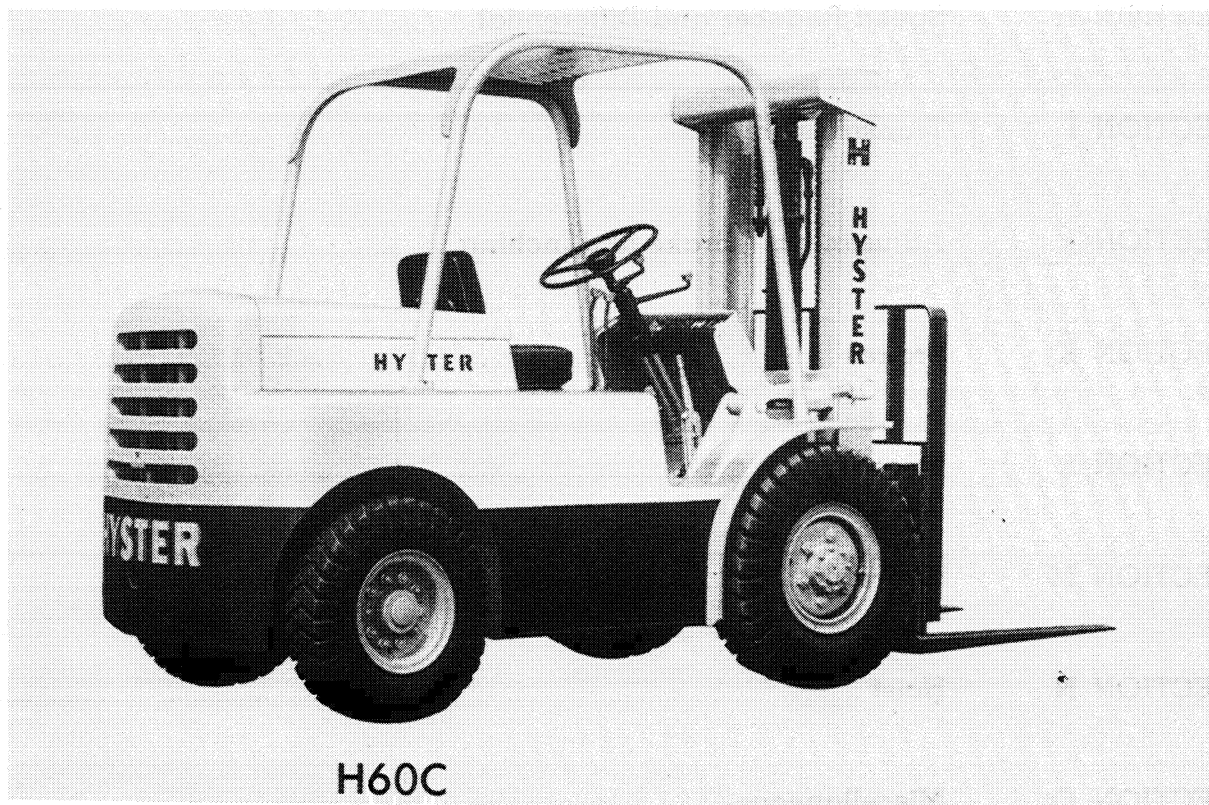
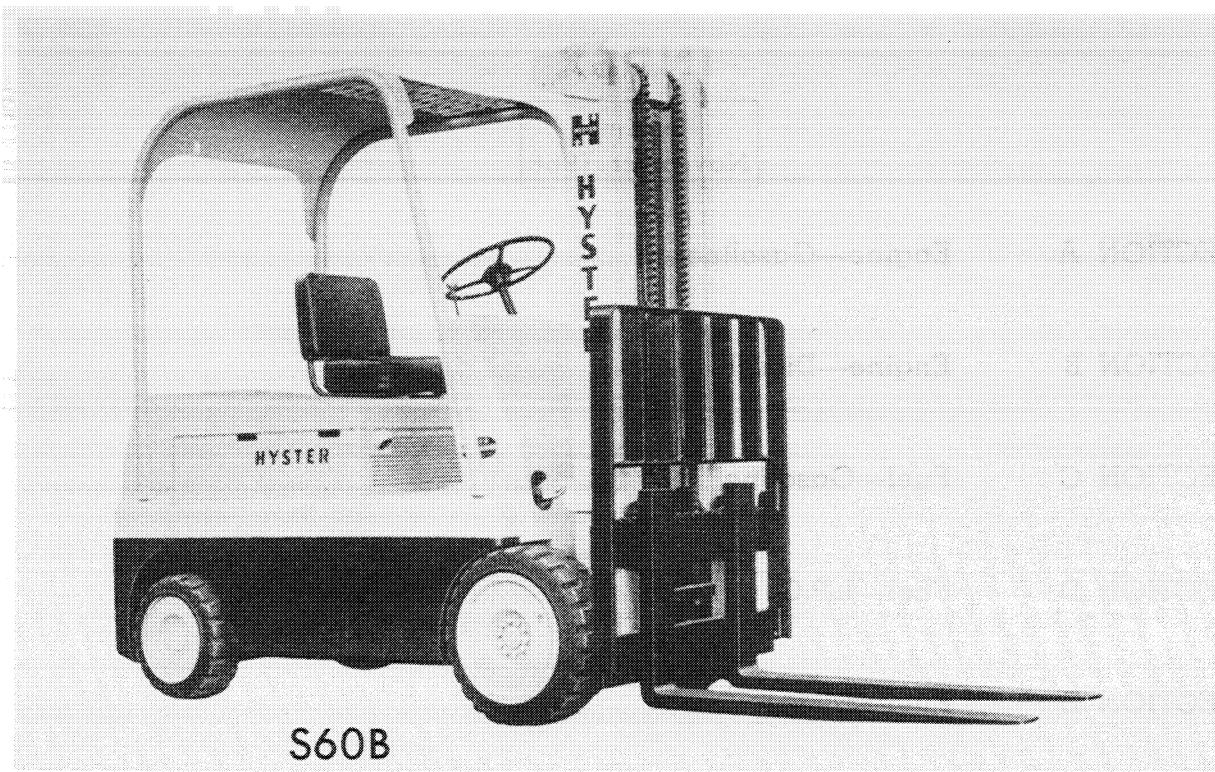
SAFETY PRECAUTIONS MAINTENANCE AND REPAIR

1. When lifting components, double check all slings, chains or cables to make sure that they are properly tied, fastened and balanced before lifting. Make certain that the cable or chain is capable of retaining the weight to be lifted.
2. Do not attempt to lift heavy parts by hand when a lifting device should be used.
3. Wear safety glasses when performing any maintenance or repair work.
4. Do not attempt to remove any components while the engine is running.
5. Never leave the unit and/or heavy parts in an unstable position. Always block the unit with appropriate materials.
6. Keep the unit and working area clear of lubricants and litter.
7. Use proper tools for the job at hand.
8. Keep tools in first-class condition.
9. Always use **HYSTER APPROVED** parts that are designed for the unit being repaired. This ensures maximum service life of the unit.
10. Carefully check to see that all necessary nuts, bolts, snap rings and other locking devices are removed before using force to remove components.
11. Always attach a sign in the control area stating **DO NOT OPERATE** when the unit is being repaired.
12. Always observe the **WARNING** and **CAUTION** statements given in this Service Manual.

INDEX

Reprinted
November 1968

SECTION A	Engine—Gasoline	
SECTION B	Engine—Diesel	
SECTION C	Fuel—Gasoline	
SECTION D	Fuel—L.P.G.	
SECTION E	Fuel—Diesel	
SECTION F	Electrical	
SECTION G	Clutch	
SECTION H	Speed Reducer and Differential	
SECTION I	Transmission	
SECTION J	Adjustments—Brake and Inching	
SECTION K	Brakes	
SECTION L	Steering	
SECTION M	Hydraulic	
SECTION N	Hoist	
SECTION O	Miscellaneous	



SECTION A
ENGINE — GASOLINE
TABLE OF CONTENTS

Item	Page
GENERAL	1
REMOVAL	1
CYLINDER HEAD	1
VALVE ASSEMBLIES	2
CHECKING THE BORE	6
PISTON AND RODS	6
CRANKSHAFT AND BEARINGS	10
CAMSHAFT, TAPPETS AND TIMING GEARS	12
REAR CRANKSHAFT SEAL	16
OIL PUMP	16
FLYWHEEL AND FLYWHEEL HOUSING	18
GOVERNOR	18
ASSEMBLY	20
INSTALLATION	20
MAINTENANCE	20
TROUBLESHOOTING GUIDE	23
SPECIFICATION LISTING	26



Thank you very much
for your reading.
Please click here
to get more information.