



NEW HOLLAND

474

489

492

1465

**REPAIR
MANUAL**

PDF



DOWNLOAD



NEWHOLLAND

SERVICE

474, 489, 492, 1465 REPAIR MANUAL CONTENTS

- SECTION 00 - GENERAL INFORMATION**
- SECTION 31 - IMPLEMENT POWER TAKE-OFF (PTO)**
- SECTION 35 - HYDRAULIC SYSTEMS**
- SECTION 39 - FRAMES**
- SECTION 55 - ELECTRICAL SYSTEMS**
- SECTION 58 - ATTACHMENTS/HEADERS**
- SECTION 90 - SAFETY DECALS**

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books.

The sections listed above are the sections utilized for the 474, 489, 492, 1465 Mower-Conditioners.

SECTION 00 - GENERAL INFORMATION

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Foreword	00-2
	Precautionary Statements	00-3
	Safety	00-4
	Serial Number	00-5
	How the Mower-Conditioner Functions	00-6
	Power Distribution	00-7
	Tapered Spline Connections - Hammer Seating	00-8
	Hardware Torque Values	00-9
	Installation of Adjustable Fittings	00-12
	Standard Torque Data For Hydraulic Tubes and Fittings	00-12
	Pipe Thread Fitting Torque	00-13
	Installation of ORFS (O Ring Flat Faced) Fittings	00-13
	Lubrication	00-14
	Sealants	00-15
	Ecology and the Environment	00-16
	International Symbols	00-17

FOREWORD

Appropriate service methods and correct repair procedures are essential for the safe, reliable operation of all equipment, as well as the personal safety of the individual performing the repair.

This Repair Manual provides troubleshooting and overhaul instructions using recommended procedures and equipment. Following these instructions will ensure the safe, efficient, and timely completion of the service or repair.

The manual is divided into sections which are subdivided into chapters. Each chapter contains information on general operating principles, detailed inspection, overhaul and, where applicable, specific troubleshooting, special tools, and specifications.

Any reference in this manual to right, left, rear, front, top, or bottom is determined by standing behind the machine and looking in the direction of travel.

All data and illustrations in this manual are subject to variations in build specification. This information was correct at the time of issue, but New Holland policy is one of continuous improvement, and the right to change specifications, equipment, or design at any time, without notice, is reserved.



Thank you very much
for your reading.
Please click here
to get more information.