

REPAIR MANUAL
 LOADER BACKHOE
 580M
 580 SUPER M
 580 SUPER M+
 590 SUPER M
 590 SUPER M+
 SERIES 3

87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
 LOADER BACKHOE
 580M
 580 SUPER M
 580 SUPER M+
 590 SUPER M
 590 SUPER M+
 SERIES 3

87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
 LOADER BACKHOE
 580M
 580 SUPER M
 580 SUPER M+
 590
 590 SUPER M
 SERIES 3

87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
 LOADER BACKHOE
 580M
 580 SUPER M
 580 SUPER M+
 590 SUPER M
 590 SUPER M+
 SERIES 3

87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4



M SERIES 3 LOADER/BACKHOE

Service Manual

Bur 87728449

Table of Contents

Description	Section Number	Publication Form Number
General		Tab 1
Section Index - General		5-11910
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-11920
Metric Conversion Chart	1003	7-52950
Engine		Tab 2
Section Index - Engine		5-11930
Engine and Radiator Removal and Installation 580M	2000	5-11940
Engine and Radiator Removal and Installation 580SM, 580SM+, 590SM and 590SM+	2000	5-11950
Stall Test	2002	5-11960
Counter Balance Removal and Installation	2447	6-74700
<i>NOTE: For Engine Repair See Engine Service Manual 87630273.</i>		
Fuel System		Tab 3
Section Index - Fuel System		5-11970
In Vehicle Injector Pump Removal and Installation 580M	3416	5-11980
<i>NOTE: For Fuel System Repair See Engine Service Manual 87630273.</i>		
Electrical		Tab 4
Section Index - Electrical		5-11990
Removal and Installation of Electrical Components	4000	6-74530
Electrical Specifications and Troubleshooting 580M	4001	5-12000
Electrical Specifications and Troubleshooting 580SM, 580SM+, 590SM and 590SM+	4001	5-12010
Batteries	4003	6-42331
Starter and Starter Solenoid	4004	6-74560
Instrument Cluster and Fault Codes	4005	5-12020

M SERIES 3 LOADER/BACKHOE

Service Manual

Bur 87728449

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Steering		Tab 5
Section Index - Steering		5-12030
Removal and Installation of Steering Components	5000	5-12040
Steering Specification, Pressure Checks and Troubleshooting	5001	5-12050
Steering Control Valve Standard Steering	5002	5-12060
Steering Cylinders	5003	5-12070
Front Axle - Two Wheel Drive	5005	6-74640
Front Axle - Four Wheel Drive 580M and 580SM	5006	5-12080
Front Axle - Four Wheel Drive 580SM+, 590SM and 590SM+	5006	5-12090
Power Train		Tab 6
Section Index - Power Train		5-12100
Removal and Installation of Power Train Components	6000	5-12110
Standard Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-12120
Power Shift Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-12130
Wheels and Tires	6003	6-74730
Rear Axle and Planetaries - 580M and 580SM	6004	5-12140
Rear Axle and Planetaries - 580SM+, 590SM and 590SM+	6004	5-12150
Standard Transmission	6007	5-12160
Power Shift Transmission	6007	5-12170
Brakes		Tab 7
Section Index - Brakes		5-12180
Removal and Installation of Brake Components	7000	5-12190
Hydraulic Brake Troubleshooting	7002	5-12200
Hydraulics		Tab 8
Section Index - Hydraulics		5-12210
Removal and Installation of Hydraulic Components	8001	5-12220
Hydraulic System Specifications and Troubleshooting For 580M, 580SM and 590SM With Mechanical Controls	8002	5-12230
Hydraulic System Specifications and Troubleshooting For 580M and 580SM With Pilot Controls	8002	5-12240
Hydraulic System Specifications and Troubleshooting For 580SM+ and 590SM+	8002	5-12250
Cleaning the Hydraulic System and Hydrostatic System	8003	7-49641
Gear Hydraulic Pump - 580SM and 590SM	8004	5-12260
Cylinders	8006	6-74920

M SERIES 3 LOADER/BACKHOE Service Manual Bur 87728449

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Hydraulics (Cont)		Tab 8
Backhoe Control Valve Mechanical Controls	8007	6-74931
Backhoe Control Valve Pilot Controls For 580M and 580SM	8007	5-12270
Accumulator for Machines With Ride Control and Pilot Control Accumulator	8009	6-74960
Solenoid Valve for Machines with Optional Ride Control	8010	6-74970
Boom Lock Solenoid Valve	8011	6-74980
Quick Coupler	8012	5-11280
Swing Dampening Valve	8013	6-75000
Pilot Control Unit	8014	5-12290
Proportional Pilot Pressure Control	8015	6-79960
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		5-12300
Pedals and Levers	9001	5-12310
Air Conditioning Troubleshooting	9002	5-12320
Air Conditioning System Service	9004	5-12330
Air Conditioning Components Service	9005	5-12340
Loader	9006	5-12350
ROPS Cab and Canopy	9007	5-12360
Backhoe	9008	5-12370
Standard and Mechanical Suspension Seat	9009	6-80000
Air Suspension Seat	9010	6-75111
Rear Window Replacement	9012	6-75040
Schematic Set		
Hydraulic and Electrical Schematics	In Rear Pocket	5-12380

NOTE: CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.



Thank you very much
for your reading.
Please click here
to get more information.