

544G, 544G LL, 544G TC, 624G and 644G 4WD Loaders Repair



REPAIR TECHNICAL MANUAL

4WD Loaders models 544G, 624G, 644G

TM1530 22 FEB 05 (ENGLISH)

For complete service information also see:

544G, 544GH, 544G LL, 544G TC, 624G, 644G Loader Diagnostic	TM1529
PowerTech 8.1 L Diesel Engines Base Engine	CTM86
Series 300, 3029, 4039, 4045, 6059 and 6068 Diesel Engines	CTM8
Alternators and Starting Motors	CTM77
TeamMate II 1200, 1400, and 1600 Series Inboard Planetary Axles	CTM43
Series 400, 6076 Diesel Engines	
PowerTech 6.8L and 8.1L, 6068 and 6081 Diesel Engines (Base Engine and Bosch In-Line Pump)	
PowerTech 4.5L & 6.8L Diesel Engines Tier 1/Stage I, Tier 2/Stage II, Tier 3/Stage IIIA, Tier 3/Stage IIA Tier 3/Stage III, (Base Engine)	CTM104

PDF



DOWNLOAD



Table of contents

FOREWORD

HELP!! HELP!! HELP!! HELP!!

Section 00 - GENERAL INFORMATION

- Group 01 - Safety Information
- Group 02 - General Specifications
- Group 0003 - Torque Values
- Group 0004 - Fuels And Lubricants
- Group 0005 - Inspection Procedures

Section 01 - WHEELS

- Group 0110 - Powered Wheels And Fastenings

Section 02 - AXLES AND SUSPENSION SYSTEMS

- Group 0200 - Removal And Installation
- Group 0225 - Axle Shafts, Bearings And U-Joints
- Group 0260 - Hydraulic System

Section 03 - TRANSMISSION

- Group 0300 - Removal And Installation
- Group 0315 - Control Linkage
- Group 0325 - Input Drive Shafts And U-Joints
- Group 0350 - Gear, Shafts, Bearings And Power Shift Clutch
- Group 0360 - Hydraulic System

Section 04 - ENGINE

- Group 0400 - Removal And Installation

Section 05 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply System

Section 07 - DAMPENER DRIVE

- Group 0752 - Elements

Section 09 - STEERING SYSTEM

- Group 0930 - Secondary Steering
- Group 0960 - Hydraulic System

Section 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1060 - Hydraulic System

Section 11 - PARK BRAKE

- Group 1111 - Active Elements
- Group 1160 - Hydraulic System

Section 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar

Section 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support And Cables
- Group 1672 - Alternator, Regulator And Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness And Switches
- Group 1677 - Motors And Actuators

Section 17 - FRAME OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1749 - Chassis Weights

Section 18 - OPERATOR'S STATION

- Group 1800 - Removal And Installation
- Group 1810 - Operator Enclosure
- Group 1821 - Seat And Seat Belt
- Group 1830 - Heating And Air Conditioning

Section 31 - LOADER

- Group 3102 - Bucket
- Group 3140 - Frames
- Group 3160 - Hydraulic System

Section 99 - DEALER FABRICATED TOOLS

- Group 9900 - Dealer Fabricated Tools



Thank you very much
for your reading.
Please click here
to get more information.