

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC210LC-11***

SERIAL NUMBERS 500001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-19
FOREWORD, SAFETY, BASIC INFORMATION .....	00-24
HOW TO READ THE SHOP MANUAL .....	00-24
SAFETY NOTICE FOR OPERATION .....	00-26
PRECAUTIONS TO PREVENT FIRE .....	00-34
ACTIONS IF FIRE OCCURS .....	00-36
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-37
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-38
PRECAUTIONS FOR DEF .....	00-39
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-40
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-43
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-49
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-51
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-52
PRACTICAL USE OF KOMTRAX .....	00-53
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-54
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-58
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-62
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-63
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-65
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-68
HOW TO READ ELECTRICAL WIRE CODE .....	00-69
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-73
STANDARD TIGHTENING TORQUE TABLE .....	00-76
CONVERSION TABLE .....	00-83
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-8
SPECIFICATION DRAWING .....	01-8
WORKING RANGE DRAWINGS .....	01-9
SPECIFICATIONS .....	01-10
WEIGHT TABLE .....	01-13
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-15
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-5
UREA SCR SYSTEM .....	10-10
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-11
UREA SCR SYSTEM DIAGRAM .....	10-16
FUNCTION OF UREA SCR SYSTEM .....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-34
BOOT-UP SYSTEM .....	10-43
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-43
SYSTEM OPERATING LAMP SYSTEM .....	10-45
BATTERY DISCONNECT SWITCH .....	10-46
ENGINE SYSTEM .....	10-47
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-47
ENGINE CONTROL SYSTEM .....	10-49
AUTO-DECELERATION SYSTEM .....	10-52
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-54
OVERHEAT PREVENTION SYSTEM .....	10-56
TURBOCHARGER PROTECTION SYSTEM .....	10-59

AUTOMATIC IDLE STOP SYSTEM .....	10-61
COMPONENT PARTS OF ENGINE SYSTEM .....	10-64
COOLING SYSTEM .....	10-83
LAYOUT DRAWING OF COOLING SYSTEM .....	10-83
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH .....	10-85
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH .....	10-87
COMPONENT PARTS OF COOLING SYSTEM .....	10-89
CONTROL SYSTEM .....	10-90
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-90
MACHINE MONITOR SYSTEM .....	10-93
KOMTRAX SYSTEM .....	10-94
COMPONENT PARTS OF CONTROL SYSTEM .....	10-95
HYDRAULIC SYSTEM .....	10-127
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-127
CLSS .....	10-133
ENGINE AND PUMP COMBINED CONTROL SYSTEM .....	10-153
PUMP AND VALVE CONTROL SYSTEM .....	10-159
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-162
WORK EQUIPMENT SYSTEM .....	10-248
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-248
STRUCTURE OF VALVE CONTROL .....	10-253
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-255
PPC LOCK SYSTEM .....	10-257
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-258
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT .....	10-260
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM .....	10-262
SWING SYSTEM .....	10-295
LAYOUT DRAWING OF SWING SYSTEM .....	10-295
SWING CONTROL SYSTEM DIAGRAM .....	10-299
COMPONENT PARTS OF SWING SYSTEM .....	10-303
TRAVEL SYSTEM .....	10-318
LAYOUT DRAWING OF TRAVEL SYSTEM .....	10-318
TRAVEL CONTROL SYSTEM DIAGRAM .....	10-322
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-324
UNDERCARRIAGE AND FRAME .....	10-345
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-345
WORK EQUIPMENT .....	10-347
STRUCTURE OF WORK EQUIPMENT .....	10-347
FUNCTION OF WORK EQUIPMENT .....	10-347
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM .....	10-348
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-348
CAB AND ITS ATTACHMENTS .....	10-349
ROPS CAB .....	10-349
CAB MOUNT .....	10-350
CAB TIPPING STOPPER .....	10-351
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-8
STANDARD VALUE TABLE FOR ENGINE: PC210LC-11 .....	20-8
STANDARD VALUE TABLE FOR MACHINE .....	20-12
STANDARD VALUE TABLE FOR MACHINE: PC210LC-11 .....	20-12
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-25
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-29
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-29
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-5

RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-10
TOOLS FOR TESTING AND ADJUSTING.....	30-10
SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....	30-16
ENGINE AND COOLING SYSTEM.....	30-17
TEST ENGINE SPEED .....	30-17
TEST BOOST PRESSURE.....	30-20
TEST EXHAUST GAS COLOR.....	30-22
TEST AND ADJUST VALVE CLEARANCE.....	30-25
TEST COMPRESSION PRESSURE.....	30-27
TEST BLOWBY PRESSURE .....	30-32
TEST ENGINE OIL PRESSURE.....	30-34
TEST EGR VALVE AND VGT OIL PRESSURE .....	30-35
TEST FUEL PRESSURE.....	30-37
TEST FUEL DISCHARGE, RETURN AND LEAKAGE .....	30-43
BLEEDING AIR FROM FUEL SYSTEM .....	30-49
TEST FUEL CIRCUIT FOR LEAKAGE .....	30-50
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-52
HANDLE NO-INJECTION CRANKING OPERATION.....	30-53
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION.....	30-54
TEST COOLING FAN SPEED .....	30-56
WRITE ASH IN SOOT ACCUMULATION CORRECTION TO ENGINE CONTROLLER .....	30-57
TEST SCR RELATED FUNCTIONS.....	30-58
CLEAN AdBlue/DEF TANK.....	30-83
BLEED AIR FROM COOLANT CIRCUIT OF AdBlue/DEF TANK.....	30-87
POWER TRAIN.....	30-89
TEST SWING CIRCLE BEARING CLEARANCE .....	30-89
UNDERCARRIAGE AND FRAME.....	30-90
TEST AND ADJUST TRACK TENSION.....	30-90
HYDRAULIC SYSTEM.....	30-92
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM.....	30-92
TEST AND ADJUST OIL PRESSURE IN WORK EQUIPMENT, SWING, AND TRAVEL CIRCUITS.....	30-93
TEST OIL PRESSURE OF CONTROL CIRCUIT .....	30-103
TEST AND ADJUST OIL PRESSURE IN PUMP PC CONTROL CIRCUIT .....	30-105
TEST AND ADJUST OIL PRESSURE IN PUMP LS CONTROL CIRCUIT.....	30-108
TEST OUTLET PRESSURE OF SOLENOID VALVE .....	30-115
TEST PPC VALVE OUTLET PRESSURE .....	30-119
ADJUST WORK EQUIPMENT AND SWING PPC VALVES .....	30-121
TEST PUMP SWASH PLATE SENSOR.....	30-122
TEST THE PARTS CAUSING HYDRAULIC DRIFT IN WORK EQUIPMENT.....	30-123
TEST OIL LEAKAGE .....	30-125
BLEED AIR FROM HYDRAULIC CIRCUIT .....	30-128
CAB AND ITS ATTACHMENTS .....	30-132
TEST CAB TIPPING STOPPER .....	30-132
METHOD FOR ADJUSTING MIRRORS .....	30-133
ELECTRICAL SYSTEM .....	30-139
SET AND OPERATE MACHINE MONITOR.....	30-139
METHOD FOR STARTING UP KOMTRAX TERMINAL .....	30-216
ADJUST REARVIEW CAMERA ANGLE .....	30-221
HANDLE VOLTAGE CIRCUIT OF ENGINE CONTROLLER .....	30-224
HANDLE BATTERY DISCONNECT SWITCH.....	30-225
TEST DIODES.....	30-226
Pm CLINIC.....	30-227
Pm CLINIC SERVICE .....	30-227
40 TROUBLESHOOTING .....	40-1
CONTENTS .....	40-2
ABBREVIATION LIST .....	40-12
RELATED INFORMATION ON TROUBLESHOOTING .....	40-17

GENERAL TROUBLESHOOTING POINTS .....	40-17
TROUBLESHOOTING POINTS FOR UREA SCR SYSTEM .....	40-18
SEQUENCE OF EVENTS IN TROUBLESHOOTING .....	40-30
CHECKS BEFORE TROUBLESHOOTING .....	40-32
INSPECTION PROCEDURE BEFORE TROUBLESHOOTING .....	40-34
TESTING IN ACCORDANCE WITH TESTING PROCEDURE .....	40-36
ELECTRICAL SYSTEM TROUBLESHOOTING - PREPARATION .....	40-59
PROCEDURE FOR TESTING AND TROUBLESHOOTING .....	40-69
SYMPTOMS OF FAILURE AND TROUBLESHOOTING NUMBERS .....	40-72
INFORMATION DESCRIBED IN TROUBLESHOOTING TABLE .....	40-76
TROUBLESHOOTING METHOD FOR OPEN CIRCUIT IN WIRING HARNESS OF PRESSURE SEN- SOR SYSTEM .....	40-78
CONNECTOR LIST AND LAYOUT .....	40-81
CONNECTOR CONTACT IDENTIFICATION .....	40-94
T-BRANCH BOX AND T-BRANCH ADAPTER TABLE .....	40-134
FUSE LOCATION TABLE .....	40-140
PRECAUTIONS FOR CLEANING AND REPLACING KDPF (KCSF and KDOC) .....	40-142
PREPARATION OF SHORT CIRCUIT ELECTRICAL CONNECTOR (FOR FAILURE CODES [CA1883] AND [CA3135]) .....	40-146
FAILURE CODES TABLE .....	40-148
TROUBLESHOOTING BY FAILURE CODE (DISPLAY OF CODE) .....	40-165
FAILURE CODE [879AKA] .....	40-165
FAILURE CODE [879AKB] .....	40-166
FAILURE CODE [879BKA] .....	40-167
FAILURE CODE [879BKB] .....	40-169
FAILURE CODE [879CKA] .....	40-171
FAILURE CODE [879CKB] .....	40-172
FAILURE CODE [879DKZ] .....	40-173
FAILURE CODE [879EMC] .....	40-175
FAILURE CODE [879FMC] .....	40-176
FAILURE CODE [879GKX] .....	40-177
FAILURE CODE [989L00] .....	40-179
FAILURE CODE [989M00] .....	40-180
FAILURE CODE [989N00] .....	40-181
FAILURE CODE [A1U0N3] .....	40-182
FAILURE CODE [A1U0N4] .....	40-184
FAILURE CODE [A900FR] .....	40-186
FAILURE CODE [A900N6] .....	40-187
FAILURE CODE [A900NY] .....	40-188
FAILURE CODE [AA10NX] .....	40-189
FAILURE CODE [AB00KE] .....	40-191
FAILURE CODE [AQ10N3] .....	40-194
FAILURE CODE [AS00N3] .....	40-196
FAILURE CODE [AS00R2] .....	40-198
FAILURE CODE [AS00R3] .....	40-199
FAILURE CODE [AS00R4] .....	40-200
FAILURE CODE [AS00R5] .....	40-201
FAILURE CODE [AS00R6] .....	40-202
FAILURE CODE [AS00ZK] .....	40-203
FAILURE CODE [AS10KM] .....	40-204
FAILURE CODE [AS10NR] .....	40-205
FAILURE CODE [AS10NT] .....	40-206
FAILURE CODE [B@BAZG] .....	40-207
FAILURE CODE [B@BAZK] .....	40-208
FAILURE CODE [B@BCNS] .....	40-210
FAILURE CODE [B@BCZK] .....	40-211
FAILURE CODE [B@HANS] .....	40-213
FAILURE CODE [CA115] .....	40-214

FAILURE CODE [CA122]	40-215
FAILURE CODE [CA123]	40-217
FAILURE CODE [CA131]	40-219
FAILURE CODE [CA132]	40-221
FAILURE CODE [CA144]	40-223
FAILURE CODE [CA145]	40-225
FAILURE CODE [CA153]	40-227
FAILURE CODE [CA154]	40-230
FAILURE CODE [CA187]	40-232
FAILURE CODE [CA221]	40-234
FAILURE CODE [CA222]	40-236
FAILURE CODE [CA227]	40-238
FAILURE CODE [CA234]	40-239
FAILURE CODE [CA238]	40-240
FAILURE CODE [CA239]	40-242
FAILURE CODE [CA249]	40-244
FAILURE CODE [CA256]	40-246
FAILURE CODE [CA271]	40-248
FAILURE CODE [CA272]	40-250
FAILURE CODE [CA322]	40-252
FAILURE CODE [CA323]	40-254
FAILURE CODE [CA324]	40-256
FAILURE CODE [CA325]	40-258
FAILURE CODE [CA331]	40-260
FAILURE CODE [CA332]	40-262
FAILURE CODE [CA343]	40-264
FAILURE CODE [CA351]	40-265
FAILURE CODE [CA352]	40-266
FAILURE CODE [CA356]	40-269
FAILURE CODE [CA357]	40-271
FAILURE CODE [CA386]	40-273
FAILURE CODE [CA428]	40-274
FAILURE CODE [CA429]	40-276
FAILURE CODE [CA435]	40-278
FAILURE CODE [CA441]	40-280
FAILURE CODE [CA442]	40-282
FAILURE CODE [CA449]	40-283
FAILURE CODE [CA451]	40-284
FAILURE CODE [CA452]	40-286
FAILURE CODE [CA488]	40-288
FAILURE CODE [CA515]	40-289
FAILURE CODE [CA516]	40-291
FAILURE CODE [CA553]	40-293
FAILURE CODE [CA555]	40-294
FAILURE CODE [CA556]	40-295
FAILURE CODE [CA559]	40-296
FAILURE CODE [CA595]	40-299
FAILURE CODE [CA687]	40-300
FAILURE CODE [CA689]	40-302
FAILURE CODE [CA691]	40-305
FAILURE CODE [CA692]	40-307
FAILURE CODE [CA697]	40-309
FAILURE CODE [CA698]	40-310
FAILURE CODE [CA731]	40-311
FAILURE CODE [CA778]	40-313
FAILURE CODE [CA1117]	40-318
FAILURE CODE [CA1664]	40-319
FAILURE CODE [CA1669]	40-321



FAILURE CODE [CA1673]	40-322
FAILURE CODE [CA1677]	40-323
FAILURE CODE [CA1678]	40-324
FAILURE CODE [CA1682]	40-325
FAILURE CODE [CA1683]	40-327
FAILURE CODE [CA1684]	40-329
FAILURE CODE [CA1686]	40-331
FAILURE CODE [CA1691]	40-332
FAILURE CODE [CA1694]	40-335
FAILURE CODE [CA1695]	40-338
FAILURE CODE [CA1696]	40-339
FAILURE CODE [CA1712]	40-341
FAILURE CODE [CA1713]	40-344
FAILURE CODE [CA1714]	40-346
FAILURE CODE [CA1715]	40-347
FAILURE CODE [CA1776]	40-348
FAILURE CODE [CA1777]	40-351
FAILURE CODE [CA1843]	40-354
FAILURE CODE [CA1844]	40-356
FAILURE CODE [CA1879]	40-359
FAILURE CODE [CA1881]	40-361
FAILURE CODE [CA1883]	40-363
FAILURE CODE [CA1885]	40-366
FAILURE CODE [CA1887]	40-368
FAILURE CODE [CA1921]	40-370
FAILURE CODE [CA1922]	40-373
FAILURE CODE [CA1942]	40-378
FAILURE CODE [CA1993]	40-379
FAILURE CODE [CA2185]	40-382
FAILURE CODE [CA2186]	40-383
FAILURE CODE [CA2249]	40-385
FAILURE CODE [CA2271]	40-386
FAILURE CODE [CA2272]	40-389
FAILURE CODE [CA2288]	40-392
FAILURE CODE [CA2311]	40-393
FAILURE CODE [CA2349]	40-394
FAILURE CODE [CA2353]	40-397
FAILURE CODE [CA2357]	40-399
FAILURE CODE [CA2381]	40-400
FAILURE CODE [CA2382]	40-403
FAILURE CODE [CA2383]	40-406
FAILURE CODE [CA2386]	40-409
FAILURE CODE [CA2387]	40-411
FAILURE CODE [CA2555]	40-412
FAILURE CODE [CA2556]	40-415
FAILURE CODE [CA2637]	40-418
FAILURE CODE [CA2639]	40-420
FAILURE CODE [CA2771]	40-423
FAILURE CODE [CA2777]	40-429
FAILURE CODE [CA2976]	40-432
FAILURE CODE [CA3133]	40-434
FAILURE CODE [CA3134]	40-437
FAILURE CODE [CA3135]	40-439
FAILURE CODE [CA3142]	40-442
FAILURE CODE [CA3143]	40-443
FAILURE CODE [CA3144]	40-444
FAILURE CODE [CA3146]	40-446
FAILURE CODE [CA3147]	40-447

FAILURE CODE [CA3148]	40-448
FAILURE CODE [CA3151]	40-450
FAILURE CODE [CA3165]	40-456
FAILURE CODE [CA3229]	40-458
FAILURE CODE [CA3231]	40-460
FAILURE CODE [CA3232]	40-462
FAILURE CODE [CA3235]	40-466
FAILURE CODE [CA3239]	40-468
FAILURE CODE [CA3241]	40-471
FAILURE CODE [CA3242]	40-474
FAILURE CODE [CA3251]	40-477
FAILURE CODE [CA3253]	40-479
FAILURE CODE [CA3254]	40-482
FAILURE CODE [CA3255]	40-485
FAILURE CODE [CA3256]	40-489
FAILURE CODE [CA3311]	40-491
FAILURE CODE [CA3312]	40-493
FAILURE CODE [CA3313]	40-496
FAILURE CODE [CA3314]	40-498
FAILURE CODE [CA3315]	40-499
FAILURE CODE [CA3316]	40-501
FAILURE CODE [CA3317]	40-503
FAILURE CODE [CA3318]	40-504
FAILURE CODE [CA3319]	40-506
FAILURE CODE [CA3321]	40-507
FAILURE CODE [CA3322]	40-509
FAILURE CODE [CA3419]	40-511
FAILURE CODE [CA3421]	40-513
FAILURE CODE [CA3497]	40-515
FAILURE CODE [CA3498]	40-516
FAILURE CODE [CA3543]	40-517
FAILURE CODE [CA3545]	40-523
FAILURE CODE [CA3547]	40-525
FAILURE CODE [CA3558]	40-526
FAILURE CODE [CA3559]	40-528
FAILURE CODE [CA3562]	40-530
FAILURE CODE [CA3563]	40-532
FAILURE CODE [CA3567]	40-535
FAILURE CODE [CA3568]	40-538
FAILURE CODE [CA3571]	40-542
FAILURE CODE [CA3572]	40-544
FAILURE CODE [CA3574]	40-546
FAILURE CODE [CA3575]	40-548
FAILURE CODE [CA3577]	40-550
FAILURE CODE [CA3578]	40-552
FAILURE CODE [CA3582]	40-554
FAILURE CODE [CA3583]	40-560
FAILURE CODE [CA3596]	40-562
FAILURE CODE [CA3649]	40-564
FAILURE CODE [CA3681]	40-566
FAILURE CODE [CA3682]	40-571
FAILURE CODE [CA3713]	40-577
FAILURE CODE [CA3717]	40-580
FAILURE CODE [CA3718]	40-581
FAILURE CODE [CA3725]	40-582
FAILURE CODE [CA3741]	40-585
FAILURE CODE [CA3748]	40-586
FAILURE CODE [CA3751]	40-588

FAILURE CODE [CA3755]	40-590
FAILURE CODE [CA3866]	40-592
FAILURE CODE [CA3867]	40-595
FAILURE CODE [CA3868]	40-598
FAILURE CODE [CA3899]	40-602
FAILURE CODE [CA3911]	40-604
FAILURE CODE [CA3912]	40-608
FAILURE CODE [CA3932]	40-610
FAILURE CODE [CA3933]	40-612
FAILURE CODE [CA3934]	40-614
FAILURE CODE [CA3935]	40-617
FAILURE CODE [CA3936]	40-619
FAILURE CODE [CA4151]	40-621
FAILURE CODE [CA4152]	40-625
FAILURE CODE [CA4155]	40-629
FAILURE CODE [CA4156]	40-631
FAILURE CODE [CA4157]	40-634
FAILURE CODE [CA4158]	40-636
FAILURE CODE [CA4159]	40-637
FAILURE CODE [CA4161]	40-638
FAILURE CODE [CA4162]	40-641
FAILURE CODE [CA4163]	40-644
FAILURE CODE [CA4164]	40-645
FAILURE CODE [CA4165]	40-647
FAILURE CODE [CA4166]	40-649
FAILURE CODE [CA4168]	40-650
FAILURE CODE [CA4169]	40-653
FAILURE CODE [CA4171]	40-655
FAILURE CODE [CA4249]	40-658
FAILURE CODE [CA4251]	40-660
FAILURE CODE [CA4259]	40-662
FAILURE CODE [CA4261]	40-665
FAILURE CODE [CA4277]	40-668
FAILURE CODE [CA4281]	40-671
FAILURE CODE [CA4459]	40-674
FAILURE CODE [CA4461]	40-677
FAILURE CODE [CA4658]	40-680
FAILURE CODE [CA4731]	40-684
FAILURE CODE [CA4732]	40-685
FAILURE CODE [CA4739]	40-686
FAILURE CODE [CA4768]	40-687
FAILURE CODE [CA4769]	40-689
FAILURE CODE [CA4842]	40-692
FAILURE CODE [CA4952]	40-695
FAILURE CODE [CA5115]	40-697
FAILURE CODE [CA5179]	40-700
FAILURE CODE [CA5181]	40-702
FAILURE CODE [CA5383]	40-704
FAILURE CODE [D110KB]	40-706
FAILURE CODE [D19JKZ]	40-708
FAILURE CODE [D811MC]	40-711
FAILURE CODE [D862KA]	40-712
FAILURE CODE [D8ALKA]	40-713
FAILURE CODE [D8ALKB]	40-715
FAILURE CODE [D8AQKR]	40-717
FAILURE CODE [DA20MC]	40-719
FAILURE CODE [DA22KK]	40-720
FAILURE CODE [DA25KP]	40-723

FAILURE CODE [DA29KQ]	40-726
FAILURE CODE [DA2LKA]	40-728
FAILURE CODE [DA2LKB]	40-730
FAILURE CODE [DA2QKR]	40-732
FAILURE CODE [DA2RKR]	40-735
FAILURE CODE [DAF0MB]	40-736
FAILURE CODE [DAF0MC]	40-737
FAILURE CODE [DAF8KB]	40-738
FAILURE CODE [DAF9KQ]	40-740
FAILURE CODE [DAFGMC]	40-741
FAILURE CODE [DAFLKA]	40-742
FAILURE CODE [DAFLKB]	40-744
FAILURE CODE [DAFQKR]	40-746
FAILURE CODE [DAZ9KQ]	40-747
FAILURE CODE [DAZQKR]	40-748
FAILURE CODE [DB2QKR]	40-753
FAILURE CODE [DB2RKR]	40-758
FAILURE CODE [DDNRKA]	40-763
FAILURE CODE [DDNRKY]	40-765
FAILURE CODE [DDNS00]	40-767
FAILURE CODE [DGH2KA]	40-769
FAILURE CODE [DGH2KB]	40-771
FAILURE CODE [DHA4KA]	40-773
FAILURE CODE [DHAAMA]	40-775
FAILURE CODE [DHACMA]	40-777
FAILURE CODE [DHPAMA]	40-779
FAILURE CODE [DHPBMA]	40-782
FAILURE CODE [DHS3MA]	40-785
FAILURE CODE [DHS4MA]	40-788
FAILURE CODE [DHS8MA]	40-791
FAILURE CODE [DHS9MA]	40-794
FAILURE CODE [DHSAMA]	40-797
FAILURE CODE [DHSBMA]	40-800
FAILURE CODE [DHSCMA]	40-803
FAILURE CODE [DHSDMA]	40-806
FAILURE CODE [DHSFMA]	40-809
FAILURE CODE [DHSGMA]	40-812
FAILURE CODE [DHSJMA]	40-815
FAILURE CODE [DHSJMA]	40-818
FAILURE CODE [DKR0MA]	40-821
FAILURE CODE [DKR1MA]	40-824
FAILURE CODE [DKULKA]	40-827
FAILURE CODE [DKULKB]	40-829
FAILURE CODE [DKULKY]	40-831
FAILURE CODE [DLM5KA]	40-833
FAILURE CODE [DLM5MB]	40-835
FAILURE CODE [DR21KX]	40-837
FAILURE CODE [DR31KX]	40-839
FAILURE CODE [DV20KB]	40-841
FAILURE CODE [DW43KA]	40-843
FAILURE CODE [DW43KB]	40-845
FAILURE CODE [DW43KY]	40-847
FAILURE CODE [DW45KA]	40-849
FAILURE CODE [DW45KB]	40-852
FAILURE CODE [DW45KY]	40-855
FAILURE CODE [DW4CKY]	40-857
FAILURE CODE [DW91KA]	40-859
FAILURE CODE [DW91KB]	40-861

FAILURE CODE [DW91KY] .....	40-863
FAILURE CODE [DWA2KA] .....	40-865
FAILURE CODE [DWA2KB] .....	40-867
FAILURE CODE [DWA2KY] .....	40-869
FAILURE CODE [DWK0KA] .....	40-871
FAILURE CODE [DWK0KB] .....	40-873
FAILURE CODE [DWK0KY] .....	40-875
FAILURE CODE [DWK2KA] .....	40-877
FAILURE CODE [DWK2KB] .....	40-879
FAILURE CODE [DWK2KY] .....	40-881
FAILURE CODE [DWK8KA] .....	40-883
FAILURE CODE [DWK8KB] .....	40-885
FAILURE CODE [DWK8KY] .....	40-887
FAILURE CODE [DWN5KA] .....	40-889
FAILURE CODE [DWN5KB] .....	40-891
FAILURE CODE [DWN5KY] .....	40-893
FAILURE CODE [DXA8KA] .....	40-895
FAILURE CODE [DXA8KB] .....	40-897
FAILURE CODE [DXA9KA] .....	40-899
FAILURE CODE [DXA9KB] .....	40-901
FAILURE CODE [DXE0KA] .....	40-903
FAILURE CODE [DXE0KB] .....	40-904
FAILURE CODE [DXE4KA] .....	40-906
FAILURE CODE [DXE4KB] .....	40-908
FAILURE CODE [DXE4KY] .....	40-910
FAILURE CODE [DXE5KA] .....	40-912
FAILURE CODE [DXE5KB] .....	40-914
FAILURE CODE [DXE6KA] .....	40-916
FAILURE CODE [DXE6KB] .....	40-918
FAILURE CODE [DXE7KA] .....	40-920
FAILURE CODE [DXE7KB] .....	40-922
FAILURE CODE [DXE7KY] .....	40-924
FAILURE CODE [DXE8KA] .....	40-926
FAILURE CODE [DXE8KB] .....	40-928
FAILURE CODE [DXE8KY] .....	40-930
FAILURE CODE [DXE9KA] .....	40-932
FAILURE CODE [DXE9KB] .....	40-934
FAILURE CODE [DXE9KY] .....	40-936
FAILURE CODE [DXEAKA] .....	40-938
FAILURE CODE [DXEAKB] .....	40-940
FAILURE CODE [DXEAKY] .....	40-942
FAILURE CODE [DY20KA] .....	40-944
FAILURE CODE [DY20MA] .....	40-946
FAILURE CODE [DY2CKB] .....	40-948
FAILURE CODE [DY2DKB] .....	40-951
FAILURE CODE [DY2EKB] .....	40-953
TROUBLESHOOTING OF ELECTRICAL SYSTEM (E-MODE) .....	40-955
E-1 ENGINE DOES NOT START (ENGINE DOES NOT CRANK) .....	40-955
E-2 MANUAL PREHEATING SYSTEM DOES NOT WORK .....	40-961
E-3 AUTOMATIC PREHEATING SYSTEM DOES NOT WORK .....	40-964
E-4 WHILE PREHEATING IS WORKING, PREHEATING MONITOR DOES NOT LIGHT UP .....	40-966
E-5 WHEN STARTING SWITCH IS TURNED TO ON POSITION, MACHINE MONITOR DISPLAYS NOTHING .....	40-968
E-6 WHILE STARTING SWITCH IS TURNED TO ON POSITION (WITH ENGINE STOPPED), EN- GINE OIL LEVEL MONITOR LIGHTS UP IN YELLOW .....	40-971
E-7 WHILE STARTING SWITCH IS TURNED TO ON POSITION (WITH ENGINE STOPPED), RADIA- TOR COOLANT LEVEL MONITOR LIGHTS UP IN YELLOW .....	40-972

E-8 ENGINE COOLANT TEMPERATURE MONITOR LIGHTS UP IN WHITE WHILE ENGINE IS RUNNING .....	40-973
E-9 HYDRAULIC OIL TEMPERATURE MONITOR LIGHTS UP IN WHITE WHILE ENGINE IS RUNNING .....	40-974
E-10 AIR CLEANER CLOGGING MONITOR LIGHTS UP IN YELLOW WHILE ENGINE IS RUNNING... ..	40-975
E-11 CHARGE LEVEL MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING .....	40-976
E-12 FUEL LEVEL MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING .....	40-977
E-13 WATER SEPARATOR MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING .....	40-978
E-14 ENGINE COOLANT TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING .....	40-979
E-15 ENGINE OIL PRESSURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING ..	40-980
E-16 HYDRAULIC OIL TEMPERATURE MONITOR LIGHTS UP IN RED WHILE ENGINE IS RUNNING .....	40-981
E-17 FUEL GAUGE DISPLAY DOES NOT MOVE FROM MINIMUM OR MAXIMUM .....	40-982
E-18 DISPLAY OF FUEL GAUGE DIFFERS FROM ACTUAL FUEL LEVEL.....	40-984
E-19 ENGINE COOLANT TEMPERATURE GAUGE DISPLAY DOES NOT MOVE FROM MINIMUM OR MAXIMUM.....	40-985
E-20 DISPLAY OF ENGINE COOLANT TEMPERATURE GAUGE DIFFERS FROM ACTUAL COOLANT TEMPERATURE.....	40-986
E-21 HYDRAULIC OIL TEMPERATURE GAUGE DISPLAY DOES NOT MOVE FROM MINIMUM OR MAXIMUM.....	40-987
E-22 DISPLAY OF HYDRAULIC OIL TEMPERATURE GAUGE DIFFERS FROM ACTUAL OIL TEMPERATURE.....	40-989
E-23 SOME AREAS OF MACHINE MONITOR SCREEN ARE NOT DISPLAYED .....	40-990
E-24 FUNCTION SWITCH DOES NOT OPERATE .....	40-991
E-25 AUTOMATIC WARM-UP SYSTEM DOES NOT WORK (IN COLD WEATHER).....	40-992
E-26 WHEN AUTO-DECELERATOR SWITCH IS OPERATED, AUTO-DECELERATOR MONITOR DOES NOT LIGHT UP OR DOES NOT GO OFF .....	40-993
E-27 AUTO-DECELERATOR IS NOT OPERATED OR CANCELED WITH LEVER .....	40-994
E-28 WHEN WORKING MODE SWITCH IS OPERATED, WORKING MODE SELECTION SCREEN IS NOT DISPLAYED .....	40-995
E-29 WHEN WORKING MODE IS CHANGED, SETTING OF ENGINE AND HYDRAULIC PUMP IS NOT CHANGED.....	40-996
E-30 WHEN TRAVEL SPEED SWITCH IS OPERATED, TRAVEL SPEED MONITOR DOES NOT CHANGE.....	40-997
E-31 WHEN TRAVEL SPEED SELECTION IS CHANGED, ACTUAL TRAVEL SPEED DOES NOT CHANGE.....	40-998
E-32 ALARM BUZZER CANNOT BE CANCELED .....	40-1000
E-33 SERVICE METER IS NOT DISPLAYED, WHILE STARTING SWITCH IS IN OFF POSITION.....	40-1001
E-34 SERVICE MODE CANNOT BE SELECTED.....	40-1002
E-35 ALL OF WORK EQUIPMENTS, SWING, AND TRAVEL MECHANISM DO NOT MOVE ....	40-1003
E-36 ALL OF WORK EQUIPMENT, SWING, AND TRAVEL MECHANISM DO NOT LOCK.....	40-1006
E-37 WHEN SWING BRAKE CANCEL SWITCH IS SET TO CANCEL POSITION, MACHINE CANNOT SWING.....	40-1008
E-38 WHEN SWING BRAKE CANCEL SWITCH IS SET TO NORMAL POSITION, SWING HOLDING BRAKE DOES NOT OPERATE .....	40-1011
E-39 ONE-TOUCH POWER MAXIMIZING FUNCTION DOES NOT OPERATE PROPERLY, OR INDICATOR NOT DISPLAYED ON MONITOR .....	40-1013
E-40 ONE-TOUCH POWER MAXIMIZING FUNCTION IS NOT CANCELLED .....	40-1016
E-41 ALARM DOES NOT SOUND DURING TRAVEL .....	40-1017
E-42 ALARM DOES NOT STOP SOUNDING WHILE MACHINE IS STOPPED.....	40-1019
E-43 HORN DOES NOT SOUND.....	40-1020
E-44 HORN DOES NOT STOP SOUNDING.....	40-1023
E-45 WHEN WIPER SWITCH IS OPERATED, WIPER MONITOR DOES NOT LIGHT UP OR GO OFF .....	40-1025
E-46 WHEN WIPER SWITCH IS OPERATED, WINDSHIELD WIPER DOES NOT OPERATE ...	40-1026

E-47 WHEN WINDOW WASHER SWITCH IS OPERATED, WINDOW WASHER DOES NOT OPERATE .....	40-1028
E-48 BOOM RAISE INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION ... ..	40-1029
E-49 BOOM LOWER INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION. ....	40-1030
E-50 ARM OUT INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION.....	40-1031
E-51 ARM IN INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION	40-1032
E-52 BUCKET DUMP INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION .....	40-1033
E-53 BUCKET CURL INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION. ....	40-1034
E-54 SWING INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION.	40-1035
E-55 TRAVEL INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION	40-1036
E-56 SERVICE INDICATOR IS NOT DISPLAYED PROPERLY WITH MONITORING FUNCTION .....	40-1037
E-57 ATTACHMENT HYDRAULIC CIRCUIT CANNOT BE CHANGED.....	40-1039
E-58 KOMTRAX SYSTEM DOES NOT OPERATE NORMALLY .....	40-1040
TRUBLESHOOTING FOR HYDRAULIC AND MECHANICAL SYSTEMS (H MODE) .....	40-1041
INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (H MODE).....	40-1041
SYSTEM CHART OF HYDRAULIC AND MECHANICAL SYSTEMS .....	40-1042
FAILURE MODE AND CAUSE TABLE .....	40-1044
H-1 ALL WORK EQUIPMENT, SWING AND TRAVEL DO NOT WORK.....	40-1056
H-2 ALL WORK EQUIPMENT, SWING AND TRAVEL LACK SPEED AND POWER .....	40-1057
H-3 FINE CONTROL PERFORMANCE OR RESPONSE IS POOR.....	40-1060
H-4 UNUSUAL NOISE IS HEARD FROM AROUND HYDRAULIC PUMP .....	40-1061
H-5 ENGINE SPEED DROPS LARGELY OR ENGINE STOPS .....	40-1062
H-6 SPEED OR POWER OF BOOM IS LOW .....	40-1064
H-7 ARM SPEED OR POWER IS LOW .....	40-1068
H-8 BUCKET SPEED OR POWER IS LOW.....	40-1073
H-9 WORK EQUIPMENT DOES NOT MOVE IN SINGLE OPERATION .....	40-1076
H-10 HYDRAULIC DRIFT OF BOOM IS LARGE .....	40-1077
H-11 HYDRAULIC DRIFT OF ARM IS LARGE .....	40-1079
H-12 HYDRAULIC DRIFT OF BUCKET IS LARGE.....	40-1081
H-13 WHEN SINGLE WORK EQUIPMENT IS RELIEVED HYDRAULICALLY, OTHER WORK EQUIP- MENT MOVES .....	40-1082
H-14 TIME LAG OF WORK EQUIPMENT IS LARGE .....	40-1083
H-15 ONE-TOUCH POWER MAXIMIZING FUNCTION DOES NOT OPERATE .....	40-1084
H-16 ATTACHMENT CIRCUIT CANNOT BE CHANGED.....	40-1085
H-17 OIL FLOW IN ATTACHMENT CIRCUIT CANNOT BE CHANGED .....	40-1086
H-18 IN COMBINED OPERATION OF WORK EQUIPMENT, EQUIPMENT HAVING HEAVIER LOAD MOVES SLOWER.....	40-1087
H-19 IN COMBINED OPERATION OF SWING AND TRAVEL, TRAVEL SPEED DROPS LARGELY .....	40-1088
H-20 IN COMBINED OPERATION OF SWING AND BOOM RAISE, BOOM RISING SPEED IS LOW ... ..	40-1089
H-21 MACHINE DOES NOT TRAVEL STRAIGHT .....	40-1090
H-22 MACHINE IS NOT STEERED WELL OR STEERING POWER IS LOW.....	40-1092
H-23 TRAVEL SPEED IS LOW .....	40-1095
H-24 ONE OF TRACKS DOES NOT RUN .....	40-1097
H-25 TRAVEL SPEED DOES NOT CHANGE, OR TRAVEL SPEED IS TOO SLOW OR FAST ..	40-1098
H-26 UPPER STRUCTURE DOES NOT SWING BOTH TO THE RIGHT AND LEFT .....	40-1099
H-27 SWINGS ONLY IN ONE DIRECTION.....	40-1100
H-28 SWING ACCELERATION OR SWING SPEED IS LOW IN BOTH DIRECTIONS (RIGHT AND LEFT) .....	40-1101
H-29 SWING ACCELERATION PERFORMANCE IS POOR OR SWING SPEED IS SLOW IN ONLY ONE DIRECTION.....	40-1102

H-30 UPPER STRUCTURE OVERRUNS EXCESSIVELY WHEN IT STOPS SWINGING (BOTH RIGHT AND LEFT)..... 40-1103

H-31 UPPER STRUCTURE OVERRUNS EXCESSIVELY WHEN IT STOPS SWINGING (ONLY ONE DIRECTION EITHER RIGHT OR LEFT)..... 40-1104

H-32 SHOCK IS LARGE WHEN UPPER STRUCTURE STOPS SWINGING ..... 40-1105

H-33 LARGE UNUSUAL NOISE IS HEARD WHEN UPPER STRUCTURE STOPS SWINGING 40-1106

H-34 SWING DRIFT ON A SLOPE IS LARGE (WHILE SWING PARKING BRAKE IS APPLIED)40-1107

H-35 SWING DRIFT ON A SLOPE IS LARGE (WHILE SWING PARKING BRAKE IS RELEASED)..... 40-1108

H-36 FAN SPEED IS ABNORMAL (TOO HIGH OR LOW, OR STATIONARY) ..... 40-1109

H-37 UNUSUAL NOISE IS HEARD FROM AROUND FAN ..... 40-1110

TROUBLESHOOTING OF ENGINE (S-MODE) ..... 40-1111

INFORMATION MENTIONED IN TROUBLESHOOTING TABLE (S MODE)..... 40-1111

S-1 ENGINE DOES NOT CRANK WHEN STARTING SWITCH IS TURNED TO START POSITION..... 40-1112

S-2 ENGINE CRANKS BUT NO EXHAUST GAS COMES OUT ..... 40-1113

S-3 FUEL IS BEING INJECTED BUT ENGINE DOES NOT START (MISFIRING: ENGINE CRANKS BUT DOES NOT START) ..... 40-1114

S-4 ENGINE STARTABILITY IS POOR..... 40-1116

S-5 ENGINE DOES NOT PICK UP SMOOTHLY ..... 40-1118

S-6 ENGINE STOPS DURING OPERATION ..... 40-1120

S-7 ENGINE RUNS ROUGH OR IS UNSTABLE ..... 40-1122

S-8 ENGINE LACKS POWER..... 40-1123

S-9 KDPF GETS CLOGGED IN A SHORT TIME..... 40-1125

S-10 ENGINE OIL CONSUMPTION IS EXCESSIVE ..... 40-1127

S-11 OIL BECOMES CONTAMINATED QUICKLY ..... 40-1128

S-12 FUEL CONSUMPTION IS EXCESSIVE ..... 40-1129

S-13 OIL IS IN COOLANT (OR COOLANT SPURTS BACK OR COOLANT LEVEL GOES DOWN) ..... 40-1130

S-14 OIL PRESSURE DROPS ..... 40-1131

S-15 FUEL MIXES INTO ENGINE OIL..... 40-1133

S-16 WATER MIXES INTO ENGINE OIL (MILKY) ..... 40-1134

S-17 COOLANT TEMPERATURE RISES TOO HIGH (OVERHEATING)..... 40-1135

S-18 UNUSUAL NOISE IS HEARD..... 40-1136

S-19 VIBRATION IS EXCESSIVE..... 40-1137

S-20 AIR CANNOT BE BLED FROM FUEL CIRCUIT..... 40-1138

S-21 ACTIVE REGENERATION IS EXECUTED FREQUENTLY ..... 40-1139

S-22 ACTIVE REGENERATION TAKES TIME..... 40-1141

S-23 WHITE SMOKE IS EXHAUSTED DURING ACTIVE REGENERATION..... 40-1142

S-24 AdBlue/DEF CONSUMPTION IS EXCESSIVE..... 40-1143

S-25 THERE IS UNUSUAL SMELL (IRRITATING ODOR) ..... 40-1145

S-26 FOREIGN MATERIALS ENTER AdBlue/DEF (AdBlue/DEF INCREASES)..... 40-1146

50 DISASSEMBLY AND ASSEMBLY ..... 50-1

CONTENTS ..... 50-2

ABBREVIATION LIST ..... 50-7

RELATED INFORMATION ON DISASSEMBLY AND ASSEMBLY ..... 50-12

HOW TO READ THIS MANUAL..... 50-12

COATING MATERIALS LIST..... 50-14

SPECIAL TOOLS LIST ..... 50-19

SKETCHES OF SPECIAL TOOLS ..... 50-31

ENGINE AND COOLING SYSTEM..... 50-37

REMOVE AND INSTALL SUPPLY PUMP ASSEMBLY ..... 50-37

REMOVE AND INSTALL INJECTOR ASSEMBLY ..... 50-43

REMOVE AND INSTALL CYLINDER HEAD ASSEMBLY ..... 50-56

REMOVE AND INSTALL EGR VALVE ASSEMBLY..... 50-82

REMOVE AND INSTALL EGR COOLER ASSEMBLY..... 50-85

REMOVE AND INSTALL STARTER ASSEMBLY..... 50-94

REMOVE AND INSTALL ALTERNATOR BELT ..... 50-98



REMOVE AND INSTALL RADIATOR ASSEMBLY .....	50-102
REMOVE AND INSTALL HYDRAULIC OIL COOLER ASSEMBLY .....	50-107
REMOVE AND INSTALL AFTERCOOLER ASSEMBLY .....	50-113
REMOVE AND INSTALL FAN CLUTCH ASSEMBLY .....	50-117
REMOVE AND INSTALL FAN .....	50-125
REMOVE AND INSTALL ENGINE AND MAIN PUMP ASSEMBLY .....	50-126
REMOVE AND INSTALL ENGINE FRONT OIL SEAL .....	50-147
REMOVE AND INSTALL ENGINE REAR OIL SEAL .....	50-154
REMOVE AND INSTALL FUEL COOLER ASSEMBLY .....	50-158
REMOVE AND INSTALL ENGINE HOOD ASSEMBLY .....	50-160
REMOVE AND INSTALL FUEL TANK ASSEMBLY .....	50-167
REMOVE AND INSTALL AdBlue/DEF TANK ASSEMBLY .....	50-175
REMOVE AND INSTALL AdBlue/DEF TANK SENSOR FLANGE ASSEMBLY .....	50-187
REMOVE AND INSTALL AdBlue/DEF TANK SENSOR .....	50-199
REMOVE AND INSTALL AdBlue/DEF TANK STRAINER .....	50-201
REMOVE AND INSTALL KDPF ASSEMBLY .....	50-202
DISASSEMBLE AND ASSEMBLE OF KDPF ASSEMBLY .....	50-206
REMOVE AND INSTALL SCR ASSEMBLY .....	50-215
REMOVE AND INSTALL KDPF, SCR ASSEMBLY .....	50-219
REMOVE AND INSTALL KDPF, SCR ASSEMBLY BRACKET .....	50-231
REMOVE AND INSTALL KCCV ASSEMBLY .....	50-247
REMOVE AND INSTALL AdBlue/DEF MIXING TUBE .....	50-254
REMOVE AND INSTALL AdBlue/DEF INJECTOR .....	50-266
REMOVE AND INSTALL AdBlue/DEF PUMP .....	50-272
REMOVE AND INSTALL AdBlue/DEF HOSE .....	50-278
REMOVE AND INSTALL AIR CLEANER ASSEMBLY .....	50-291
REMOVE AND INSTALL AIR CONDITIONER COMPRESSOR ASSEMBLY .....	50-294
REMOVE AND INSTALL AIR CONDITIONER CONDENSER ASSEMBLY .....	50-299
POWER TRAIN .....	50-301
REMOVE AND INSTALL TRAVEL MOTOR AND FINAL DRIVE ASSEMBLY .....	50-301
DISASSEMBLE AND ASSEMBLE FINAL DRIVE ASSEMBLY .....	50-304
REMOVE AND INSTALL SWING MOTOR AND SWING MACHINERY ASSEMBLY .....	50-317
DISASSEMBLE AND ASSEMBLE SWING MACHINERY ASSEMBLY .....	50-323
REMOVE AND INSTALL SWING CIRCLE ASSEMBLY .....	50-334
UNDERCARRIAGE AND FRAME .....	50-336
SEPARATION AND CONNECTION OF TRACK ASSEMBLY .....	50-336
REMOVE AND INSTALL SPROCKET .....	50-341
REMOVE AND INSTALL IDLER AND IDLER CUSHION ASSEMBLY .....	50-343
DISASSEMBLE AND ASSEMBLE IDLER ASSEMBLY .....	50-345
DISASSEMBLE AND ASSEMBLE OF IDLER CUSHION ASSEMBLY .....	50-350
DISASSEMBLE AND ASSEMBLE TRACK ROLLER ASSEMBLY .....	50-353
DISASSEMBLE AND ASSEMBLE CARRIER ROLLER ASSEMBLY .....	50-357
REMOVE AND INSTALL REVOLVING FRAME ASSEMBLY .....	50-361
REMOVE AND INSTALL COUNTERWEIGHT ASSEMBLY .....	50-366
HYDRAULIC SYSTEM .....	50-373
REMOVE AND INSTALL CENTER SWIVEL JOINT ASSEMBLY .....	50-373
DISASSEMBLE AND ASSEMBLE CENTER SWIVEL JOINT ASSEMBLY .....	50-378
REMOVE AND INSTALL HYDRAULIC TANK ASSEMBLY .....	50-381
REMOVE AND INSTALL MAIN PUMP ASSEMBLY .....	50-386
REMOVE AND INSTALL CONTROL VALVE ASSEMBLY .....	50-392
DISASSEMBLE AND ASSEMBLE CONTROL VALVE ASSEMBLY .....	50-407
DISASSEMBLE AND ASSEMBLE WORK EQUIPMENT PPC VALVE ASSEMBLY .....	50-412
DISASSEMBLE AND ASSEMBLE TRAVEL PPC VALVE ASSEMBLY .....	50-414
WORK EQUIPMENT .....	50-417
REMOVE AND INSTALL WORK EQUIPMENT ASSEMBLY .....	50-417
REMOVE AND INSTALL ANTI-DROP VALVE ASSEMBLY FOR BOOM .....	50-426
REMOVE AND INSTALL ANTI-DROP VALVE ASSEMBLY FOR ARM .....	50-429
DISASSEMBLE AND ASSEMBLE ANTI-DROP VALVE ASSEMBLY .....	50-432

DISASSEMBLE AND ASSEMBLE WORK EQUIPMENT CYLINDER ASSEMBLY .....	50-433
CAB AND ITS ATTACHMENTS .....	50-442
REMOVE AND INSTALL OPERATOR'S CAB ASSEMBLY .....	50-442
REMOVE AND INSTALL OPERATOR CAB GLASS (ADHERED GLASS) .....	50-455
REMOVE AND INSTALL FRONT WINDOW ASSEMBLY .....	50-467
REMOVE AND INSTALL FLOOR FRAME ASSEMBLY .....	50-476
REMOVE AND INSTALL AIR CONDITIONER UNIT ASSEMBLY .....	50-490
REMOVE AND INSTALL OPERATOR'S SEAT .....	50-501
REMOVE AND INSTALL SEAT BELT .....	50-506
REMOVE AND INSTALL FRONT WIPER ASSEMBLY .....	50-508
ELECTRICAL SYSTEM .....	50-521
REMOVE AND INSTALL ENGINE CONTROLLER ASSEMBLY .....	50-521
REMOVE AND INSTALL PUMP CONTROLLER ASSEMBLY .....	50-524
REMOVE AND INSTALL MACHINE MONITOR ASSEMBLY .....	50-533
REMOVE AND INSTALL PUMP SWASH PLATE SENSOR .....	50-540
REMOVE AND INSTALL MASS AIR FLOW AND TEMPERATURE SENSOR .....	50-542
REMOVE AND INSTALL KCCV CRANKCASE PRESSURE SENSOR .....	50-544
REMOVE AND INSTALL SCR TEMPERATURE SENSOR .....	50-546
REMOVE AND INSTALL KOMTRAX TERMINAL ASSEMBLY .....	50-550
60 MAINTENANCE STANDARD .....	60-1
CONTENTS .....	60-2
ABBREVIATION LIST .....	60-3
ENGINE AND COOLING SYSTEM .....	60-8
MAINTENANCE STANDARD OF ENGINE MOUNT .....	60-8
MAINTENANCE STANDARD OF COOLING SYSTEM .....	60-9
POWER TRAIN .....	60-11
MAINTENANCE STANDARD OF SWING CIRCLE .....	60-11
MAINTENANCE STANDARD OF SWING MACHINERY .....	60-12
MAINTENANCE STANDARD OF FINAL DRIVE .....	60-14
MAINTENANCE STANDARD OF SPROCKET .....	60-16
MAINTENANCE STANDARD OF SPROCKET TOOTH PROFILE FULL-SCALE DRAWING .....	60-17
UNDERCARRIAGE AND FRAME .....	60-19
MAINTENANCE STANDARD OF TRACK FRAME AND IDLER CUSHION .....	60-19
MAINTENANCE STANDARD OF IDLER .....	60-21
MAINTENANCE STANDARD OF TRACK ROLLER .....	60-23
MAINTENANCE STANDARD OF CARRIER ROLLER .....	60-24
MAINTENANCE STANDARD OF TRACK SHOE .....	60-25
MAINTENANCE STANDARD OF TRIPLE SHOE .....	60-28
MAINTENANCE STANDARD OF SWAMP SHOE .....	60-29
MAINTENANCE STANDARD OF ROAD LINER .....	60-30
HYDRAULIC SYSTEM .....	60-31
MAINTENANCE STANDARD OF HYDRAULIC TANK .....	60-31
MAINTENANCE STANDARD OF MAIN PUMP .....	60-32
MAINTENANCE STANDARD OF LS-EPC VALVE .....	60-33
MAINTENANCE STANDARD OF PC-EPC VALVE .....	60-34
MAINTENANCE STANDARD OF SWING MOTOR .....	60-35
MAINTENANCE STANDARD OF TRAVEL MOTOR .....	60-38
MAINTENANCE STANDARD OF CONTROL VALVE .....	60-41
MAINTENANCE STANDARD OF ANTI-DROP VALVE FOR BOOM .....	60-51
MAINTENANCE STANDARD OF ANTI-DROP VALVE FOR ARM .....	60-53
MAINTENANCE STANDARD OF WORK EQUIPMENT AND SWING PPC VALVE .....	60-55
MAINTENANCE STANDARD OF TRAVEL PPC VALVE .....	60-58
MAINTENANCE STANDARD OF 1ST-LINE ATTACHMENT PPC VALVE (WITH EPC VALVE) .....	60-61
MAINTENANCE STANDARD OF 2ND-LINE ATTACHMENT PPC VALVE .....	60-64
MAINTENANCE STANDARD OF SOLENOID VALVE .....	60-66
MAINTENANCE STANDARD OF ATTACHMENT CIRCUIT SELECTOR VALVE (FOR HIGH PRES- SURE) .....	60-67

MAINTENANCE STANDARD OF ATTACHMENT CIRCUIT SELECTOR VALVE (FOR LOW PRES- SURE) .....	60-68
MAINTENANCE STANDARD OF CENTER SWIVEL JOINT .....	60-69
WORK EQUIPMENT .....	60-70
MAINTENANCE STANDARD OF WORK EQUIPMENT LINKAGE .....	60-70
MAINTENANCE STANDARD OF BOOM CYLINDER (LARGE DIAMETER PISTON) .....	60-79
MAINTENANCE STANDARD OF ARM CYLINDER .....	60-80
MAINTENANCE STANDARD OF BUCKET CYLINDER .....	60-81
80 APPENDIX .....	80-1
CONTENTS .....	80-2
ABBREVIATION LIST .....	80-4
AIR CONDITIONER SYSTEM .....	80-9
PRECAUTIONS FOR REFRIGERANT .....	80-9
AIR CONDITIONER COMPONENT .....	80-10
SPECIFICATIONS OF AIR CONDITIONER .....	80-12
CONFIGURATION AND FUNCTION OF REFRIGERATION CYCLE .....	80-13
OUTLINE OF REFRIGERATION CYCLE .....	80-14
COMPONENT PARTS OF AIR CONDITIONER SYSTEM .....	80-16
AIR CONDITIONER UNIT .....	80-16
COMPONENT PARTS OF AIR CONDITIONER UNIT .....	80-20
AIR CONDITIONER CONTROLLER .....	80-24
COMPRESSOR .....	80-25
CONDENSER .....	80-26
SENSORS FOR AIR CONDITIONER SYSTEM .....	80-28
EXPLANATION OF PROCEDURE FOR TESTING AND TROUBLESHOOTING OF AIR CONDITIONER .....	80-30
CIRCUIT DIAGRAM AND ARRANGEMENT OF CONNECTOR PINS FOR AIR CONDITIONER .....	80-32
AIR CONDITIONER SYSTEM DIAGRAM .....	80-34
INPUT AND OUTPUT SIGNALS OF AIR CONDITIONER CONTROLLER .....	80-35
INSTALLATION LOCATIONS OF AIR CONDITIONER PARTS AND ARRANGEMENT OF CONNECTORS ..	80-37
TESTING AIR LEAKAGE (DUCT) .....	80-41
METHOD FOR TESTING AIR LEAKAGE (DUCT) .....	80-41
TESTING AIR CONDITIONER USING SELF-DIAGNOSIS FUNCTION .....	80-43
HOW TO OPEN THE ELECTRICAL SYSTEM ABNORMALITY RECORD SCREEN IN SERVICE MODE OF THE MACHINE MONITOR .....	80-44
TEST VENT (MODE) CHANGEOVER .....	80-45
METHOD FOR TESTING VENT (MODE) CHANGEOVER .....	80-45
TESTING FRESH/RECIRC AIR CHANGEOVER .....	80-47
METHOD FOR TESTING FRESH/RECIRC AIR CHANGEOVER .....	80-47
TEST SUNLIGHT SENSOR .....	80-48
METHOD FOR TESTING SUNLIGHT SENSOR .....	80-48
TEST (DUAL) PRESSURE SWITCH FOR REFRIGERANT .....	80-49
METHOD FOR TESTING (DUAL) PRESSURE SWITCH FOR REFRIGERANT .....	80-49
TEST RELAYS .....	80-50
METHOD FOR TESTING RELAYS .....	80-50
AIR CONDITIONER TROUBLESHOOTING CHART 1 .....	80-51
AIR CONDITIONER TROUBLESHOOTING CHART 2 .....	80-52
INFORMATION DESCRIBED IN TROUBLESHOOTING TABLE .....	80-55
FAILURE CODE [879AKA] .....	80-57
FAILURE CODE [879AKB] .....	80-58
FAILURE CODE [879BKA] .....	80-59
FAILURE CODE [879BKB] .....	80-61
FAILURE CODE [879CKA] .....	80-63
FAILURE CODE [879CKB] .....	80-64
FAILURE CODE [879DKZ] .....	80-65
FAILURE CODE [879EMC] .....	80-67
FAILURE CODE [879FMC] .....	80-68

FAILURE CODE [879GKX] .....	80-69
A-1 TROUBLESHOOTING FOR POWER SUPPLY SYSTEM (AIR CONDITIONER DOES NOT OPERATE) .....	80-71
A-2 TROUBLESHOOTING FOR COMPRESSOR AND REFRIGERANT SYSTEM (AIR IS NOT COOLED) .....	80-73
A-3 TROUBLESHOOTING FOR BLOWER MOTOR SYSTEM (NO AIR COMES OUT OR AIR FLOW IS ABNORMAL) .....	80-76
A-4 TROUBLESHOOTING FOR FRESH/RECIRC AIR CHANGEOVER .....	80-78
TROUBLESHOOTING USING GAUGE PRESSURE .....	80-80
CONNECTION OF SERVICE TOOL .....	80-83
METHOD FOR CONNECTING SERVICE TOOL .....	80-83
PRECAUTIONS FOR DISCONNECTING AND CONNECTING HOSES AND TUBES IN AIR CONDITIONER PIPINGS .....	80-85
HANDLE COMPRESSOR OIL .....	80-87
METHOD FOR REPLACING DESICCANT .....	80-89
90 CIRCUIT DIAGRAMS .....	90-1
CONTENTS .....	90-2
ABBREVIATION LIST .....	90-3
HYDRAULIC CIRCUIT DIAGRAM .....	90-8
SYMBOLS USED IN HYDRAULIC CIRCUIT DIAGRAM .....	90-8
HYDRAULIC CIRCUIT DIAGRAM .....	90-13
ELECTRICAL CIRCUIT DIAGRAM .....	90-15
SYMBOLS USED IN ELECTRICAL CIRCUIT DIAGRAM .....	90-15
ELECTRICAL CIRCUIT DIAGRAM (1/7) .....	90-19
ELECTRICAL CIRCUIT DIAGRAM (2/7) .....	90-21
ELECTRICAL CIRCUIT DIAGRAM (3/7) .....	90-23
ELECTRICAL CIRCUIT DIAGRAM (4/7) .....	90-25
ELECTRICAL CIRCUIT DIAGRAM (5/7) .....	90-27
ELECTRICAL CIRCUIT DIAGRAM (6/7) .....	90-29
ELECTRICAL CIRCUIT DIAGRAM (7/7) .....	90-31
INDEX .....	1

